




Setting up Your Insight™ Lawn Mower

If you have questions or
www.lawn-boy.com or call toll
1-866-216-6031 (Canada)

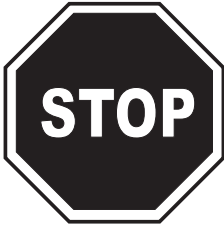

problems, contact us at
free 1-866-216-6032 (US) or
before returning this product.

Important: Thoroughly read your **Operator's Manual** for information on how to start, operate, maintain, and store your mower safely and properly. **This guide is not a substitute for the Operator's Manual.**

1 Remove the Mower from the Box

Remove the inserts, grass bag, side discharge chute, and bottle of oil from the box; cut the back corners of the box; and roll out the mower. Also, remove and discard the **protective plastic sheet** that covers the engine.


2 Unfold the Handle

Unfold the handle as illustrated below for your model:

Caution: Do not bend or crimp the cables.

Models 10684 and 10685:

A.

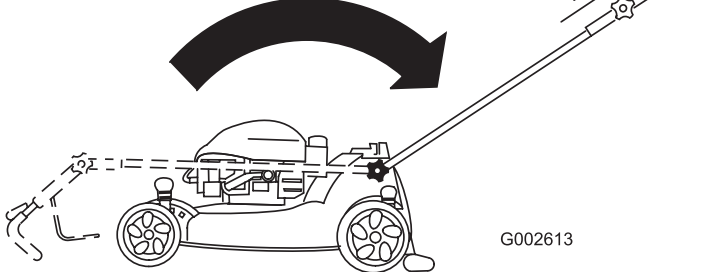


B. Tighten the handle knobs.


Note: Model 10684 has 3 knobs and 10685 has 1 knob.

Model 10682:

A.

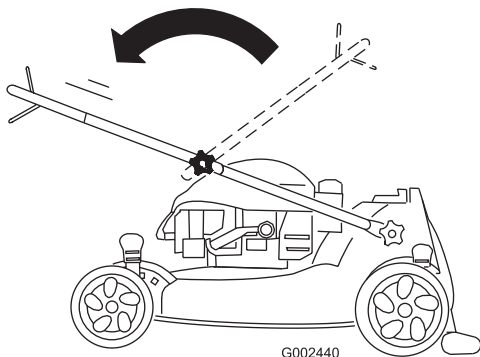

B.


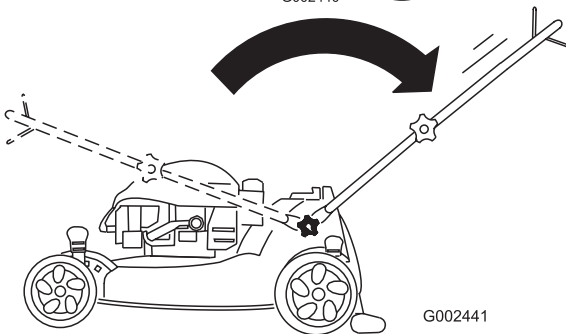


C. Tighten the 4 handle knobs.

3 Fill the Engine with Oil

Your mower does not come with oil in the engine, but it does come with a bottle of oil.

Remove the dipstick. **Slowly** pour oil into the oil fill tube until the oil level reaches the **Full** line on the dipstick. **Do not overfill.**

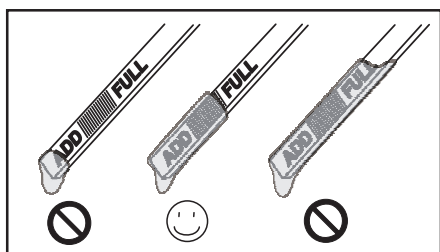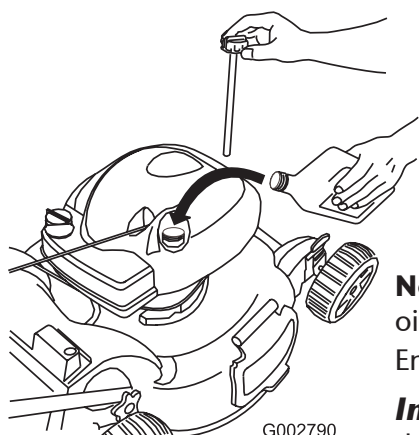


Note: If you overfill the engine, pour some oil out of it as directed in Changing the Engine Oil in the *Operator's Manual*.

Important: Change the engine oil after the first 2 operating hours. Refer to the *Operator's Manual*.

5 Adjust the Cutting Height

Adjust the cutting height as desired. Set all four wheels to the same height.

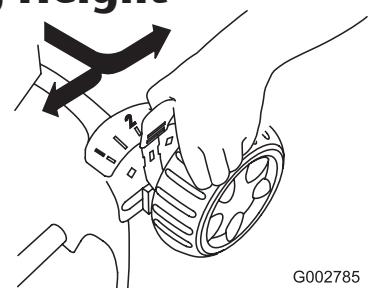

6 Fill the Fuel Tank

Fill the fuel tank with fresh, unleaded regular gasoline. Leave 1/2 inch (1.25 cm) of space between the fuel and the top of the tank. Refer to the *Operator's Manual* for detailed instructions on filling the fuel tank and starting the engine.

Did You Know? Important Tips to Keep You Safe

- **Always** assume that when **the engine is running, the blade is spinning**. Stop the engine and wait for all moving parts to stop before approaching the mower housing for **any reason**.

- When **unfolding the handle**, do not bend or crimp the cables. Crimped cables could cause the controls to operate improperly.
- Gasoline is **extremely flammable and explosive**. Do not handle gasoline when smoking or around any source of flame or sparks. Fill the tank with the mower on the ground to avoid a static spark.


- **Read and follow the directions** in the *Operator's Manual* **before** using this product. It contains valuable information for keeping you and others safe.

4 Install the Mulch Plug or Grass Bag

You must correctly install the mulch plug (for mulching or side-discharging) or grass bag (for bagging) or **the engine will not start**.


The mower has a safety switch, located at the bottom of a channel on the top, right rear of the mower, that prevents the mower from operating without a mulch plug or grass bag. This prevents the mower from throwing debris at the operator through the rear chute.

For the switch to detect the presence of the mulch plug, the top of the mulch plug lever must **lie fully** in the **bottom of the channel** and the bottom of the lever must **latch securely** in the **lever retaining clip** at the bottom of the mower.

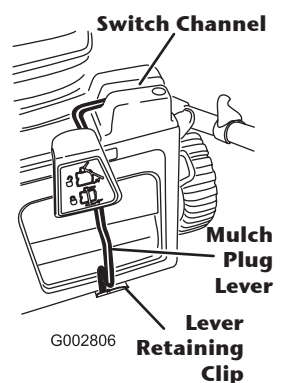


Install the mulch plug as described below (for instructions on installing the grass bag, refer to your *Operator's Manual*):


A. Insert the mulch plug into the mower, if it isn't already installed.

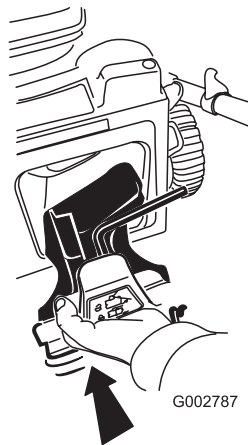

B. Swing the lever into the switch channel and lever retainer.

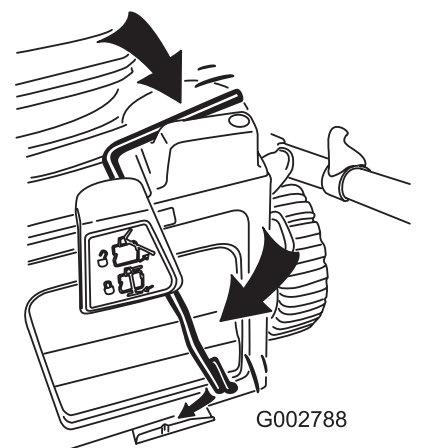

C. Ensure that the lever snaps snugly into place in both the switch channel and lever retainer.

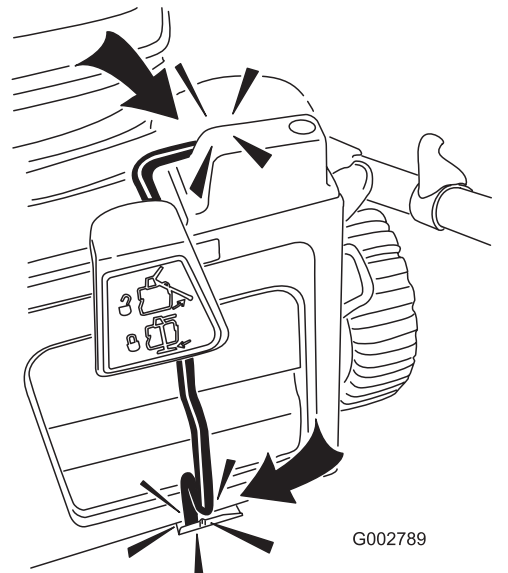

If they do not, your mower will not start!