

LAWN-BOY®

21" GOLD SERIES WALK-BEHIND MOWER

MODEL NO. 10545-4900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly	3	Carburetor Assembly	10
Housing Assembly	4	Electric Motor Assembly	11
Gear Case & Wheel Assembly	5	Gear Case Assembly	12
Engine, Fuel Tank & Blade Assembly	6	Lower Handle Assembly	13
Starter Assembly	7	Upper Handle Assembly	14
Flywheel & Wire Harness Assembly	8	Numeric Parts Index	15-16
Crankshaft & Cylinder Assembly	9		

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Shredder Kit	Model No. 89860

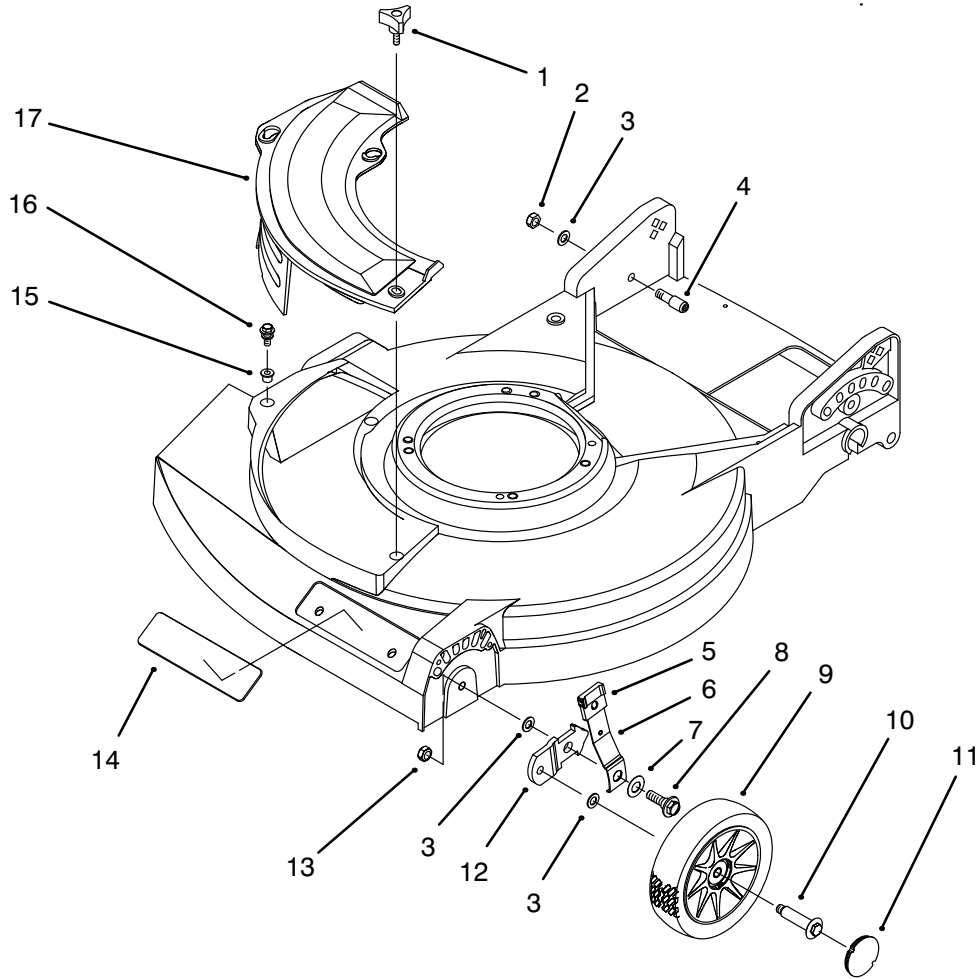


C-1917

MULCH PLATE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	614682	Knob – Cover Plate	1
2	610358	Nut – Lock	2
3	40-1940	Washer	6
4	92-9673	Bolt – Shoulder	2
5	92-1008	Knob – Height Adjust	4
6	92-1006	Spring Arm Ass’y – Front	2
7	3290-413	Washer – Belleville	2
8	92-4856	Bolt – Shoulder	2
9	684776	Wheel & Tire Assembly 6”	2

Ref. No.	Part No.	Description	No. Used
10	92-1099	Bolt – Shoulder	2
11	92-1604	Cap – Hub	4
12	614637	Bracket – Wheel Height Adj.	2
13	3296-39	Nut – Lock	2
14	614701	Housing – Applique	1
15	604604	Grommet	3
16	614677	Screw – Sems Thr’d Form.	2
17	92-8630	Plate – Mulch	1

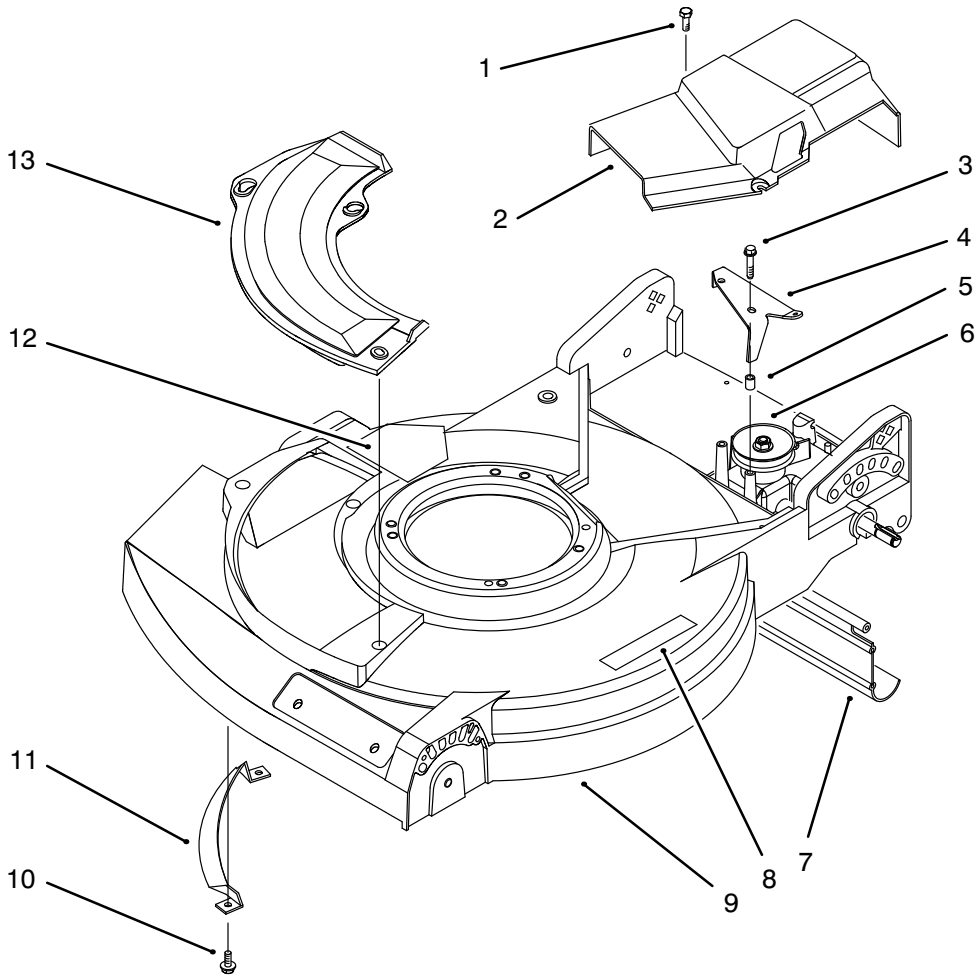


C-1918

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	926641	Screw – Hex Washer Hd. Thread Forming	2
2	92-8853	Cover – Transmission	1
3	92-7748	Screw	2
4	92-7699	Bracket – Actuator	1
5	256-251	Bushing – Spacer	2
6	92-7869	Gear Case Assembly	1

Ref. No.	Part No.	Description	No. Used
7	92-7736	Shield – Trailing	1
8	71-1280	Decal – Warning	1
9	16-5779	Housing – 21"	1
10	46-6811	Screw – Hex Washer Hd.	2
11	608175	Bar – Toe	1
12	39-5770	Decal – Danger	1
13	607560	Plate – Cover	1

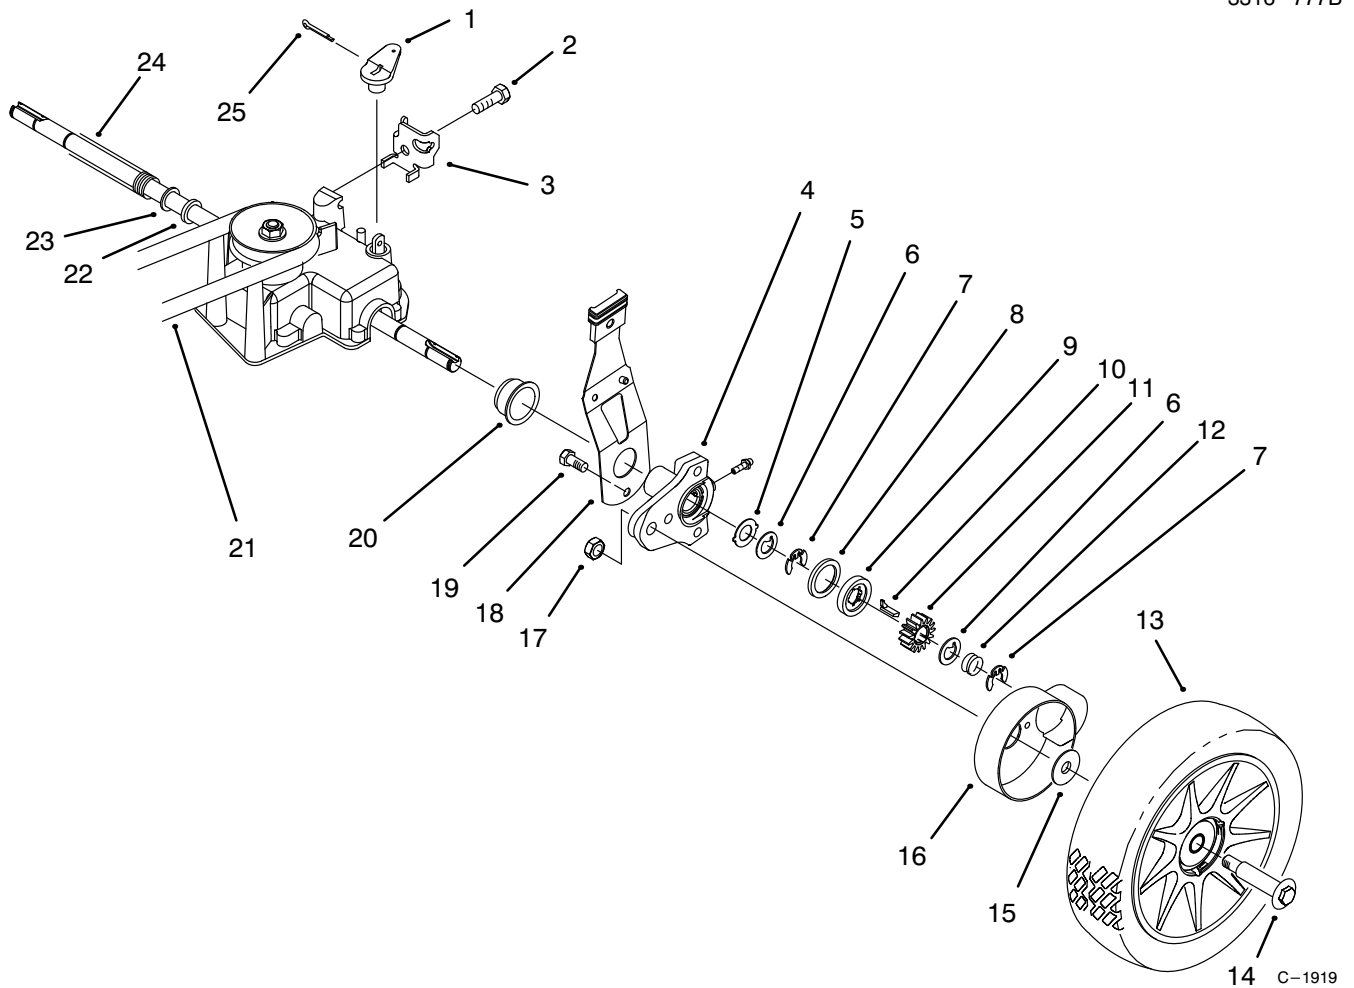


GEAR CASE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	60-8821	Lever - Shift	1
2	32144-70	Screw - Tapping	1
3	82-8780	Retainer - Cable	1
4	92-7746	Arm - Rear Height Adjust.	2
5	65-4730	Washer - Thrust	2
6	65-4740	Washer - Thrust Keyed	4
7	65-2720	Ring - Retaining	4
8	65-4710	Ring - Friction	2
9	65-4760	Washer	2
10	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
11	65-4750	Gear - Pinion	2
12	65-4720	Spring - Compression	2
13	92-1042	Wheel & Tire Assembly	2

Ref. No.	Part No.	Description	No. Used
14	92-1057	Bolt - Shoulder	2
15	614426	Washer - Stepped	2
16	614427	Cover - Wheel	2
17	610358	Nut - Lock	2
18	92-6540	Spring Arm Assembly - L.H.	1
*	92-6539	Spring Arm Assembly - R.H.	1
19	32144-85	Screw - Hex Hd Tapping	2
20	92-6535	Cap - End	2
21	92-1043	V-Belt	1
22	605255	Washer - Flat	1
23	303259	Washer	1
24	24-7920	Cover - Drive Shaft	1
25	3272-10	Pin - Cotter	1


*Not Illustrated

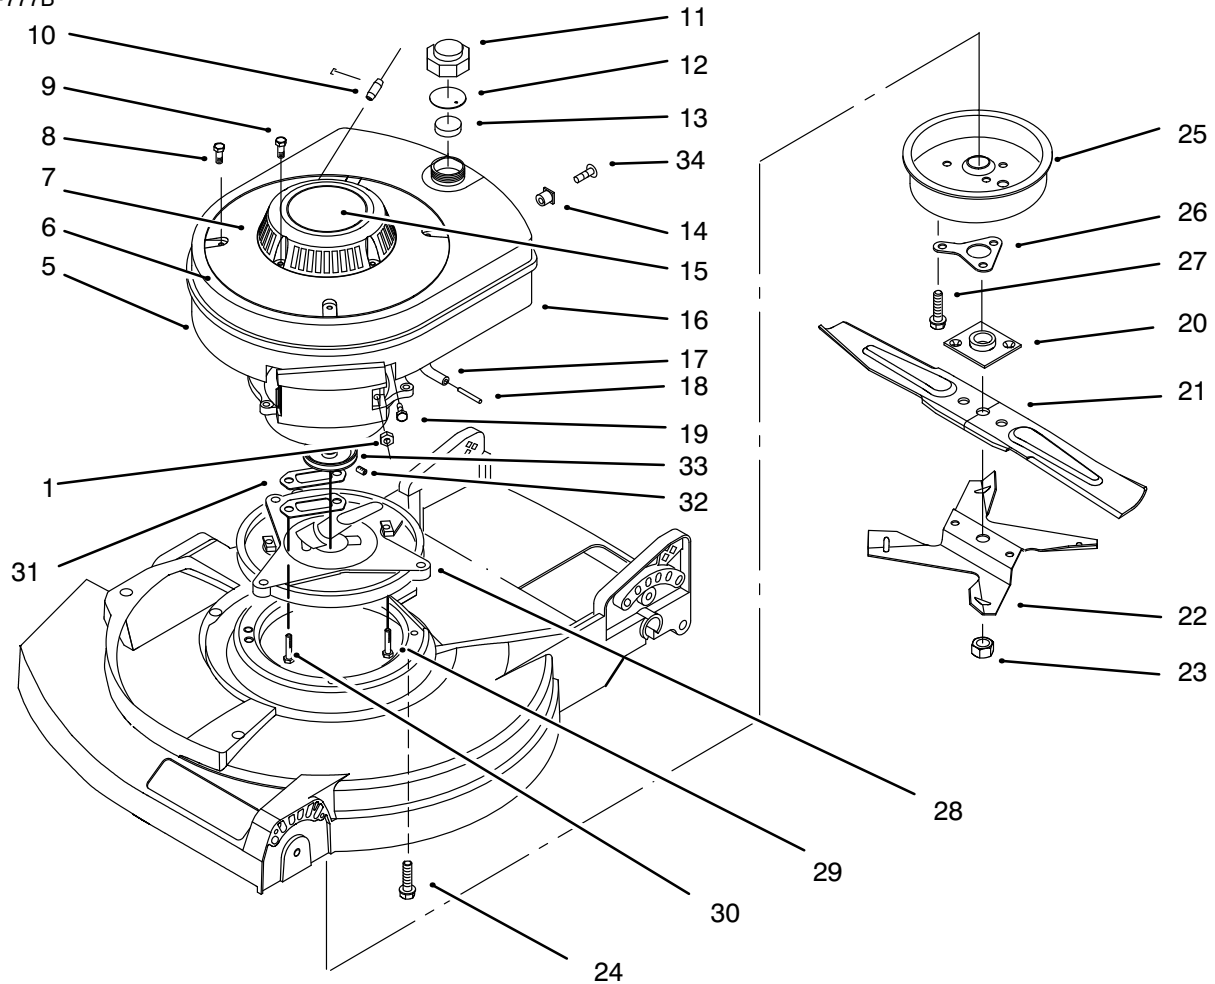

ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	306531	Nut	1
5	16-5539	Shroud & Tank Assembly	1
6	684301	Base - Starter	1
7	683896	Starter Assembly	1
8	611395	Screw - Self Tapping	4
9	612428	Screw	4
10	47-2480	Stop - Rope	1
11	611327	Cap - Fuel	1
12	607213	Gasket - Fuel Cap	1
13	609150	Baffle Fuel Cap	1
14	605120	Grommet	1
15	92-9568	Decal - Recoil	1
16		Engine Assembly	1
17	612783	Line - Fuel	1
18	612974	Screen - Fuel Line	1
19	314576	Screw	1

Ref. No.	Part No.	Description	No. Used
20	677525	Plate & Collar Assembly	1
21	612543	Blade 21"	1
22	92-1630	Fan - Mulching	1
23	603164	Nut - Blade	1
24	92-1648	Screw - Engine	3
25	682876	Muffler Cover Assembly	1
26	609786	Support - Crankshaft	1
27	609471	Screw	3
28	93-6388	Plate - Muffler	1
29	613500	Screw	1
30	607601	Screw	3
31	93-1233	Gasket - Muffler	1
32	610345	Screw - Set	1
33	609976	Pulley	1
34	32144-53	Screw - Self Tapping	1

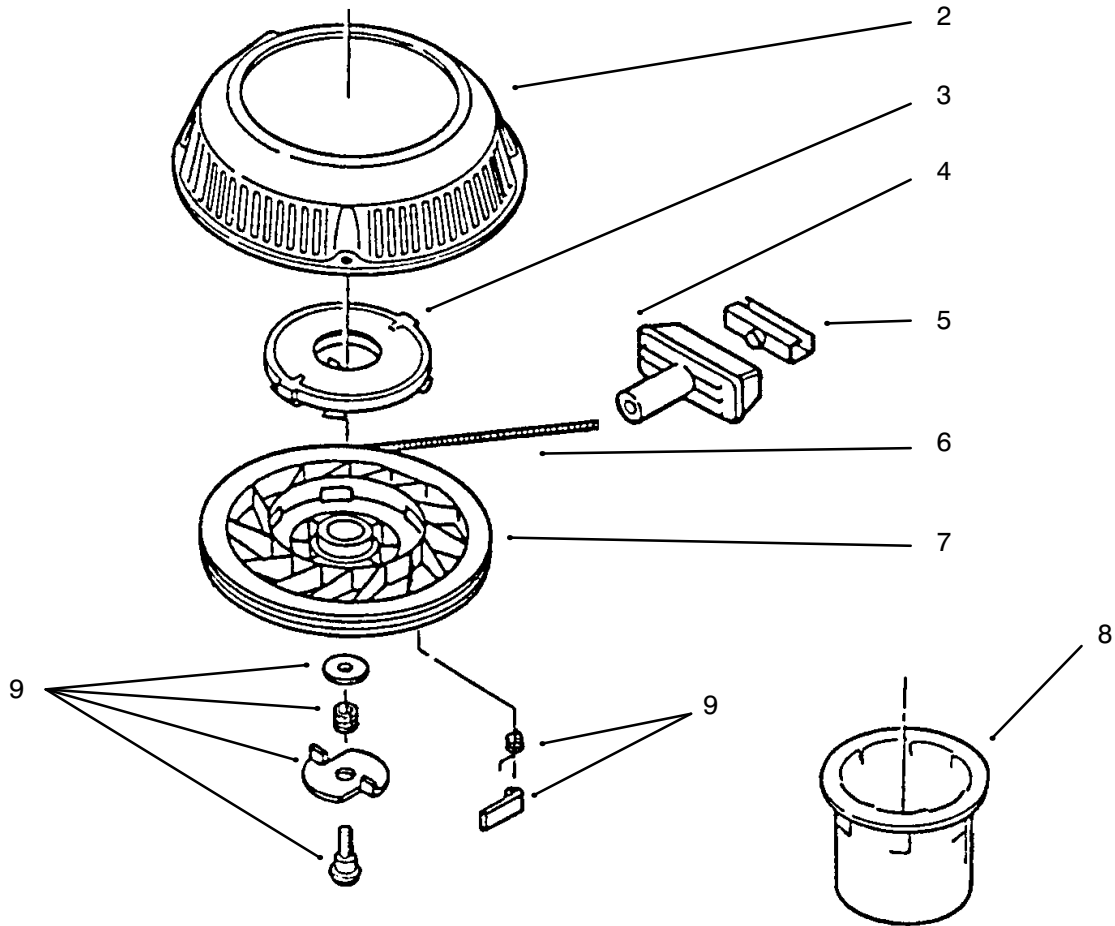


C-1923

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	684567	Starter Housing & Shaft	1
3	92-4935	Spring & Keeper	1
4	612825	Handle - Starter	1
5	612824	Clip - Rope	1
6	612432	Rope	1

Ref. No.	Part No.	Description	No. Used
7	612950	Pulley	1
8	612949	Hub - Starter	1
9	683899	Kit - Dog	1
*	684622	Starter Assembly (Incl. Ref. #2, 3, 6, 7, & 9)	1

*Not Illustrated

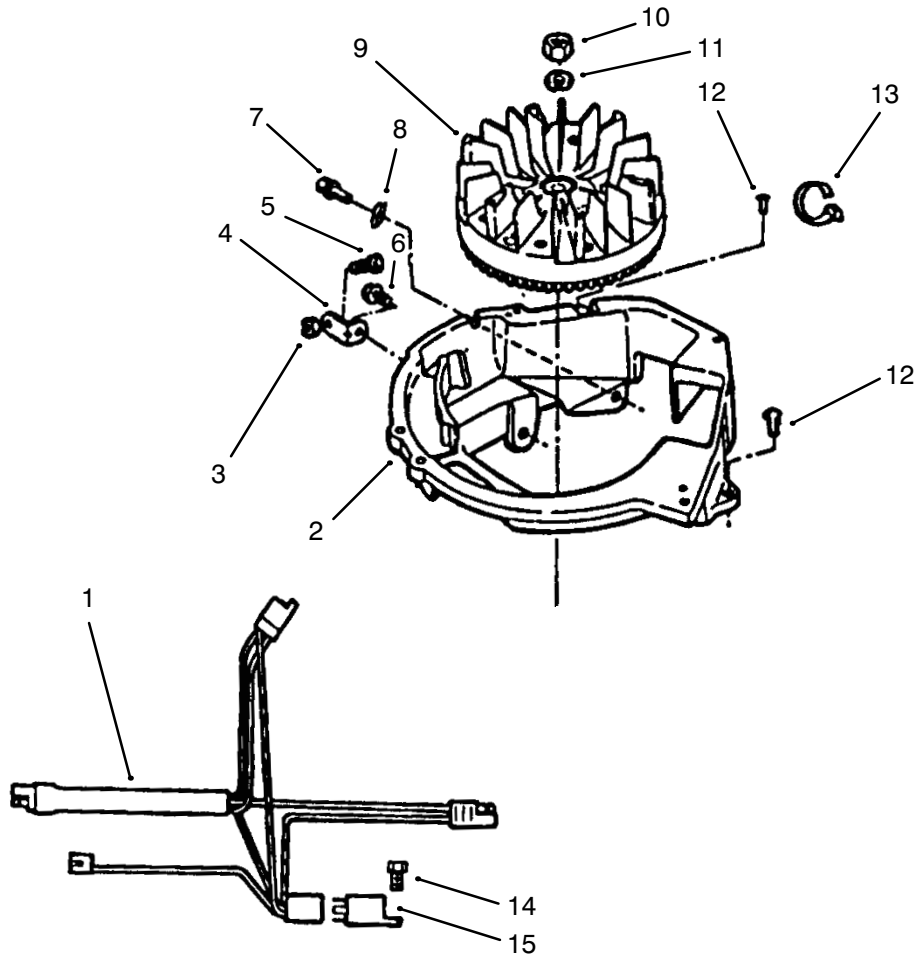


C-1925

FLYWHEEL & WIRE HARNESS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4300	Harness - Wire	1
2	611215	Base - Shroud	1
3	608311	Nut	1
4	611512	Brace - Alternator	1
5	603014	Bolt	1
6	614343	Screw	1
7	609947	Screw	3
8	611191	Clip - J	1

Ref. No.	Part No.	Description	No. Used
9	683580	Flywheel	1
10	130743	Nut - Flywheel	1
11	316959	Washer - Lock	1
12	609808	Screw	2
13	317893	Strap - Tie	1
14	606537	Screw	1
15	682776	Relay	1

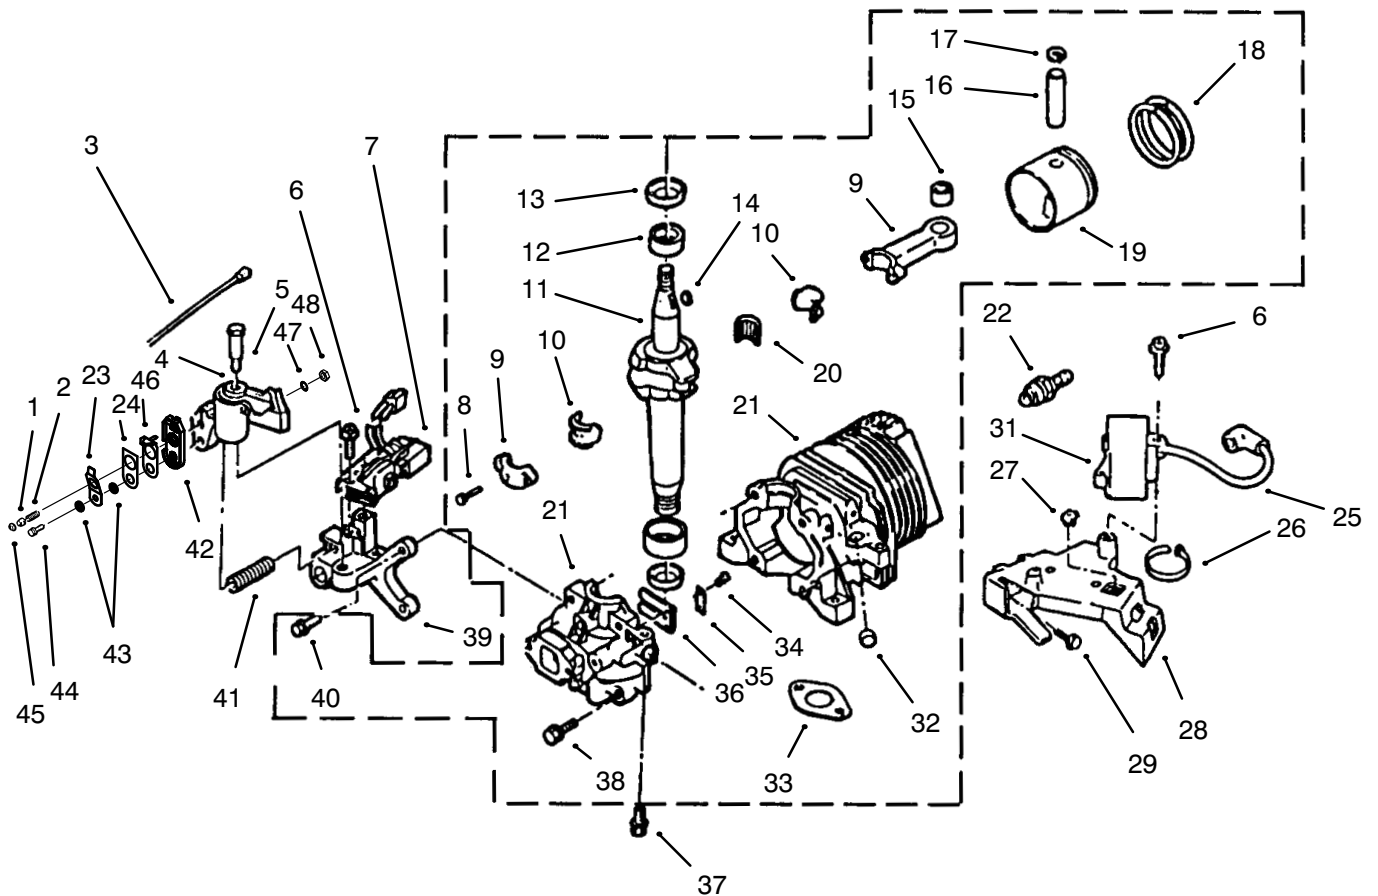


C-2172

CRANKSHAFT & CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	611509	Actuator – Brake Lever	1	24	612842	Shield	
2	611214	Spring – Cable Return	1	25	681678	Lead – High Tension	1
3	683821	Lead	1	26	614249	Strap – Tie	1
4	682683	Brake Assembly	1	27	605120	Grommet	1
5	613529	Bolt – Shoulder	1	28	613073	Bracket – C.D. Mounting	1
6	607526	Screw – C.D. Mounting	4	29	614343	Screw	3
7	683964	Alternator Assembly	1	31	683215	Module – C.D. Ignition & Lead	1
8	611393	Screw – Cap	2	32	609123	Plug	4
9	92-4921	Connecting Rod Assembly (Incl. Ref. #8, 10, 15, & 20)	1	33	93-1233	Gasket – Exhaust	1
10	677982	Liner – Split (1 pair)	1	34	612872	Screw – Reed To Cover	2
11	92-6375	Crankshaft	1	35	602587	Plate – Reed Hold Down	1
12	681830	Bearing – Upper Main	1	36	602588	Reed	1
13	611396	Seal – Upper Oil	1	37	611073	Screw – Set	1
14	607199	Key – Flywheel	1	38	613110	Screw – Cover to Crankcase	1
15	92-4927	Bearing Assembly	1	39	611337	Bracket	1
16	606608	Pin – Wrist	1	40	613233	Screw – Brake Mtg. Brkt.	2
17	303712	Ring – Retaining	2	41	611211	Spring – Brake	1
18	681737	Ring Set	1	42	93-4301	Case Assembly	1
19	92-4923	Piston & Ring Set (Incl. Ref. #16-18)	1	43	306407	Washer	2
20	683911	Needle Bearing Set	1	44	321-6	Screw – Hex Hd. Cap	1
21	683702	Cylinder & Crankshaft Cover Assembly (Incl. Ref. #32, 34-36, 38, & 40)	1	45	611213	Retainer	1
22	614009	Plug – Spark	1	46	612841	Plate – Contact	1
23	93-1239	Spring – Contact	1	47	3255-7	Washer – Ext. Tooth Lock	1
				48	306375	Nut	1
				*	92-6353	Short Block	1

*Not Illustrated

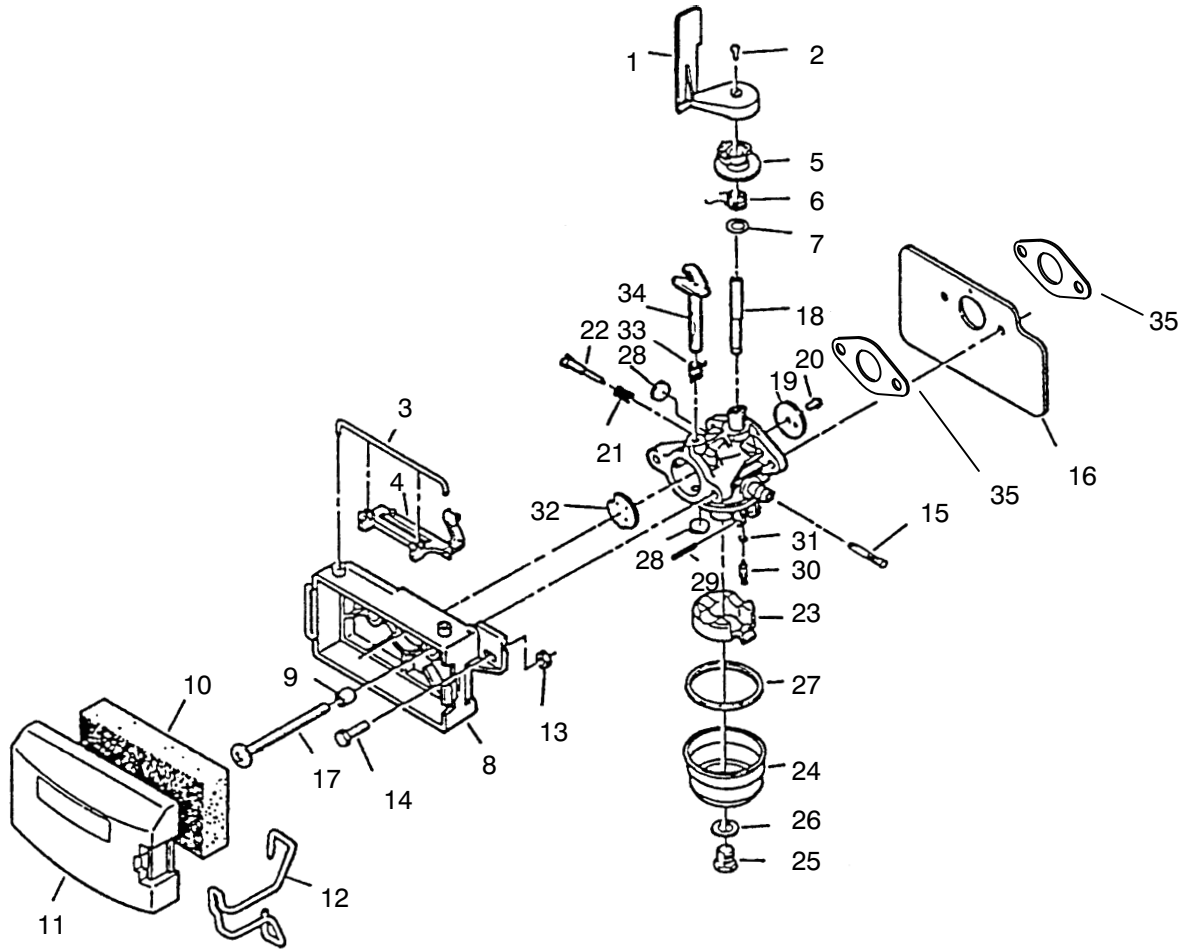


C-1340

CARBURETOR ASSEMBLY 684352

Ref. No.	Part No.	Description	No. Used
*	684352	Body – Carburetor (Incl. Ref. #18-34)	1
1	612505	Vane – Air	1
2	92-6392	Screw	1
3	610165	Retainer – Speed Control Lever	1
4	612502	Lever – Governor Control	1
5	612757	Collar	1
6	613142	Spring	1
7	308052	Washer	1
8	612504	Base – Air Filter	1
9	612503	Spacer – Filter Base	1
10	609493	Element – Air Filter	1
11	93-4303	Cover – Air Filter	1
12	610383	Retainer – Cover	1
13	328712	Nut	1
14	314576	Screw	1
15	612974	Filter – Fuel	1
16	93-1221	Shield – Heat	1
17	612507	Screw	2
*	612783	Line – Fuel	1
*	684286	Kit – Throttle (Incl. Ref. #18-20)	1
18		Shaft – Throttle	1
19		Vane – Throttle	1
20		Screw	1

Ref. No.	Part No.	Description	No. Used
*	684285	Kit – Idle Needle (Incl. Ref. #21-22)	1
21		Spring – Needle	1
22		Needle – Idle	1
23	683783	Kit – Float Assembly	1
*	683782	Kit – Bowl (Incl. Ref. #24-25)	1
24		Bowl – Fuel	1
25		Screw	1
*		Kit – Gasket	1
*	683778	Kit – Gasket (Incl. Ref. #26 & 27)	1
26		Gasket – Bowl Retainer	1
27		Gasket – Bowl	1
*	683777	Kit – Repair (Incl. Ref. #28-31)	1
28		Plug – Welch	2
29		Shaft – Float	1
30		Inlet – Needle Valve	1
31		Seat – Valve	1
*	683781	Kit – Choke (Incl. Ref. #32-34)	1
32		Valve – Choke	1
33		Spring – Return	1
34		Shaft – Choke	1
35	92-4948	Gasket Carburetor	2

*Not Illustrated

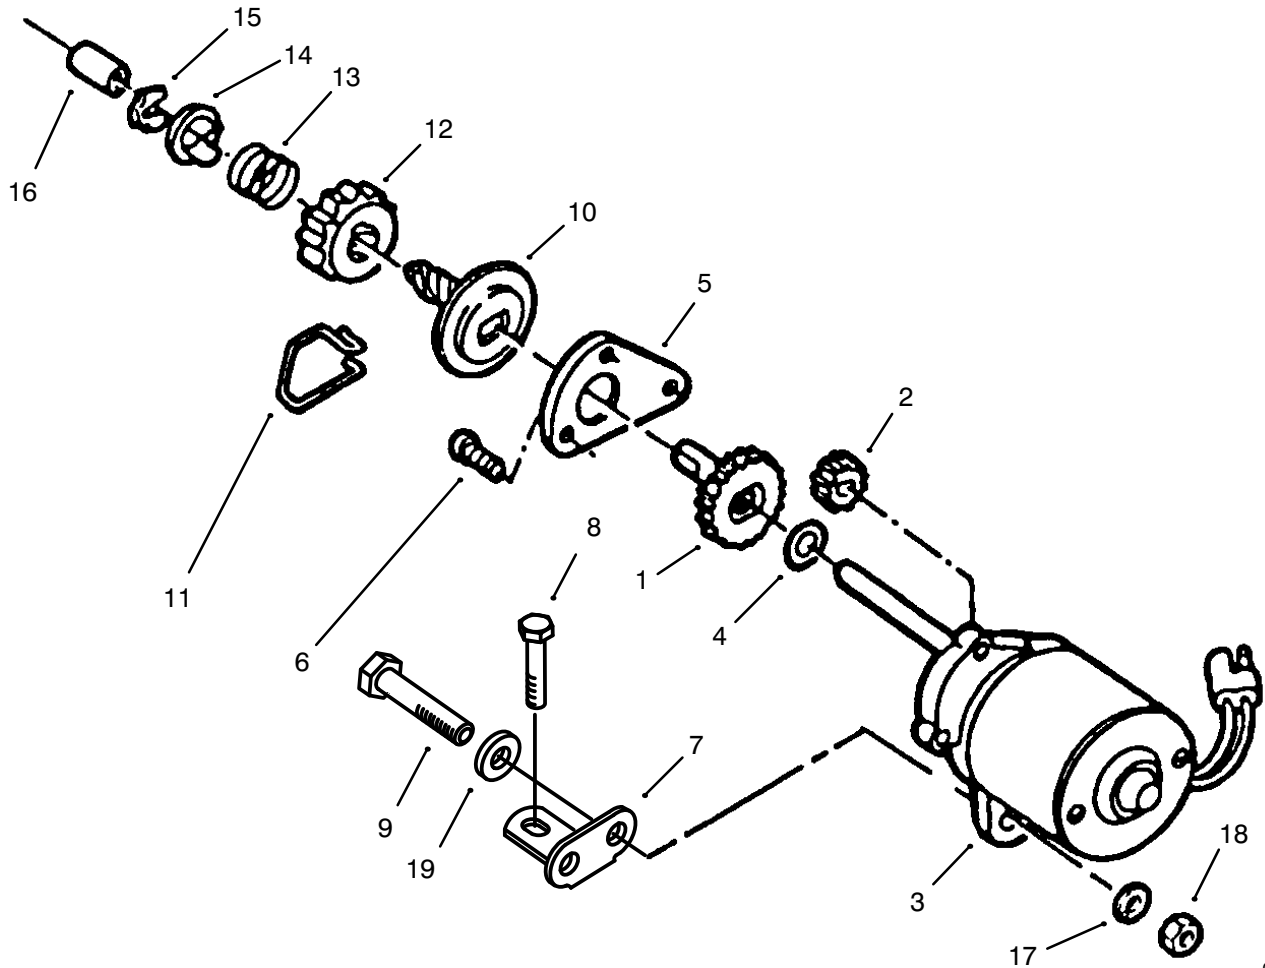


C-1924A

ELECTRIC MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611386	Gear – Driven	1
2	611385	Pinion – Motor shaft	1
3	682807	Motor Housing & Pin Ass'y	1
4	609568	Washer	1
5	613517	Plate – Gear Cover	1
6	609130	Screw	3
7	612661	Bracket – Starter Mounting	1
8	609471	Screw	1
9	613075	Screw	2
10	682809	Pinion – Spring & Clutch Ass'y (Incl. Ref. #11–15)	1

Ref. No.	Part No.	Description	No. Used
11	609229	Spring – Drag	1
12	610258	Pinion	1
13	610257	Spring – Pinion Return	1
14	613451	Washer – Pinion Stop	1
15	608622	Ring – Retaining	1
16	609572	Sleeve	1
17	306992	Washer – Lock	1
18	328712	Nut	1
19	306407	Washer	2
*	682806	Electric Starter Assembly (Incl. Ref. #1–6)	1

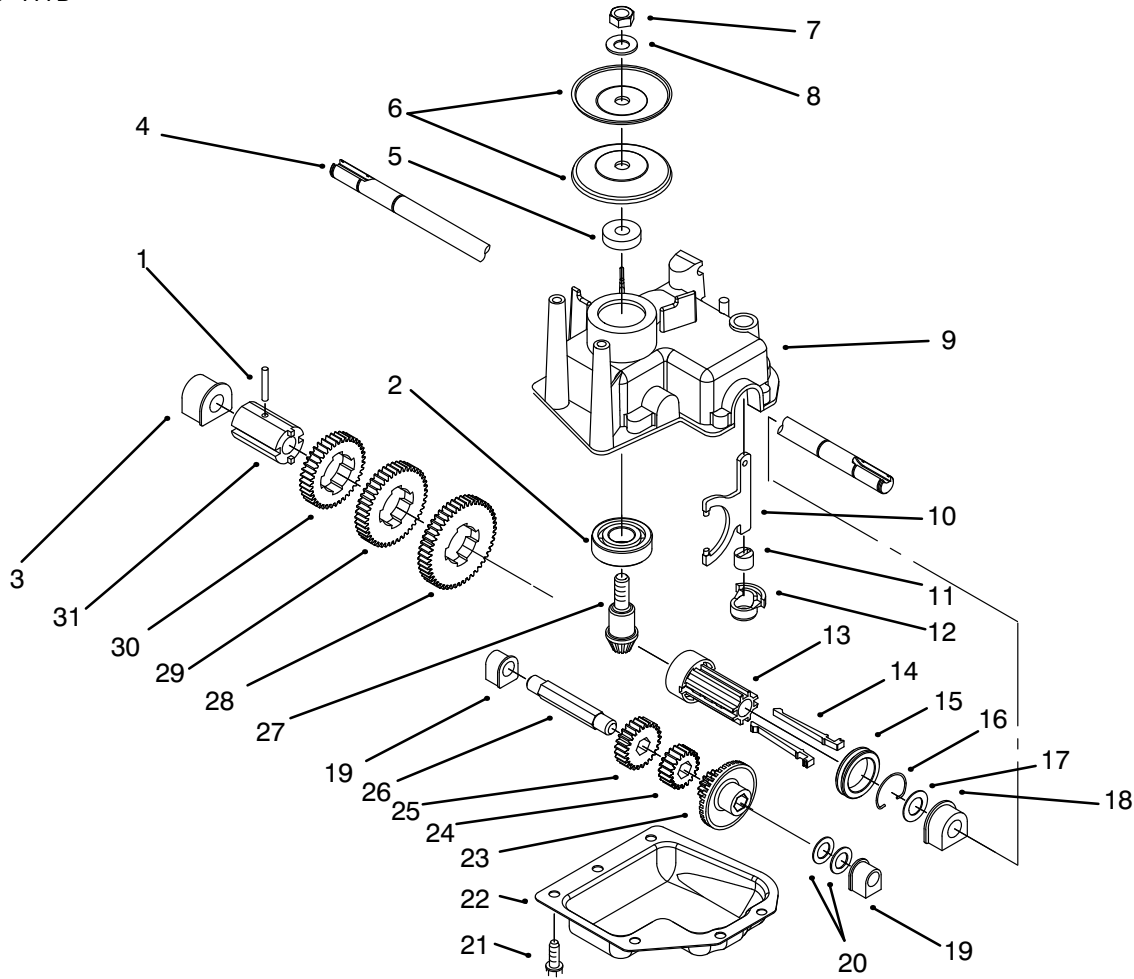


C-1322

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3285-19	Pin - Groove	1
2	38-7820	Bearing - Ball	1
3	60-8850	Bushing - Output	1
4	65-4770	Shaft - Output	1
5	92-5791	Spacer	1
6	60-8840	Pulley - Half	2
7	3296-5	Nut	1
8	3256-24	Washer	1
9	60-8710	Gearcase - Upper	1
10	60-8870	Yoke - Shift	1
11	29-9570	Bushing - Yoke	1
12	60-8810	Retainer - Shift Fork	1
13	76-0780	Sleeve - Shift Key	1
14	76-0760	Key - Shift	2
15	76-0770	Collar - Shift	1
16	65-5250	Clip - Spring	1
17	36-4780	Washer	1

Ref. No.	Part No.	Description	No. Used
18	60-8770	Bushing - Output	1
19	60-8750	Bushing - Inter. Shaft	2
20	36-4791	Washer - Thrust	2
21	49-2040	Screw	6
22	60-8730	Gear Case Cover	1
23	55-3760	Pinion - 15 Tooth	1
24	55-3780	Pinion - 20 Tooth	1
25	55-3800	Pinion - 25 Tooth	1
26	60-8800	Shaft - Intermediate	1
27	92-5790	Pinion - Bevel	1
28	55-3770	Gear - 49 Tooth	1
29	55-3790	Gear - 44 Tooth	1
30	55-3810	Gear - 39 Tooth	1
31	60-8790	Sleeve - Gear	1
*	92-7869	Gear Case Assembly Complete	1

*Not Illustrated

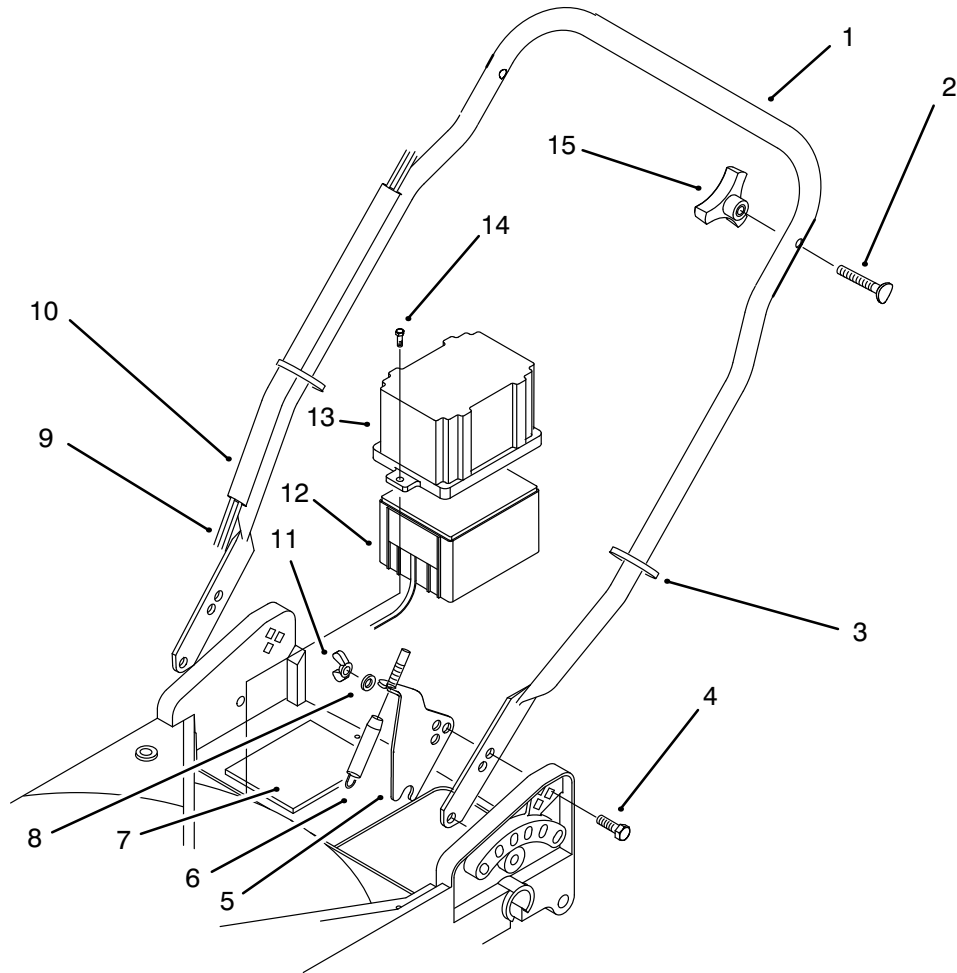


C-1921

LOWER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6537	Handle - Lower	1	10	92-8917	Cover - Controls	1
2	614697	Screw - Handle	2	11	32103-29	Nut - Wing	2
3	614249	Tie - Strap	4	12	55-7520	Pack - Battery	1
4	3230-29	Bolt - Carriage	2	13	612690	Case - Battery	1
5	92-7899	Bracket - Traction Cable	1	14	926641	Screw - Hex Washer Hd. Thread Forming	2
6	92-6518	Cable - Traction	1	15	614243	Knob	2
7	612510	Pad - Battery	1	*	92-1743	Charger - Battery	1
8	3253-33	Washer - Lock	2				
9	92-8865	Wire Assembly	1				

*Not Illustrated

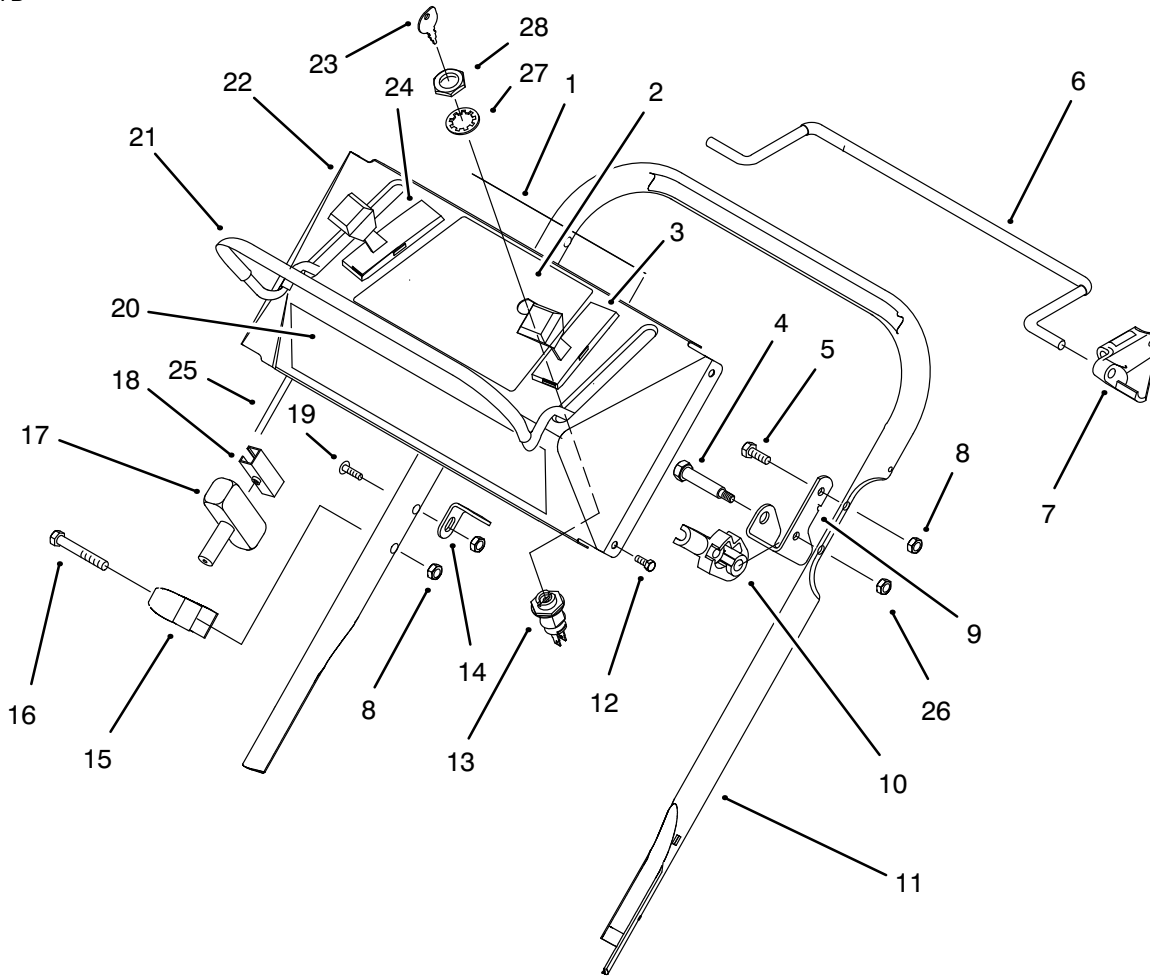

C-1922A

UPPER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-2940	Decal - Warning	1
2	92-8912	Decal - Warning	1
3	92-1643	Cable - Throttle	1
4	613050	Bolt	1
5	321-4	Screw - Hex Hd. Cap	1
6	92-1617	Bail - Control S.P.	1
7	92-5412	Stop - Pivot	1
8	3296-73	Nut - Lock	3
9	92-1094	Bail - Stop Bracket	1
10	92-1078	Cam - Brake	1
11	92-1092	Handle - Upper	1
12	92-9665	Screw - Phillips Hd.	4
13	46-5780	Switch - Starter	1
14	92-2928	Bracket - Cable Anchor	1
15	92-7720	Guide - Rope	1

Ref. No.	Part No.	Description	No. Used
16	321-51	Screw - Hex Hd. Cap	1
17	612825	Handle - Starter	1
18	612824	Clip - Rope Insert	1
19	92-2268	Screw - Handle	1
20	92-9561	Decal - Console Front	1
21	92-1093	Bail - Engine Control	1
22	16-7109	Panel - Control (Incl. Ref. #1, 2, &20)	1
23	62-7700	Key	1
24	92-8926	Control - Ground Speed	1
25	92-1633	Cable - Control	1
26	3296-56	Nut - Lock	1
27	3254-5	Washer - Star	1
28	218-461	Nut	1

LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut - Flywheel	8	10	1	612503	Spacer - Filter Base	10	9	1
303259	Washer	5	23	1	612504	Base - Air Filter	10	8	1
303712	Ring - Retaining	9	17	2	612505	Vane - Air	10	1	1
306375	Nut	9	48	1	612507	Screw	10	17	2
306407	Washer	11	19	2	612510	Pad - Battery	13	7	1
306407	Washer	9	43	2	612543	Blade 21	6	21	1
306531	Nut	6	1	1	612661	Bracket - Starter Mounting	11	7	1
306992	Washer - Lock	11	17	1	612690	Case - Battery	13	13	1
308052	Washer	10	7	1	612757	Collar	10	5	1
314576	Screw	10	14	1	612783	Line - Fuel	10	*	1
314576	Screw	6	19	1	612783	Line - Fuel	6	17	1
316959	Washer - Lock	8	11	1	612824	Clip - Rope	7	5	1
317893	Strap - Tie	8	13	1	612824	Clip - Rope Insert	14	18	1
328712	Nut	10	13	1	612825	Handle - Starter	7	4	1
328712	Nut	11	18	1	612825	Handle - Starter	14	17	1
602587	Plate - Reed Hold Down	9	35	1	612841	Plate - Contact	9	46	1
602588	Reed	9	36	1	612842	Shield	9	24	
603014	Bolt	8	5	1	612872	Screw - Reed To Cover	9	34	2
603164	Nut - Blade	6	23	1	612949	Hub - Starter	7	8	1
604604	Grommet	3	15	3	612950	Pulley	7	7	1
605120	Grommet	6	14	1	612974	Filter - Fuel	10	15	1
605120	Grommet	9	27	1	612974	Screen - Fuel Line	6	18	1
605255	Washer - Flat	5	22	1	613050	Bolt	14	4	1
606537	Screw	8	14	1	613073	Bracket - C.D. Mounting	9	28	1
606608	Pin - Wrist	9	16	1	613075	Screw	11	9	2
607199	Key - Flywheel	9	14	1	613110	Screw - Cover to	9	38	1
607213	Gasket - Fuel Cap	6	12	1	613142	Spring	10	6	1
607526	Screw - C.D. Mounting	9	6	4	613233	Screw - Brake Mtg. Brkt.	9	40	2
607560	Plate - Cover	4	13	1	613451	Washer - Pinion Stop	11	14	1
607601	Screw	6	30	3	613500	Screw	6	29	1
608175	Bar - Toe	4	11	1	613517	Plate - Gear Cover	11	5	1
608311	Nut	8	3	1	613529	Bolt - Shoulder	9	5	1
608622	Ring - Retaining	11	15	1	614009	Plug - Spark	9	22	1
609123	Plug	9	32	4	614243	Knob	13	15	2
609130	Screw	11	6	3	614249	Strap - Tie	9	26	1
609150	Baffle Fuel Cap	6	13	1	614249	Tie - Strap	13	3	4
609229	Spring - Drag	11	11	1	614343	Screw	8	6	1
609471	Screw	11	8	1	614343	Screw	9	29	3
609471	Screw	6	27	3	614426	Washer - Stepped	5	15	2
609493	Element - Air Filter	10	10	1	614427	Cover - Wheel	5	16	2
609568	Washer	11	4	1	614637	Bracket - Wheel Height Adj.	3	12	2
609572	Sleeve	11	16	1	614677	Screw - Sems Thr'd Form.	3	16	2
609786	Support - Crankshaft	6	26	1	614682	Knob - Cover Plate	3	1	1
609808	Screw	8	12	2	614697	Screw - Handle	13	2	2
609947	Screw	8	7	3	614701	Housing - Applique	3	14	1
609976	Pulley	6	33	1	677525	Plate & Collar Assembly	6	20	1
610165	Retainer - Speed	10	3	1	677982	Liner - Split (1 pair)	9	10	1
610257	Spring - Pinion Return	11	13	1	681678	Lead - High Tension	9	25	1
610258	Pinion	11	12	1	681737	Ring Set	9	18	1
610345	Screw - Set	6	32	1	681830	Bearing - Upper Main	9	12	1
610358	Nut - Lock	3	2	2	682683	Brake Assembly	9	4	1
610358	Nut - Lock	5	17	2	682776	Relay	8	15	1
610383	Retainer - Cover	10	12	1	682806	Electric Starter Assembly	11	*	1
611073	Screw - Set	9	37	1	682807	Motor Housing & Pin Ass'y	11	3	1
611191	Clip - J	8	8	1	682809	Pinion - Spring & Clutch	11	10	1
611211	Spring - Brake	9	41	1	682876	Muffler Cover Assembly	6	25	1
611213	Retainer	9	45	1	683215	Module - C.D. Ignition	9	31	1
611214	Spring - Cable Return	9	2	1	683580	Flywheel	8	9	1
611215	Base - Shroud	8	2	1	683702	Cylinder & Crankshaft Cover	9	21	1
611327	Cap - Fuel	6	11	1	683777	Kit - Repair	10	*	1
611337	Bracket	9	39	1	683778	Kit - Gasket	10	*	1
611385	Pinion - Motor shaft	11	2	1	683781	Kit - Choke	10	*	1
611386	Gear - Driven	11	1	1	683782	Kit - Bowl	10	*	1
611393	Screw - Cap	9	8	2	683783	Kit - Float Assembly	10	23	1
611395	Screw - Self Tapping	6	8	4	683821	Lead	9	3	1
611396	Seal - Upper Oil	9	13	1	683896	Starter Assembly	6	7	1
611509	Actuator - Brake Lever	9	1	1	683899	Kit - Dog	7	9	1
611512	Brace - Alternator	8	4	1	683911	Needle Bearing Set	9	20	1
612428	Screw	6	9	4	683964	Alternator Assembly	9	7	1
612432	Rope	7	6	1	684285	Kit - Idle Needle	10	*	1
612502	Lever - Governor Control	10	4	1	684286	Kit - Throttle	10	*	1

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
684301	Base - Starter	6	6	1	92-1643	Cable - Throttle	14	3	1
684352	Body - Carburetor	10	*	1	92-1648	Screw - Engine	6	24	3
684567	Starter Housing & Shaft	7	2	1	92-1743	Charger - Battery	13	*	1
684622	Starter Assembly	7	*	1	92-2268	Screw - Handle	14	19	1
684776	Wheel & Tire Assembly 6	3	9	2	92-2928	Bracket - Cable Anchor	14	14	1
926641	Screw - Hex Washer Hd.	4	1	2	92-2940	Decal - Warning	14	1	1
926641	Screw - Hex Washer Hd.	13	14	2	92-4856	Bolt - Shoulder	3	8	2
16-5539	Shroud & Tank Assembly	6	5	1	92-4921	Connecting Rod Assembly	9	9	1
16-5779	Housing - 21	4	9	1	92-4923	Piston & Ring Set	9	19	1
16-7109	Panel - Control	14	22	1	92-4927	Bearing Assembly	9	15	1
24-7920	Cover - Drive Shaft	5	24	1	92-4935	Spring & Keeper	7	3	1
29-9570	Bushing - Yoke	12	11	1	92-4948	Gasket Carburetor	10	35	2
36-4780	Washer	12	17	1	92-5412	Stop - Pivot	14	7	1
36-4791	Washer - Thrust	12	20	2	92-5790	Pinion - Bevel	12	27	1
38-7820	Bearing - Ball	12	2	1	92-5791	Spacer	12	5	1
39-5770	Decal - Danger	4	12	1	92-6353	Short Block	9	*	1
40-1940	Washer	3	3	6	92-6375	Crankshaft	9	11	1
46-5780	Switch - Starter	14	13	1	92-6392	Screw	10	2	1
46-6811	Screw - Hex Washer Hd.	4	10	2	92-6518	Cable - Traction	13	6	1
47-2480	Stop - Rope	6	10	1	92-6535	Cap - End	5	20	2
49-2040	Screw	12	21	6	92-6537	Handle - Lower	13	1	1
55-3760	Pinion - 15 Tooth	12	23	1	92-6539	Spring Arm Assembly - R.H.	5	*	1
55-3770	Gear - 49 Tooth	12	28	1	92-6540	Spring Arm Assembly - L.H.	5	18	1
55-3780	Pinion - 20 Tooth	12	24	1	92-7699	Bracket - Actuator	4	4	1
55-3790	Gear - 44 Tooth	12	29	1	92-7720	Guide - Rope	14	15	1
55-3800	Pinion - 25 Tooth	12	25	1	92-7736	Shield - Trailing	4	7	1
55-3810	Gear - 39 Tooth	12	30	1	92-7746	Arm - Rear Height Adjust.	5	4	2
55-7520	Pack - Battery	13	12	1	92-7748	Screw	4	3	2
60-8710	Gearcase - Upper	12	9	1	92-7869	Gear Case Assembly	12	*	1
60-8730	Gear Case Cover	12	22	1	92-7869	Gear Case Assembly	4	6	1
60-8750	Bushing - Inter. Shaft	12	19	2	92-7899	Bracket - Traction Cable	13	5	1
60-8770	Bushing - Output	12	18	1	92-8630	Plate - Mulch	3	17	1
60-8790	Sleeve - Gear	12	31	1	92-8853	Cover - Transmission	4	2	1
60-8800	Shaft - Intermediate	12	26	1	92-8865	Wire Assembly	13	9	1
60-8810	Retainer - Shift Fork	12	12	1	92-8912	Decal - Warning	14	2	1
60-8821	Lever - Shift	5	1	1	92-8917	Cover - Controls	13	10	1
60-8840	Pulley - Half	12	6	2	92-8926	Control - Ground Speed	14	24	1
60-8850	Bushing - Output	12	3	1	92-9561	Decal - Console Front	14	20	1
60-8870	Yoke - Shift	12	10	1	92-9568	Decal - Recoil	6	15	1
62-7700	Key	14	23	1	92-9665	Screw - Phillips Hd.	14	12	4
65-2720	Ring - Retaining	5	7	4	92-9673	Bolt - Shoulder	3	4	2
65-4710	Ring - Friction	5	8	2	93-1221	Shield - Heat	10	16	1
65-4720	Spring - Compression	5	12	2	93-1233	Gasket - Exhaust	9	33	1
65-4730	Washer - Thrust	5	5	2	93-1233	Gasket - Muffler	6	31	1
65-4740	Washer - Thrust Keyed	5	6	4	93-1239	Spring - Contact	9	23	1
65-4750	Gear - Pinion	5	11	2	93-4300	Harness - Wire	8	1	1
65-4760	Washer	5	9	2	93-4301	Case Assembly	9	42	1
65-4770	Shaft - Output	12	4	1	93-4303	Cover - Air Filter	10	11	1
65-5250	Clip - Spring	12	16	1	93-6388	Plate - Muffler	6	28	1
66-6040	Key - Rocking R.H.	5	*	1	218-461	Nut	14	28	1
66-6050	Key - Rocking L.H.	5	10	1	256-251	Bushing - Spacer	4	5	2
71-1280	Decal - Warning	4	8	1	321-4	Screw - Hex Hd. Cap	14	5	1
76-0760	Key - Shift	12	14	2	321-6	Screw - Hex Hd. Cap	9	44	1
76-0770	Collar - Shift	12	15	1	321-51	Screw - Hex Hd. Cap	14	16	1
76-0780	Sleeve - Shift Key	12	13	1	3230-29	Bolt - Carriage	13	4	2
82-8780	Retainer - Cable	5	3	1	3253-33	Washer - Lock	13	8	2
92-1006	Spring Arm Ass'y - Front	3	6	2	3254-5	Washer - Star	14	27	1
92-1008	Knob - Height Adjust	3	5	4	3255-7	Washer - Ext. Tooth Lock	9	47	1
92-1042	Wheel & Tire Assembly	5	13	2	3256-24	Washer	12	8	1
92-1043	V-Belt	5	21	1	3272-10	Pin - Cotter	5	25	1
92-1057	Bolt - Shoulder	5	14	2	3285-19	Pin - Groove	12	1	1
92-1078	Cam - Brake	14	10	1	3290-413	Washer - Belleville	3	7	2
92-1092	Handle - Upper	14	11	1	3296-5	Nut	12	7	1
92-1093	Bail - Engine Control	14	21	1	3296-39	Nut - Lock	3	13	2
92-1094	Bail - Stop Bracket	14	9	1	3296-56	Nut - Lock	14	26	1
92-1099	Bolt - Shoulder	3	10	2	3296-73	Nut - Lock	14	8	3
92-1604	Cap - Hub	3	11	4	32103-29	Nut - Wing	13	11	2
92-1617	Bail - Control S.P.	14	6	1	32144-53	Screw - Self Tapping	6	34	1
92-1630	Fan - Mulching	6	22	1	32144-70	Screw - Tapping	5	2	1
92-1633	Cable - Control	14	25	1	32144-85	Screw - Hex Hd Tapping	5	19	2

*Not Illustrated