

LAWN-BOY®

21" GOLD SERIES WALK-BEHIND MOWER

MODEL NO. 10545-5900001 & UP

PARTS CATALOG

PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.


NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Mulch Plate & Wheel Assembly	3	Carburetor Assembly	10
Housing Assembly	4	Air Filter Assembly	11
Gear Case & Wheel Assembly	5	Electric Motor Assembly	12
Engine, Fuel Tank & Blade Assembly	6	Gear Case Assembly	13
Starter Assembly	7	Lower Handle Assembly	14
Flywheel & Wire Harness Assembly	8	Upper Handle Assembly	15
Crankshaft & Cylinder Assembly	9	Numeric Parts Index	16-18

Accessories


Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit	Model No. 89814	Leaf Bag	Model No. 89804
Rear Bagging Kit	Model No. 89800	Leaf Shredder Kit	Model No. 89860

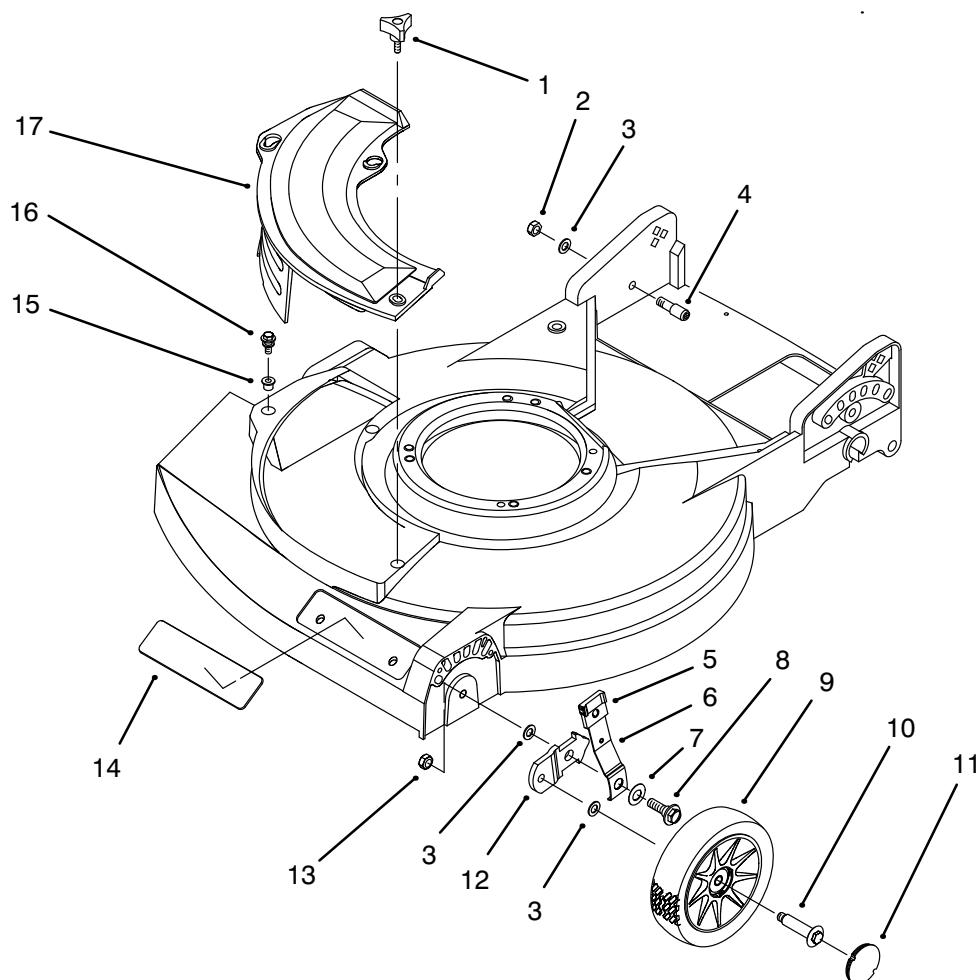

C-1917

MULCH PLATE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	614682	Knob - Cover Plate	1	10	92-1099	Bolt - Shoulder	2
2	610358	Nut - Lock	2	11	92-1604	Cap - Hub	4
3	40-1940	Washer	6	12	614637	Bracket - Wheel Height Adj.	2
4	92-9673	Bolt - Shoulder	2	13	3296-39	Nut - Lock	2
5	92-1008	Knob - Height Adjust	4	14	614701	Housing - Applique	1
6	92-1006	Spring Arm Ass'y - Front	2	15	604604	Grommet	3
7	3290-413	Washer - Belleville	2	16	614677	Screw - Sems Thr'd Form.	2
8	92-4856	Bolt - Shoulder	2	17	92-8630	Plate - Mulch	1
9	684776	Wheel & Tire Assembly 6"	2				

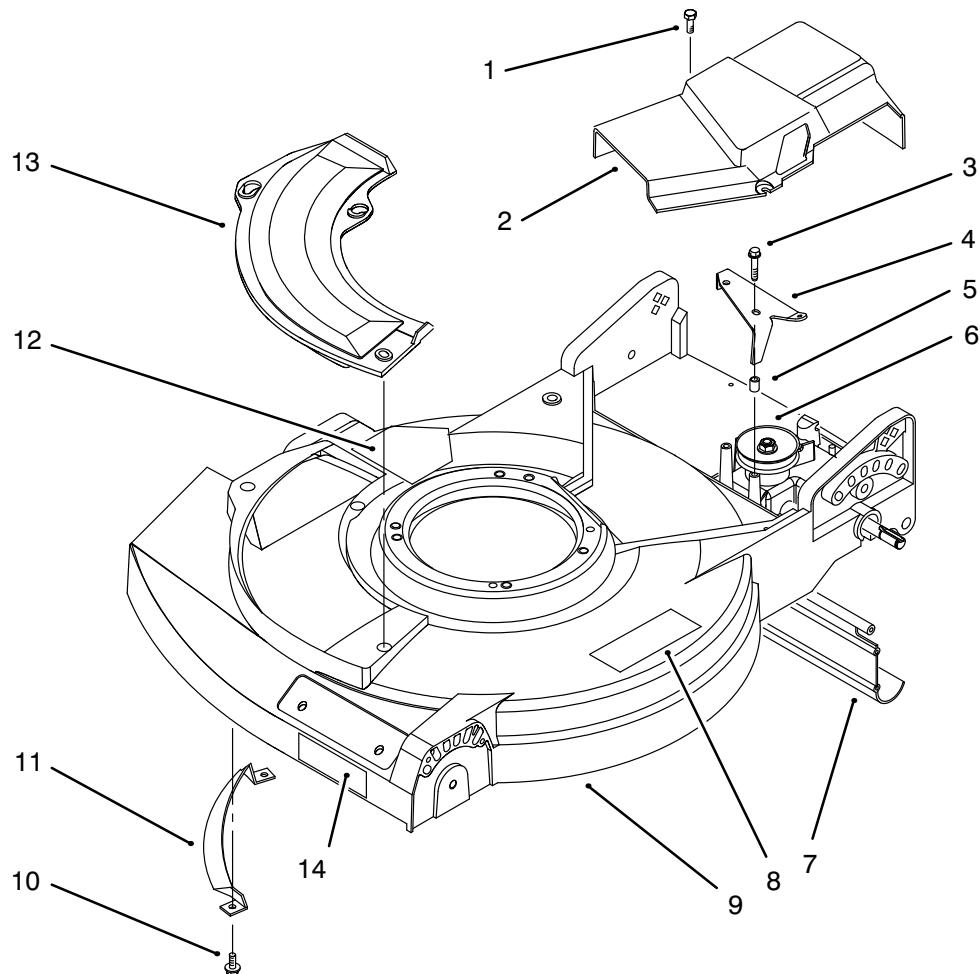


C-2183A

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	926641	Screw – Hex Washer Hd. Thread Forming	2
2	92-8853	Cover – Transmission	1
3	92-7748	Screw	2
4	92-7699	Bracket – Actuator	1
5	256-251	Bushing – Spacer	2
6	92-7869	Gear Case Assembly	1
7	92-7736	Shield – Trailing	1

Ref. No.	Part No.	Description	No. Used
8	93-7250	Decal – Warning	1
9	92-7675	Housing – 21" (Incl. Ref. #8, 12, & 14)	1
10	46-6811	Screw – Hex Washer Hd.	2
11	608175	Bar – Toe	1
12	39-5770	Decal – Danger	1
13	607560	Plate – Cover	1
14	93-3191	Decal – No Rust	1

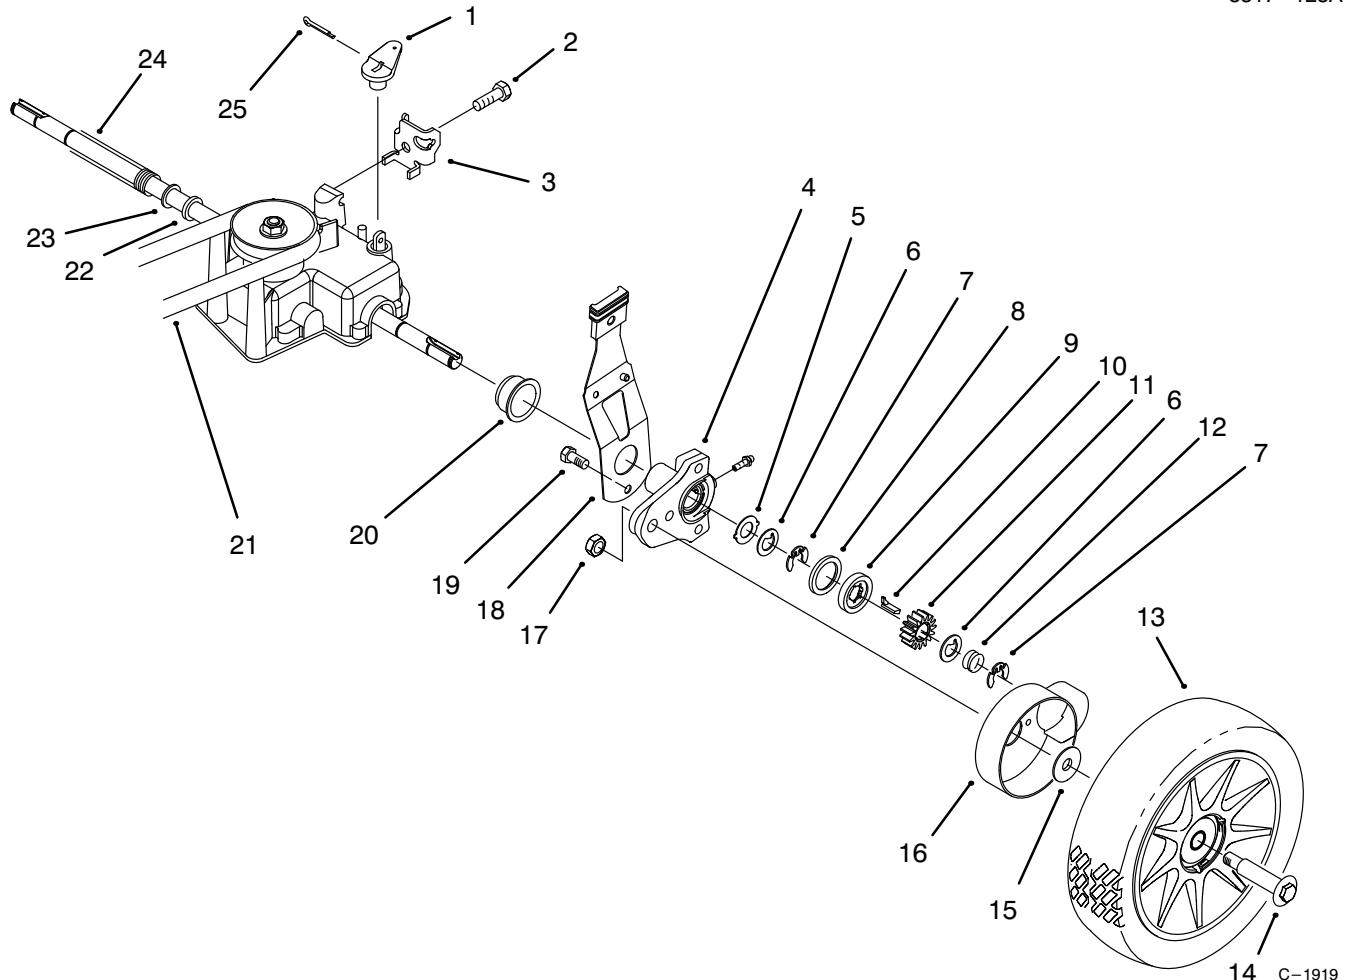


GEAR CASE & WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	60-8821	Lever - Shift	1
2	32144-70	Screw - Tapping	1
3	82-8780	Retainer - Cable	1
4	92-7746	Arm - Rear Height Adjust.	2
5	65-4730	Washer - Thrust	2
6	65-4740	Washer - Thrust Keyed	4
7	65-2720	Ring - Retaining	4
8	65-4710	Ring - Friction	2
9	65-4760	Washer	2
10	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
11	65-4750	Gear - Pinion	2
12	65-4720	Spring - Compression	2
13	92-1042	Wheel & Tire Assembly	2

Ref. No.	Part No.	Description	No. Used
14	92-1057	Bolt - Shoulder	2
15	614426	Washer - Stepped	2
16	614427	Cover - Wheel	2
17	610358	Nut - Lock	2
18	92-6540	Spring Arm Assembly - L.H.	1
*	92-6539	Spring Arm Assembly - R.H.	1
19	32144-85	Screw - Hex Hd Tapping	2
20	92-6535	Cap - End	2
21	92-1043	V-Belt	1
22	605255	Washer - Flat	1
23	303259	Washer	1
24	24-7920	Cover - Drive Shaft	1
25	3272-10	Pin - Cotter	1

*Not Illustrated

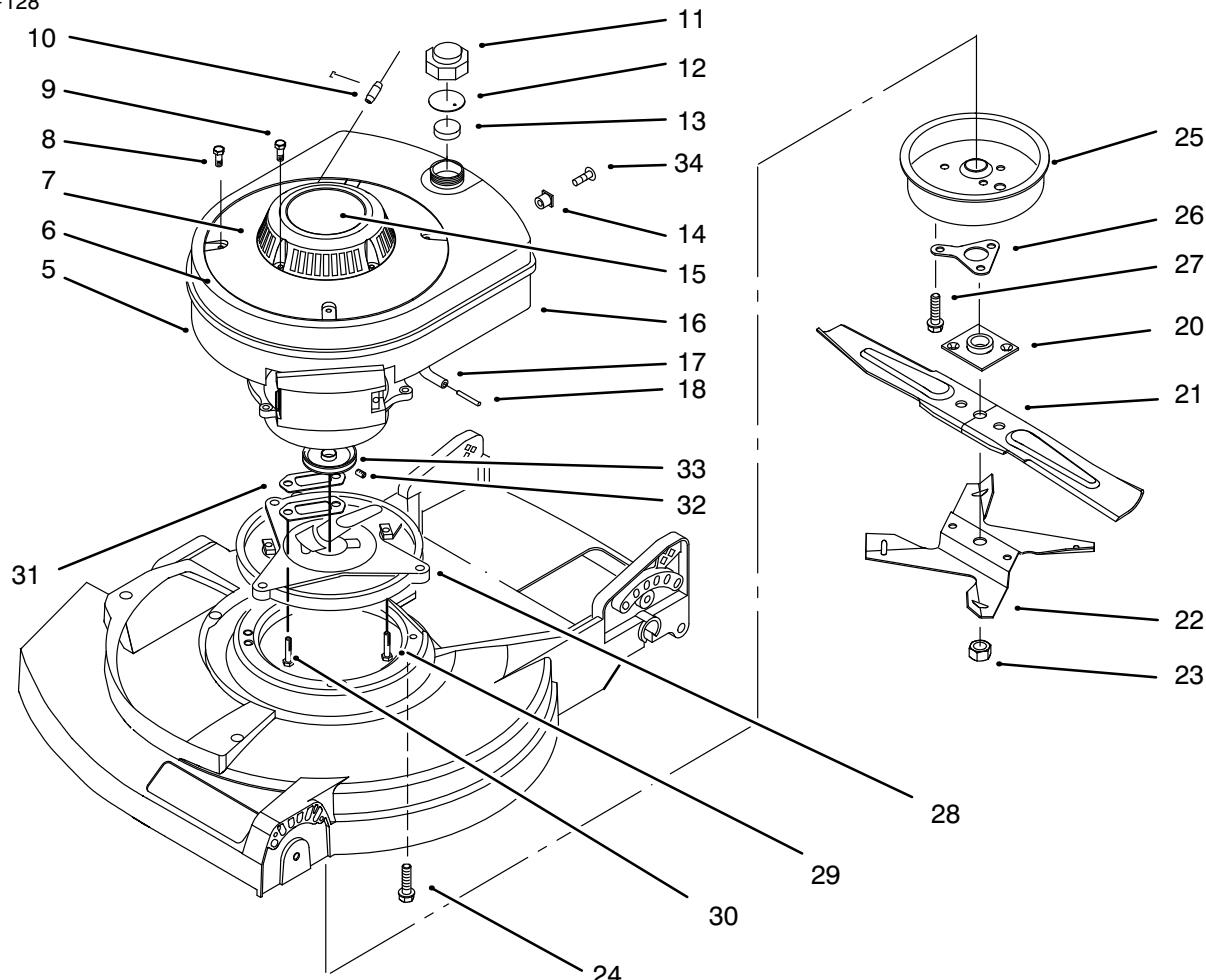


C-2176A

ENGINE, FUEL TANK & BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
5	16-5539	Shroud & Tank Assembly	1
6	684301	Base - Starter	1
7	684622	Starter Assembly	1
8	611395	Screw - Self Tapping	4
9	612428	Screw	4
10	47-2480	Stop - Rope	1
11	611327	Cap - Fuel	1
12	607213	Gasket - Fuel Cap	1
13	609150	Baffle Fuel Cap	1
14	605120	Grommet	1
15	92-9568	Decal - Recoil	1
16		Engine Assembly	1
17	612783	Line - Fuel	1
18	612974	Screen - Fuel Line	1
20	677525	Plate & Collar Assembly	1

Ref. No.	Part No.	Description	No. Used
21	612543	Blade 21"	1
22	92-1630	Fan - Mulching	1
23	603164	Nut - Blade	1
24	92-1648	Screw - Engine	3
25	682876	Muffler Cover Assembly	1
26	609786	Support - Crankshaft	1
27	609471	Screw	3
28	92-6388	Plate - Muffler	1
29	613500	Screw	1
30	607601	Screw	3
31	93-1233	Gasket - Muffler	1
32	610345	Screw - Set	1
33	609976	Pulley	1
34	32144-53	Screw - Self Tapping	1

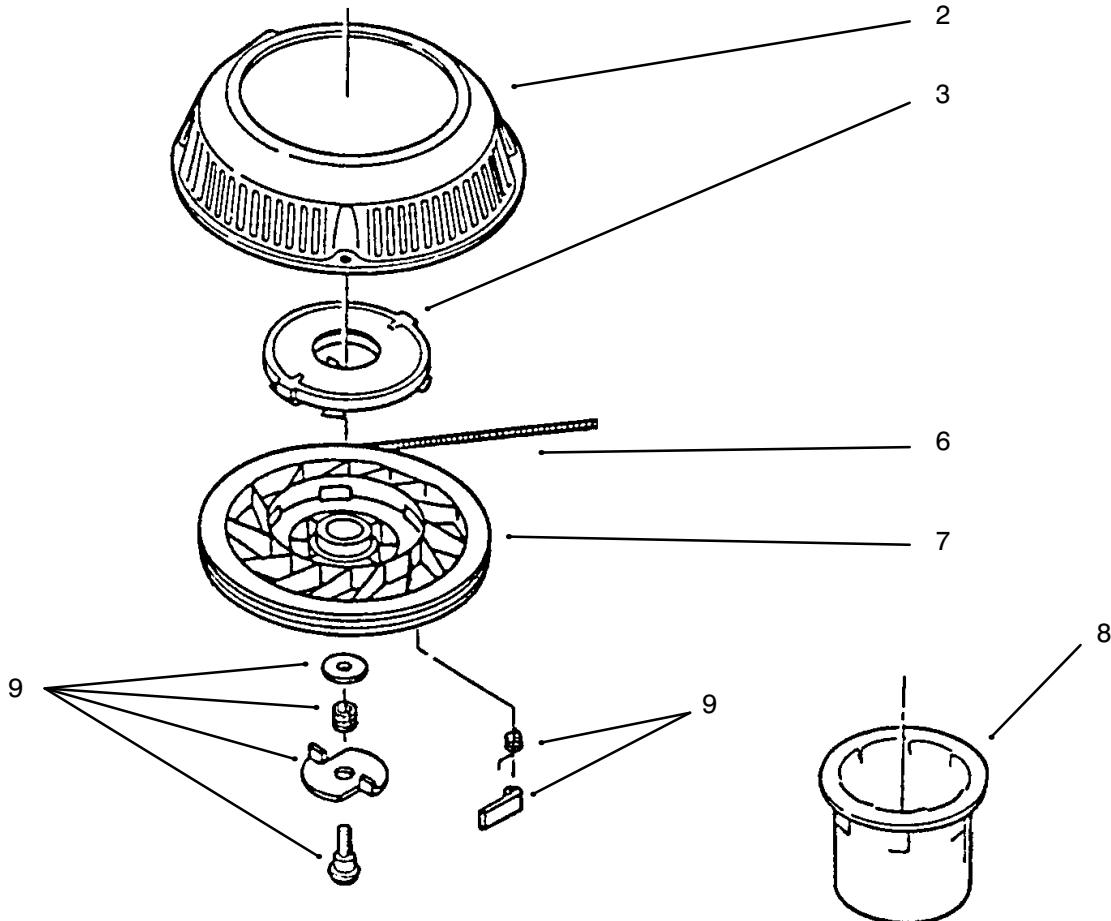


C-2187

STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	684567	Starter Housing & Shaft	1	8	612949	Hub - Starter	1
3	92-4935	Spring & Keeper	1	9	683899	Kit - Dog	1
6	612432	Rope	1	*	684622	Starter Assembly (Incl. Ref. #2, 3, 6, 7, & 9)	1
7	612950	Pulley	1				

*Not Illustrated

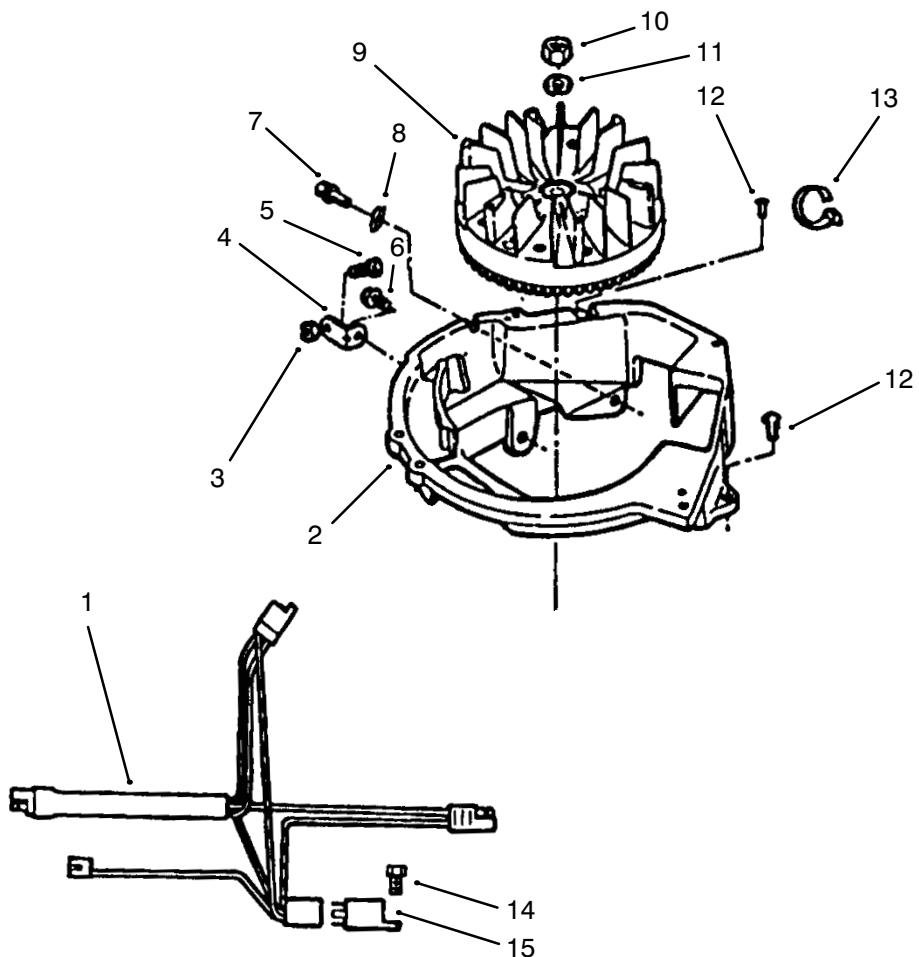


C-1925

FLYWHEEL & WIRE HARNESS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	93-4300	Harness - Wire	1
2	611215	Base - Shroud	1
3	608311	Nut	1
4	611512	Brace - Alternator	1
5	603014	Bolt	1
6	614343	Screw	1
7	609947	Screw	3
8	611191	Clip - J	1

Ref. No.	Part No.	Description	No. Used
9	683580	Flywheel	1
10	130743	Nut - Flywheel	1
11	316959	Washer - Lock	1
12	609808	Screw	2
13	317893	Strap - Tie	1
14	606537	Screw	1
15	682776	Relay	1

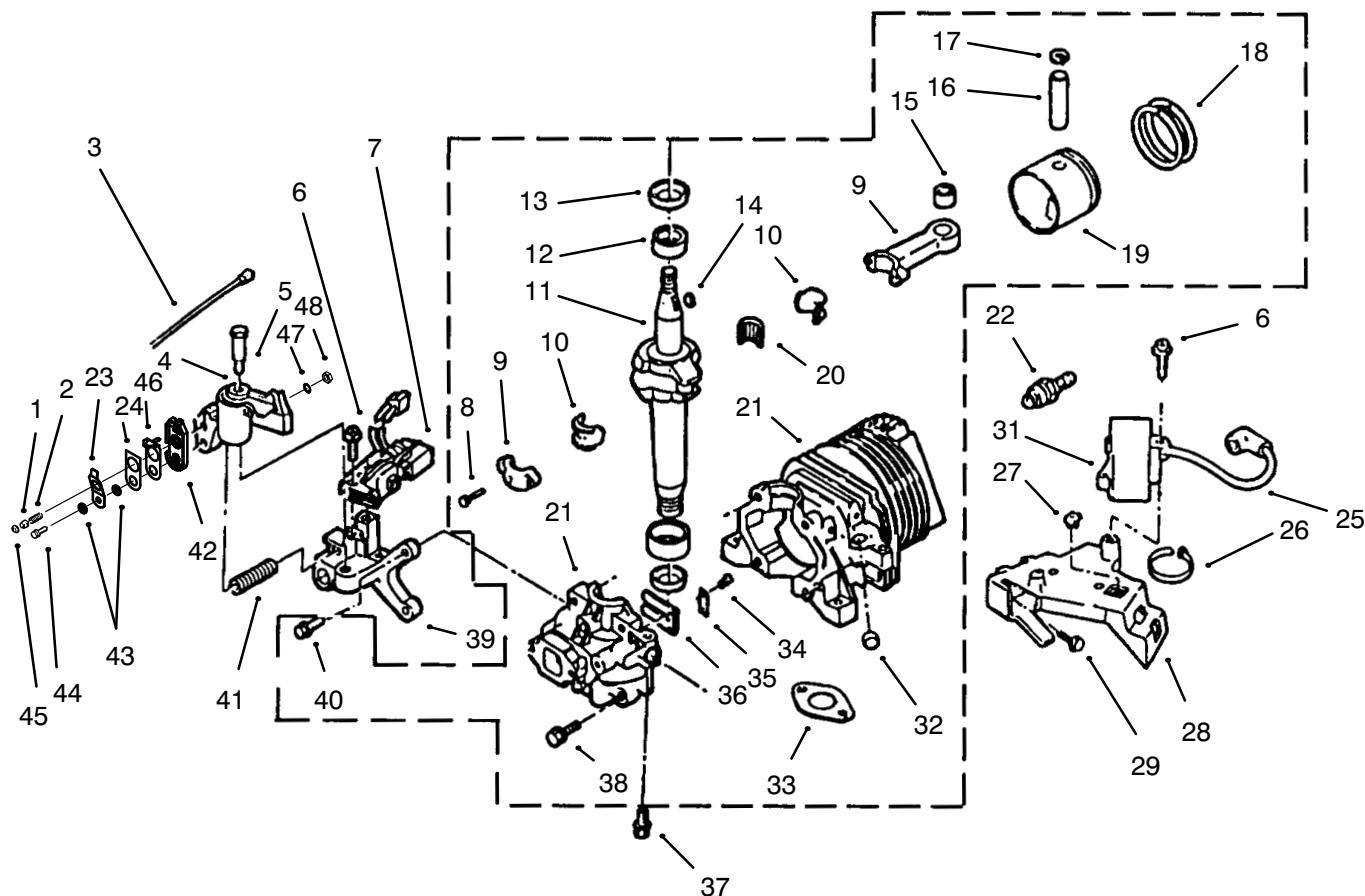


C-2172

CRANKSHAFT & CYLINDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	611509	Actuator - Brake Lever	1	24	612842	Shield	1
2	611214	Spring - Cable Return	1	25	681678	Lead - High Tension	1
3	683821	Lead	1	26	614249	Strap - Tie	1
4	682683	Brake Assembly	1	27	605120	Grommet	1
5	613529	Bolt - Shoulder	1	28	613073	Bracket - C.D. Mounting	1
6	607526	Screw - C.D. Mounting	4	29	614343	Screw	3
7	683964	Alternator Assembly	1	31	683215	Module - C.D. Ignition & Lead	1
8	611393	Screw - Cap	2	32	609123	Plug	4
9	92-4921	Connecting Rod Assembly (Incl. Ref. #8, 10, 15, & 20)	1	33	93-1233	Gasket - Exhaust	1
10	677982	Liner - Split (1 pair)	1	34	612872	Screw - Reed To Cover	2
11	92-6375	Crankshaft	1	35	602587	Plate - Reed Hold Down	1
12	681830	Bearing - Upper Main	1	36	602588	Reed	1
13	611396	Seal - Upper Oil	1	37	611073	Screw - Set	1
14	607199	Key - Flywheel	1	38	613110	Screw - Cover to Crankcase	1
15	92-4927	Bearing Assembly	1	39	611337	Bracket	1
16	606608	Pin - Wrist	1	40	613233	Screw - Brake Mtg. Brkt.	2
17	303712	Ring - Retaining	2	41	611211	Spring - Brake	1
18	681737	Ring Set	1	42	93-4301	Case Assembly	1
19	92-4923	Piston & Ring Set (Incl. Ref. #16-18)	1	43	306407	Washer	2
20	683911	Needle Bearing Set	1	44	321-6	Screw - Hex Hd. Cap	1
21	683702	Cylinder & Crankshaft Cover Assembly (Incl. Ref. #32, 34-36, 38, & 40)	1	45	611213	Retainer	1
22	614009	Plug - Spark	1	46	612841	Plate - Contact	1
23	93-1239	Spring - Contact	1	47	3255-7	Washer - Ext. Tooth Lock	1
				48	306375	Nut	1
				*	92-6353	Short Block	1

*Not Illustrated

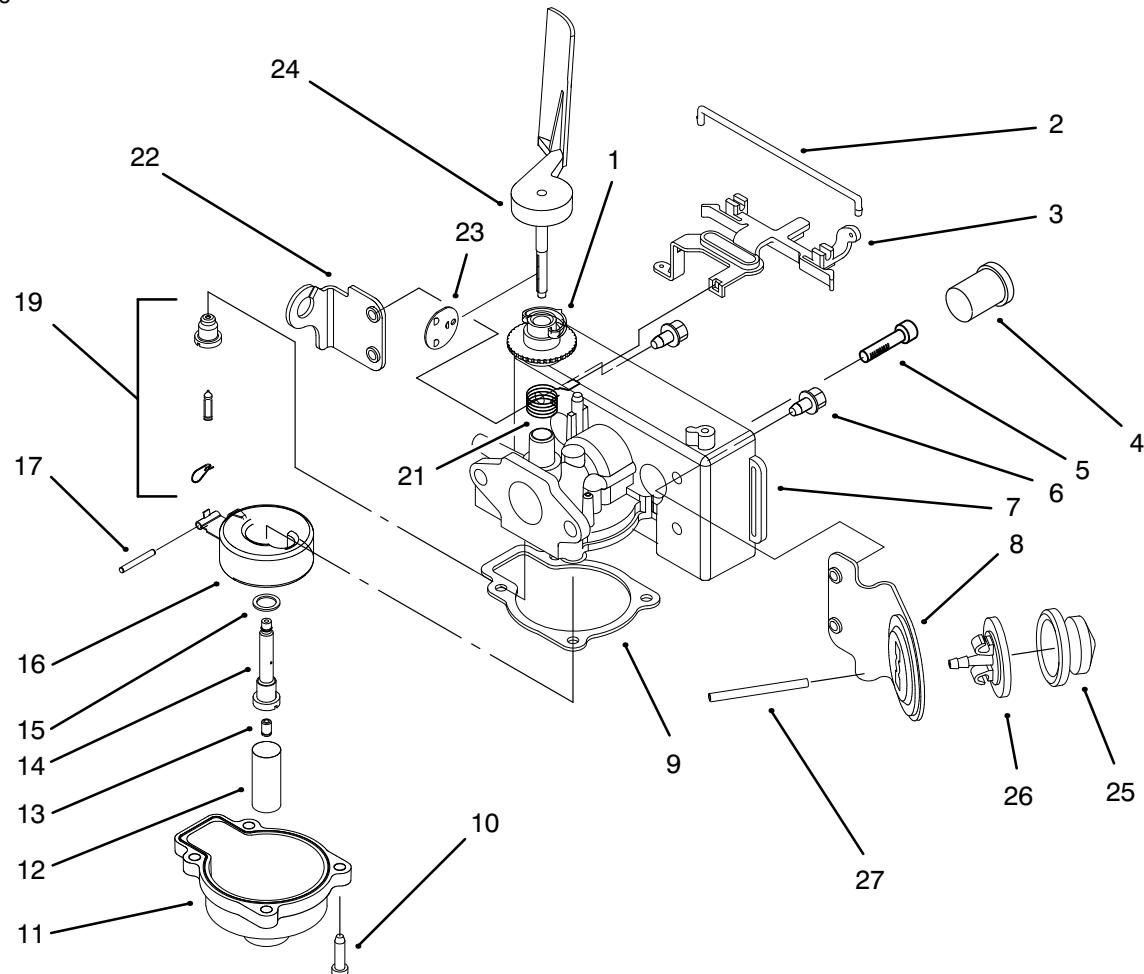


C-2182A

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610834	Collar - Adjustment	1
2	610165	Retainer	1
3	93-1225	Lever - Speed Adjst	1
4	611545	Plug	2
5	609482	Screw - Pan Hd. Sems	2
6	613269	Screw	4
7	93-1228	Body - Carburetor	1
8	93-1232	Bracket - Primer	1
9	602850	Gasket - Float Chamber	1
10	608850	Screw	4
11	92-9691	Float Chamber	1
12	611071	Filter - Fuel	1
13	92-6370	Main Jet	1

Ref. No.	Part No.	Description	No. Used
14	92-6371	Nozzle	1
15	612383	Washer	1
16	678113	Float & Arm Assembly	1
17	92-6389	Pin	1
19	92-9697	Float, Valve, & Body Ass'y	1
21	92-4944	Spring - Governor	1
22	93-1226	Bracket - Throttle Control	1
23	92-6373	Disc - Throttle	1
24	92-6376	Air Vane & Shaft	1
25	66-7460	Bulb - Primer	1
26	44-2750	Body - Primer	1
27	44-3175	Hose - Primer	1
*	93-4319	Carburetor Complete	1

*Not Illustrated

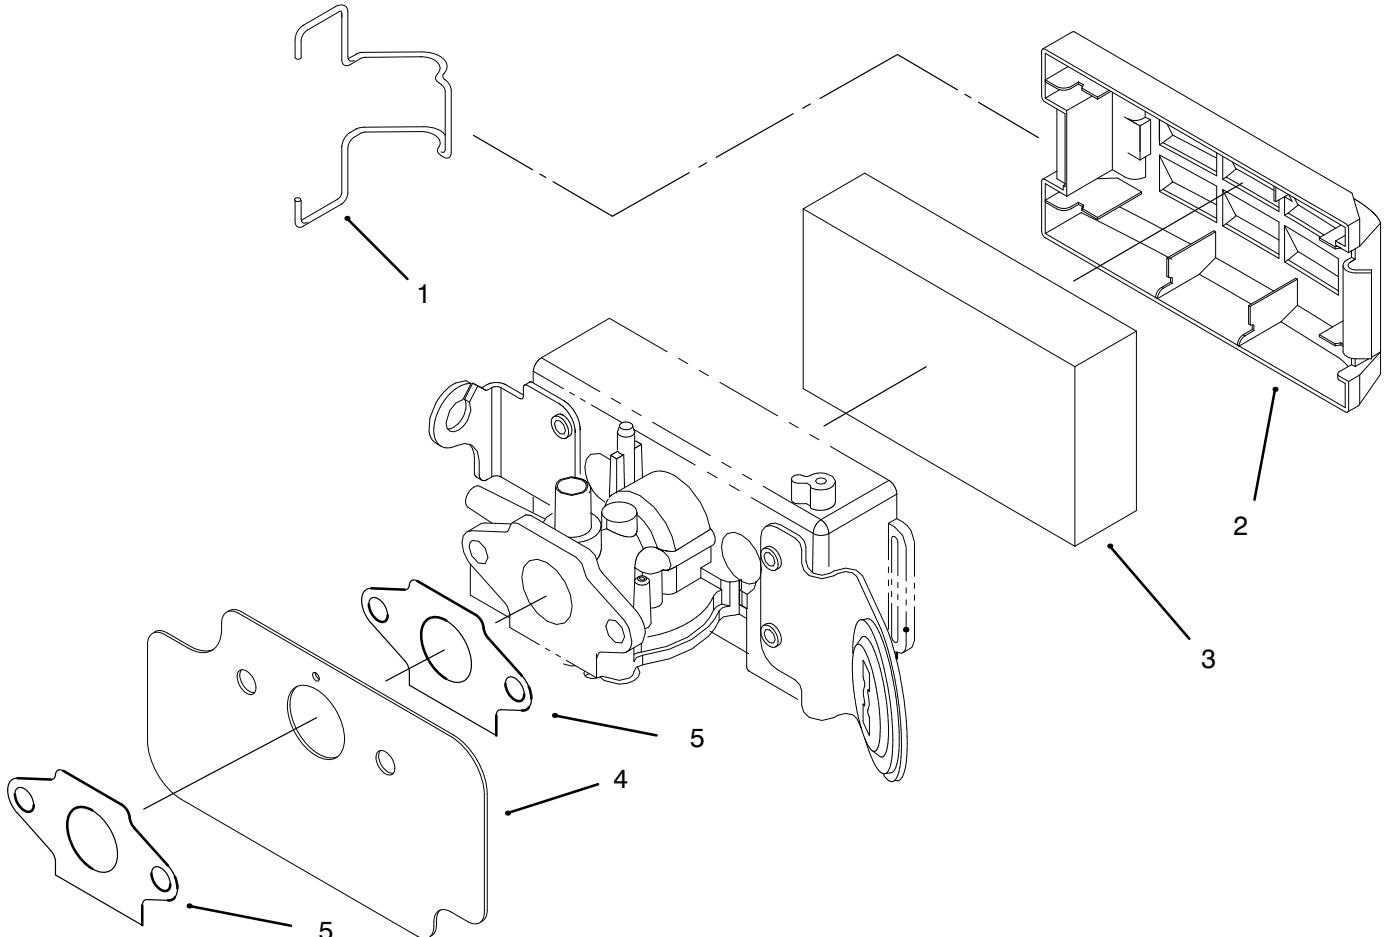


C-2184A

AIR FILTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	610383	Retainer – Cover	1
2	93-1231	Cover – Air Filter	1
3	609493	Element – Air Filter	1

Ref. No.	Part No.	Description	No. Used
4	93-1221	Shield – Heat Gasket	1
5	92-4948		2

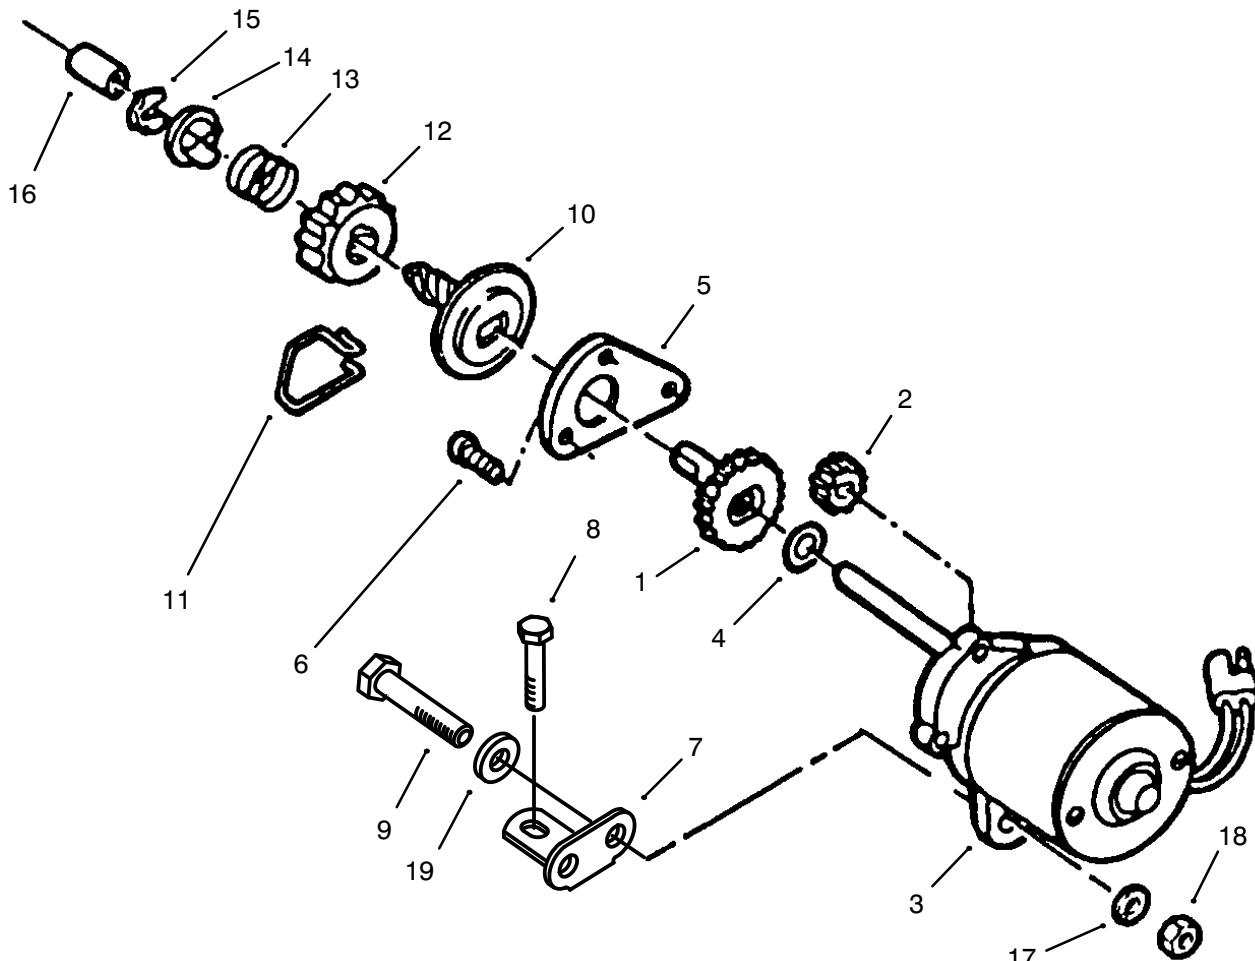


C-1924A

ELECTRIC MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	611386	Gear – Driven	1
2	611385	Pinion – Motor shaft	1
3	682807	Motor Housing & Pin Ass'y	1
4	609568	Washer	1
5	613517	Plate – Gear Cover	1
6	609130	Screw	3
7	612661	Bracket – Starter Mounting	1
8	609471	Screw	1
9	613075	Screw	2
10	682809	Pinion – Spring & Clutch Ass'y (Incl. Ref. #11–15)	1

Ref. No.	Part No.	Description	No. Used
11	609229	Spring – Drag	1
12	610258	Pinion	1
13	610257	Spring – Pinion Return	1
14	613451	Washer – Pinion Stop	1
15	608622	Ring – Retaining	1
16	609572	Sleeve	1
17	306992	Washer – Lock	1
18	328712	Nut	1
19	306407	Washer	2
*	682806	Electric Starter Assembly (Incl. Ref. #1–6)	1

*Not Illustrated

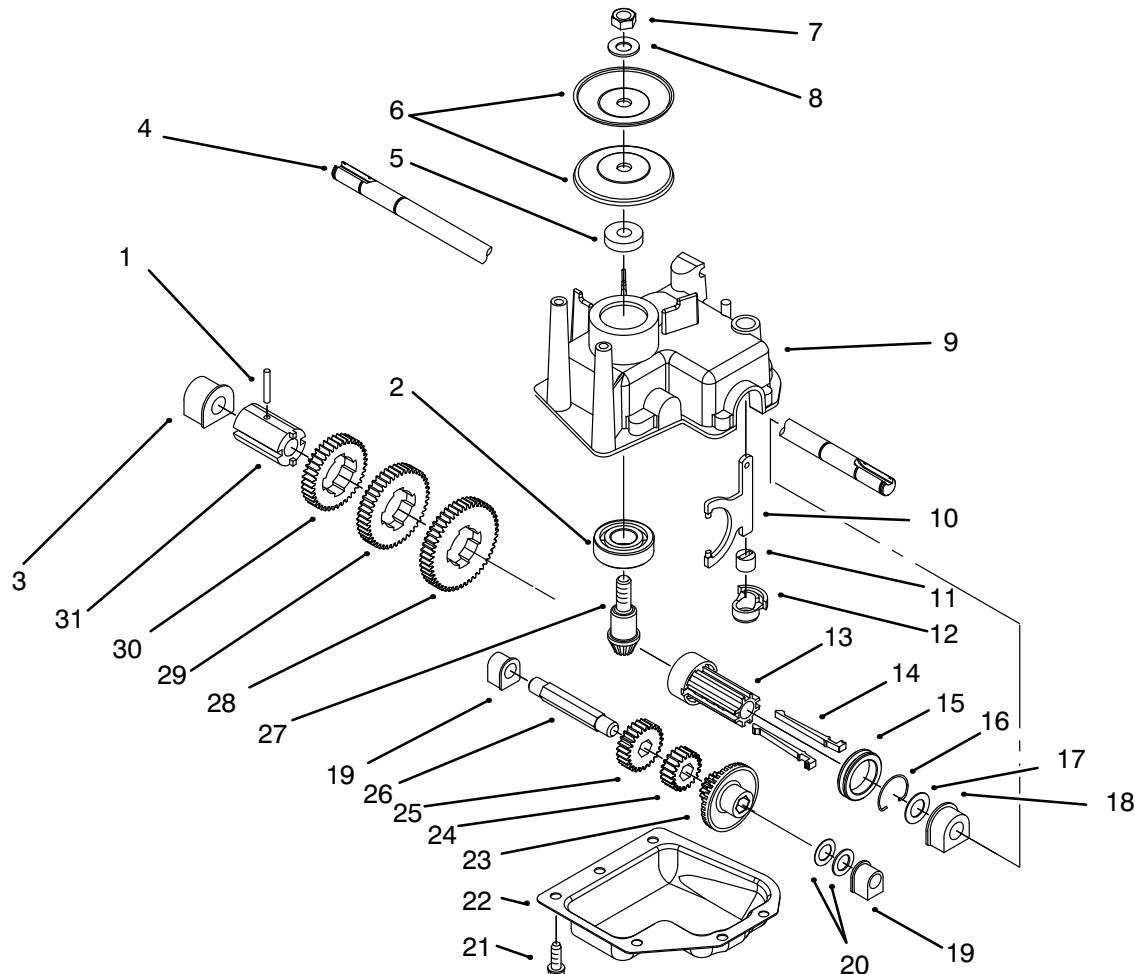


C-1322

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	3285-19	Pin - Groove	1	18	60-8770	Bushing - Output	1
2	38-7820	Bearing - Ball	1	19	60-8750	Bushing - Inter. Shaft	2
3	60-8850	Bushing - Output	1	20	36-4791	Washer - Thrust	2
4	65-4770	Shaft - Output	1	21	49-2040	Screw	6
5	92-5791	Spacer	1	22	60-8730	Gear Case Cover	1
6	60-8840	Pulley - Half	2	23	55-3760	Pinion - 15 Tooth	1
7	3296-5	Nut	1	24	55-3780	Pinion - 20 Tooth	1
8	3256-24	Washer	1	25	55-3800	Pinion - 25 Tooth	1
9	60-8710	Gearcase - Upper	1	26	60-8800	Shaft - Intermediate	1
10	60-8870	Yoke - Shift	1	27	92-5790	Pinion - Bevel	1
11	29-9570	Bushing - Yoke	1	28	55-3770	Gear - 49 Tooth	1
12	60-8810	Retainer - Shift Fork	1	29	55-3790	Gear - 44 Tooth	1
13	76-0780	Sleeve - Shift Key	1	30	55-3810	Gear - 39 Tooth	1
14	76-0760	Key - Shift	2	31	60-8790	Sleeve - Gear	1
15	76-0770	Collar - Shift	1	*	92-7869	Gear Case Assembly Complete	1
16	65-5250	Clip - Spring	1				
17	36-4780	Washer	1				

*Not Illustrated

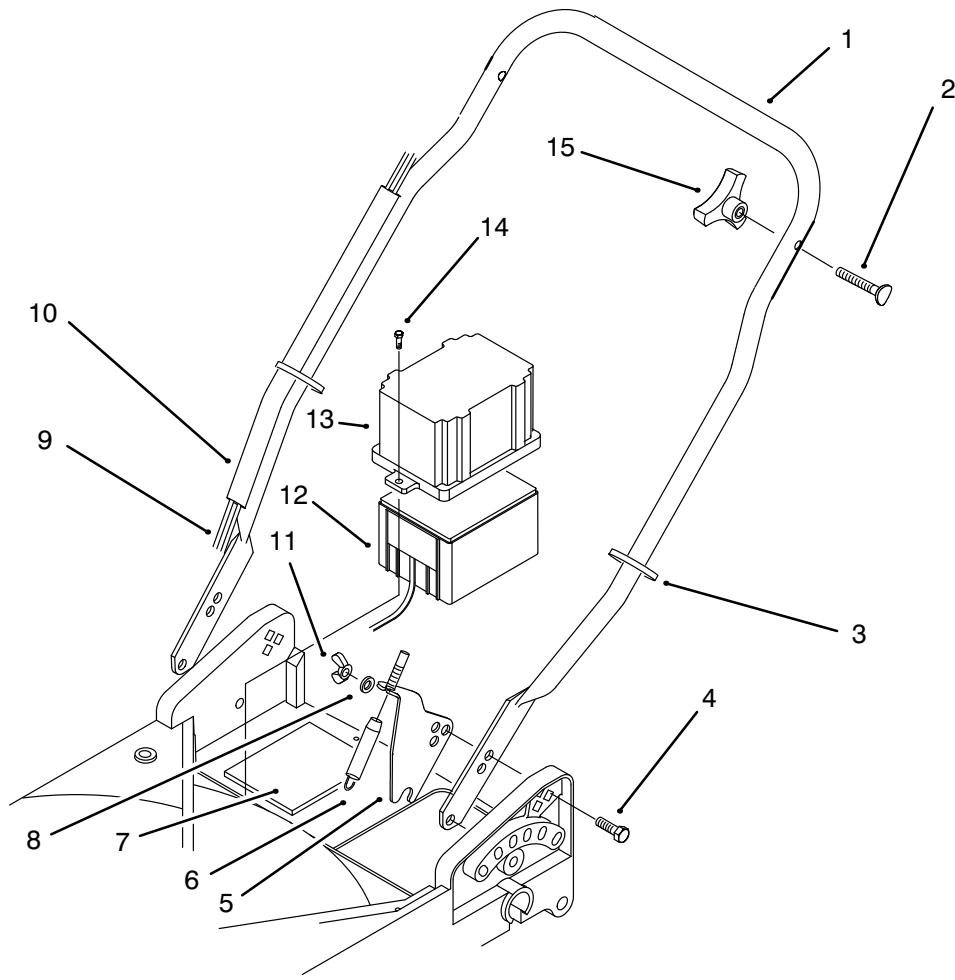


C-1921

LOWER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	92-6537	Handle - Lower	1
2	614697	Screw - Handle	2
3	614249	Tie - Strap	2
4	3230-29	Bolt - Carriage	2
5	92-7899	Bracket - Traction Cable	1
6	92-6518	Cable - Traction	1
7	612510	Pad - Battery	1
8	3253-33	Washer - Lock	2
9	92-8865	Wire Assembly	1

Ref. No.	Part No.	Description	No. Used
10	92-8917	Cover - Controls	1
11	32103-29	Nut - Wing	2
12	55-7520	Pack - Battery	1
13	612690	Case - Battery	1
14	926641	Screw - Hex Washer Hd.	
		Thread Forming	2
15	614243	Knob	2
*	92-1743	Charger - Battery	1

*Not Illustrated

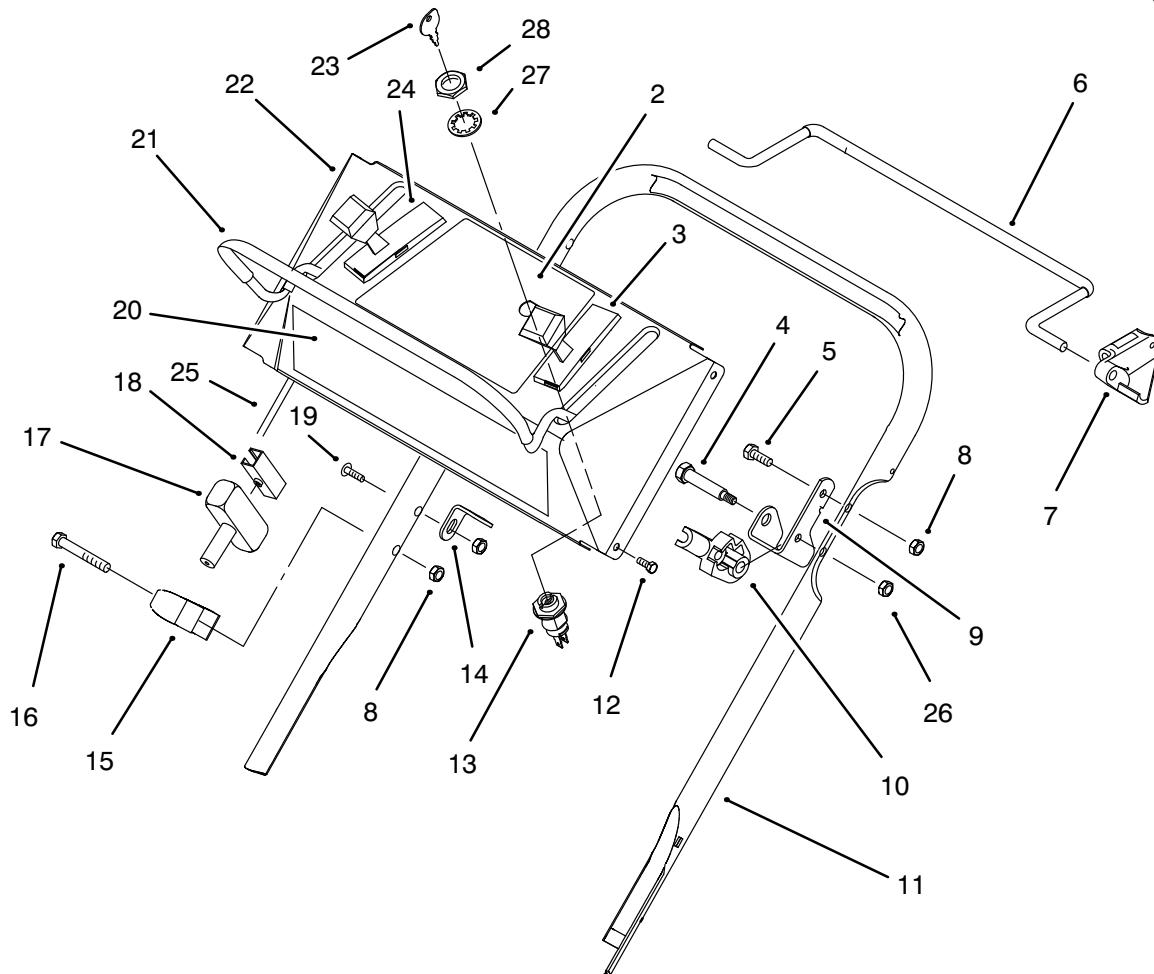

C-1922B

UPPER HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
2	93-7165	Decal - Warning	1	16	321-51	Screw - Hex Hd. Cap	1
3	93-3683	Cable - Throttle	1	17	612825	Handle - Starter	1
4	613050	Bolt	1	18	612824	Clip - Rope Insert	1
5	321-4	Screw - Hex Hd. Cap	1	19	92-2268	Screw - Handle	1
6	92-1617	Bail - Control S.P.	1	20	92-9561	Decal - Console Front	1
7	92-5412	Stop - Pivot	1	21	92-1093	Bail - Engine Control	1
8	3296-73	Nut - Lock	3	22	16-7109	Panel - Control (Incl. Ref. #2, & 20)	1
9	92-1094	Bail - Stop Bracket	1	23	62-7770	Key	1
10	92-1078	Cam - Brake	1	24	92-8926	Control - Ground Speed	1
11	92-1092	Handle - Upper	1	25	93-3248	Cable - Control	1
12	92-9665	Screw - Phillips Hd.	4	26	3296-56	Nut - Lock	1
13	46-5780	Switch - Starter	1	27	3254-5	Washer - Star	1
14	92-2928	Bracket - Cable Anchor	1	28	218-461	Nut	1
15	92-7720	Guide - Rope	1				

LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No.	Qty.	Part No.	Description	Pg. Ref. No. No.	Qty.	
130743	Nut - Flywheel	8	10	1	Screw - Self Tapping	6	8	4
303259	Washer	5	23	1	Seal - Upper Oil	9	13	1
303712	Ring - Retaining	9	17	2	Actuator - Brake Lever	9	1	1
306375	Nut	9	48	1	Brace - Alternator	8	4	1
306407	Washer	12	19	2	Plug	10	4	2
306407	Washer	9	43	2	Washer	10	15	1
306992	Washer - Lock	12	17	1	Screw	6	9	4
316959	Washer - Lock	8	11	1	Rope	7	6	1
317893	Strap - Tie	8	13	1	Pad - Battery	14	7	1
328712	Nut	12	18	1	Blade 21	6	21	1
602587	Plate - Reed Hold Down	9	35	1	Bracket - Starter Mounting	12	7	1
602588	Reed	9	36	1	Case - Battery	14	13	1
602850	Gasket - Float Chamber	10	9	1	Line - Fuel	6	17	1
603014	Bolt	8	5	1	Clip - Rope Insert	15	18	1
603164	Nut - Blade	6	23	1	Handle - Starter	15	17	1
604604	Grommet	3	15	3	Plate - Contact	9	46	1
605120	Grommet	6	14	1	Shield	9	24	1
605120	Grommet	9	27	1	Screw - Reed To Cover	9	34	2
605255	Washer - Flat	5	22	1	Hub - Starter	7	8	1
606537	Screw	8	14	1	Pulley	7	7	1
606608	Pin - Wrist	9	16	1	Screen - Fuel Line	6	18	1
607199	Key - Flywheel	9	14	1	Bolt	15	4	1
607213	Gasket - Fuel Cap	6	12	1	Bracket - C.D. Mounting	9	28	1
607526	Screw - C.D. Mounting	9	6	4	Screw	12	9	2
607560	Plate - Cover	4	13	1	Screw - Cover to	9	38	1
607601	Screw	6	30	3	Screw - Brake Mtg. Brkt.	9	40	2
608175	Bar - Toe	4	11	1	Screw	10	6	4
608311	Nut	8	3	1	Washer - Pinion Stop	12	14	1
608622	Ring - Retaining	12	15	1	Screw	6	29	1
608850	Screw	10	10	4	Plate - Gear Cover	12	5	1
609123	Plug	9	32	4	Bolt - Shoulder	9	5	1
609130	Screw	12	6	3	Plug - Spark	9	22	1
609150	Baffle Fuel Cap	6	13	1	Knob	14	15	2
609229	Spring - Drag	12	11	1	Strap - Tie	9	26	1
609471	Screw	12	8	1	Tie - Strap	14	3	2
609471	Screw	6	27	3	Screw	8	6	1
609482	Screw - Pan Hd. Sems	10	5	2	Screw	9	29	3
609493	Element - Air Filter	11	3	1	Washer - Stepped	5	15	2
609568	Washer	12	4	1	Cover - Wheel	5	16	2
609572	Sleeve	12	16	1	Bracket - Wheel Height Adj.	3	12	2
609786	Support - Crankshaft	6	26	1	Screw - Sems Thr'd Form.	3	16	2
609808	Screw	8	12	2	Knob - Cover Plate	3	1	1
609947	Screw	8	7	3	Screw - Handle	14	2	2
609976	Pulley	6	33	1	Housing - Applique	3	14	1
610165	Retainer	10	2	1	Plate & Collar Assembly	6	20	1
610257	Spring - Pinion Return	12	13	1	Liner - Split (1 pair)	9	10	1
610258	Pinion	12	12	1	Float & Arm Assembly	10	16	1
610345	Screw - Set	6	32	1	Lead - High Tension	9	25	1
610358	Nut - Lock	3	2	2	Ring Set	9	18	1
610358	Nut - Lock	5	17	2	Bearing - Upper Main	9	12	1
610383	Retainer - Cover	11	1	Brake Assembly	9	4	1	
610834	Collar - Adjustment	10	1	Relay	8	15	1	
611071	Filter - Fuel	10	12	1	Electric Starter Assembly	12	*	1
611073	Screw - Set	9	37	1	Motor Housing & Pin Ass'y	12	3	1
611191	Clip - J	8	8	1	Pinion - Spring & Clutch	12	10	1
611211	Spring - Brake	9	41	1	Muffler Cover Assembly	6	25	1
611213	Retainer	9	45	1	Module - C.D. Ignition	9	31	1
611214	Spring - Cable Return	9	2	Flywheel	8	9	1	
611215	Base - Shroud	8	2	Cylinder & Crankshaft Cover	9	21	1	
611327	Cap - Fuel	6	11	1	Lead	9	3	1
611337	Bracket	9	39	1	Starter Assembly	6	7	1
611385	Pinion - Motor shaft	12	2	Kit - Dog	7	9	1	
611386	Gear - Driven	12	1	Needle Bearing Set	9	20	1	
611393	Screw - Cap	9	8	2	Alternator Assembly	9	7	1

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
684301	Base - Starter	6 6 1	92-1094	Bail - Stop Bracket	15 9 1
684567	Starter Housing & Shaft	7 2 1	92-1099	Bolt - Shoulder	3 10 2
684622	Starter Assembly	7 * 1	92-1604	Cap - Hub	3 11 4
684776	Wheel & Tire Assembly 6	3 9 2	92-1617	Bail - Control S.P.	15 6 1
926641	Screw - Hex Washer Hd.	4 1 2	92-1630	Fan - Mulching	6 22 1
926641	Screw - Hex Washer Hd.	14 14 2	92-1648	Screw - Engine	6 24 3
16-5539	Shroud & Tank Assembly	6 5 1	92-1743	Charger - Battery	14 * 1
16-7109	Panel - Control	15 22 1	92-2268	Screw - Handle	15 19 1
24-7920	Cover - Drive Shaft	5 24 1	92-2928	Bracket - Cable Anchor	15 14 1
29-9570	Bushing - Yoke	13 11 1	92-4856	Bolt - Shoulder	3 8 2
36-4780	Washer	13 17 1	92-4921	Connecting Rod Assembly	9 9 1
36-4791	Washer - Thrust	13 20 2	92-4923	Piston & Ring Set	9 19 1
38-7820	Bearing - Ball	13 2 1	92-4927	Bearing Assembly	9 15 1
39-5770	Decal - Danger	4 12 1	92-4935	Spring & Keeper	7 3 1
40-1940	Washer	3 3 6	92-4944	Spring - Governor	10 21 1
44-2750	Body - Primer	10 26 1	92-4948	Gasket	11 5 2
44-3175	Hose - Primer	10 27 1	92-5412	Stop - Pivot	15 7 1
46-5780	Switch - Starter	15 13 1	92-5790	Pinion - Bevel	13 27 1
46-6811	Screw - Hex Washer Hd.	4 10 2	92-5791	Spacer	13 5 1
47-2480	Stop - Rope	6 10 1	92-6353	Short Block	9 * 1
49-2040	Screw	13 21 6	92-6370	Main Jet	10 13 1
55-3760	Pinion - 15 Tooth	13 23 1	92-6371	Nozzle	10 14 1
55-3770	Gear - 49 Tooth	13 28 1	92-6373	Disc - Throttle	10 23 1
55-3780	Pinion - 20 Tooth	13 24 1	92-6375	Crankshaft	9 11 1
55-3790	Gear - 44 Tooth	13 29 1	92-6376	Air Vane & Shaft	10 24 1
55-3800	Pinion - 25 Tooth	13 25 1	92-6388	Plate - Muffler	6 28 1
55-3810	Gear - 39 Tooth	13 30 1	92-6389	Pin	10 17 1
55-7520	Pack - Battery	14 12 1	92-6518	Cable - Traction	14 6 1
60-8710	Gearcase - Upper	13 9 1	92-6535	Cap - End	5 20 2
60-8730	Gear Case Cover	13 22 1	92-6537	Handle - Lower	14 1 1
60-8750	Bushing - Inter. Shaft	13 19 2	92-6539	Spring Arm Assembly - R.H.	5 * 1
60-8770	Bushing - Output	13 18 1	92-6540	Spring Arm Assembly - L.H.	5 18 1
60-8790	Sleeve - Gear	13 31 1	92-7675	Housing - 21	4 9 1
60-8800	Shaft - Intermediate	13 26 1	92-7699	Bracket - Actuator	4 4 1
60-8810	Retainer - Shift Fork	13 12 1	92-7720	Guide - Rope	15 15 1
60-8821	Lever - Shift	5 1 1	92-7736	Shield - Trailing	4 7 1
60-8840	Pulley - Half	13 6 2	92-7746	Arm - Rear Height Adjust.	5 4 2
60-8850	Bushing - Output	13 3 1	92-7748	Screw	4 3 2
60-8870	Yoke - Shift	13 10 1	92-7869	Gear Case Assembly	13 * 1
62-7770	Key	15 23 1	92-7869	Gear Case Assembly	4 6 1
65-2720	Ring - Retaining	5 7 4	92-7899	Bracket - Traction Cable	14 5 1
65-4710	Ring - Friction	5 8 2	92-8630	Plate - Mulch	3 17 1
65-4720	Spring - Compression	5 12 2	92-8853	Cover - Transmission	4 2 1
65-4730	Washer - Thrust	5 5 2	92-8865	Wire Assembly	14 9 1
65-4740	Washer - Thrust Keyed	5 6 4	92-8917	Cover - Controls	14 10 1
65-4750	Gear - Pinion	5 11 2	92-8926	Control - Ground Speed	15 24 1
65-4760	Washer	5 9 2	92-9561	Decal - Console Front	15 20 1
65-4770	Shaft - Output	13 4 1	92-9568	Decal - Recoil	6 15 1
65-5250	Clip - Spring	13 16 1	92-9665	Screw - Phillips Hd.	15 12 4
66-6040	Key - Rocking R.H.	5 * 1	92-9673	Bolt - Shoulder	3 4 2
66-6050	Key - Rocking L.H.	5 10 1	92-9691	Float Chamber	10 11 1
66-7460	Bulb - Primer	10 25 1	92-9697	Float, Valve, & Body Ass'y	10 19 1
76-0760	Key - Shift	13 14 2	93-1221	Shield - Heat	11 4 1
76-0770	Collar - Shift	13 15 1	93-1225	Lever - Speed Adjust	10 3 1
76-0780	Sleeve - Shift Key	13 13 1	93-1226	Bracket - Throttle Control	10 22 1
82-8780	Retainer - Cable	5 3 1	93-1228	Body - Carburetor	10 7 1
92-1006	Spring Arm Ass'y - Front	3 6 2	93-1231	Cover - Air Filter	11 2 1
92-1008	Knob - Height Adjust	3 5 4	93-1232	Bracket - Primer	10 8 1
92-1042	Wheel & Tire Assembly	5 13 2	93-1233	Gasket - Exhaust	9 33 1
92-1043	V-Belt	5 21 1	93-1233	Gasket - Muffler	6 31 1
92-1057	Bolt - Shoulder	5 14 2	93-1239	Spring - Contact	9 23 1
92-1078	Cam - Brake	15 10 1	93-3191	Decal - No Rust	4 14 1
92-1092	Handle - Upper	15 11 1	93-3248	Cable - Control	15 25 1
92-1093	Bail - Engine Control	15 21 1	93-3683	Cable - Throttle	15 3 1

*Not Illustrated

LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No.	No.	Qty.	Part No.	Description	Pg. Ref. No.	No.	Qty.
93-4300	Harness - Wire	8	1	1	3255-7	Washer - Ext. Tooth Lock	9	47	1
93-4301	Case Assembly	9	42	1	3256-24	Washer	13	8	1
93-4319	Carburetor Complete	10	*	1	3272-10	Pin - Cotter	5	25	1
93-7165	Decal - Warning	15	2	1	3285-19	Pin - Groove	13	1	1
93-7250	Decal - Warning	4	8	1	3290-413	Washer - Belleville	3	7	2
218-461	Nut	15	28	1	3296-5	Nut	13	7	1
256-251	Bushing - Spacer	4	5	2	3296-39	Nut - Lock	3	13	2
321-4	Screw - Hex Hd. Cap	15	5	1	3296-56	Nut - Lock	15	26	1
321-6	Screw - Hex Hd. Cap	9	44	1	3296-73	Nut - Lock	15	8	3
321-51	Screw - Hex Hd. Cap	15	16	1	32103-29	Nut - Wing	14	11	2
3230-29	Bolt - Carriage	14	4	2	32144-53	Screw - Self Tapping	6	34	1
3253-33	Washer - Lock	14	8	2	32144-70	Screw - Tapping	5	2	1
3254-5	Washer - Star	15	27	1	32144-85	Screw - Hex Hd Tapping	5	19	2

MAINTENANCE RECORD

MAINTENANCE RECORD