

# **LAWN-BOY®**

## **SILVER SERIES 2 CYCLE WALK-BEHIND MOWER**

MODEL NO. 10227-6900001 & UP  
MODEL NO. 10304-6900001 & UP

---

## **PARTS CATALOG**

## PRODUCT CHANGES

In an effort to make improvements available to LAWN-BOY owners as quickly as possible, minor changes are incorporated into LAWN-BOY products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your Parts Catalog, see your LAWN-BOY Distributor or his Authorized LAWN-BOY Service Dealer for information and part numbers.

## IDENTIFICATION AND ORDERING

### MODEL AND SERIAL NUMBERS

The Product two identification numbers; a model number and a serial number. The two numbers are stamped on a plate mounted on the deck. In any correspondence concerning the Product, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized Service Dealer, supply the following information:

1. Model and serial number.
2. Part number, description, and the quantity of part(s) desired.

 
**NOTE:** Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

# TABLE OF CONTENTS

Description	Page	Description	Page
Housing Assembly (Model No. 10227) .....	1	Handle Assembly .....	8
Housing Assembly (Model No. 10304) .....	2	Engine Assembly .....	9-14
Cover Assembly (Model No. 10227) .....	3	Recoil Starter Assembly .....	15
Cover Assembly (Model No. 10304) .....	4	Carburetor Assembly .....	16
Gear Cas Assembly (Model No. 10304) .....	5	Lawn-Boy Part Number Index .....	17-19
Rear Axle Assembly (Model No. 10304) .....	6	Maintenance .....	20-22
Engine Assembly .....	7		

## Accessories


Description	Model / Parts No.	Description	Model / Parts No.
Side Bagging Kit .....	Model No. 89814	Leaf Shredder Kit .....	Model No. 89860
Rear Bagging Kit .....	Model No. 89800	Leaf Bag Kit w/Chute .....	Model No. 89811
Leaf Bag .....	Model No. 89804	Mow & Feed Fertilizer Spreader .	Model No. 52070

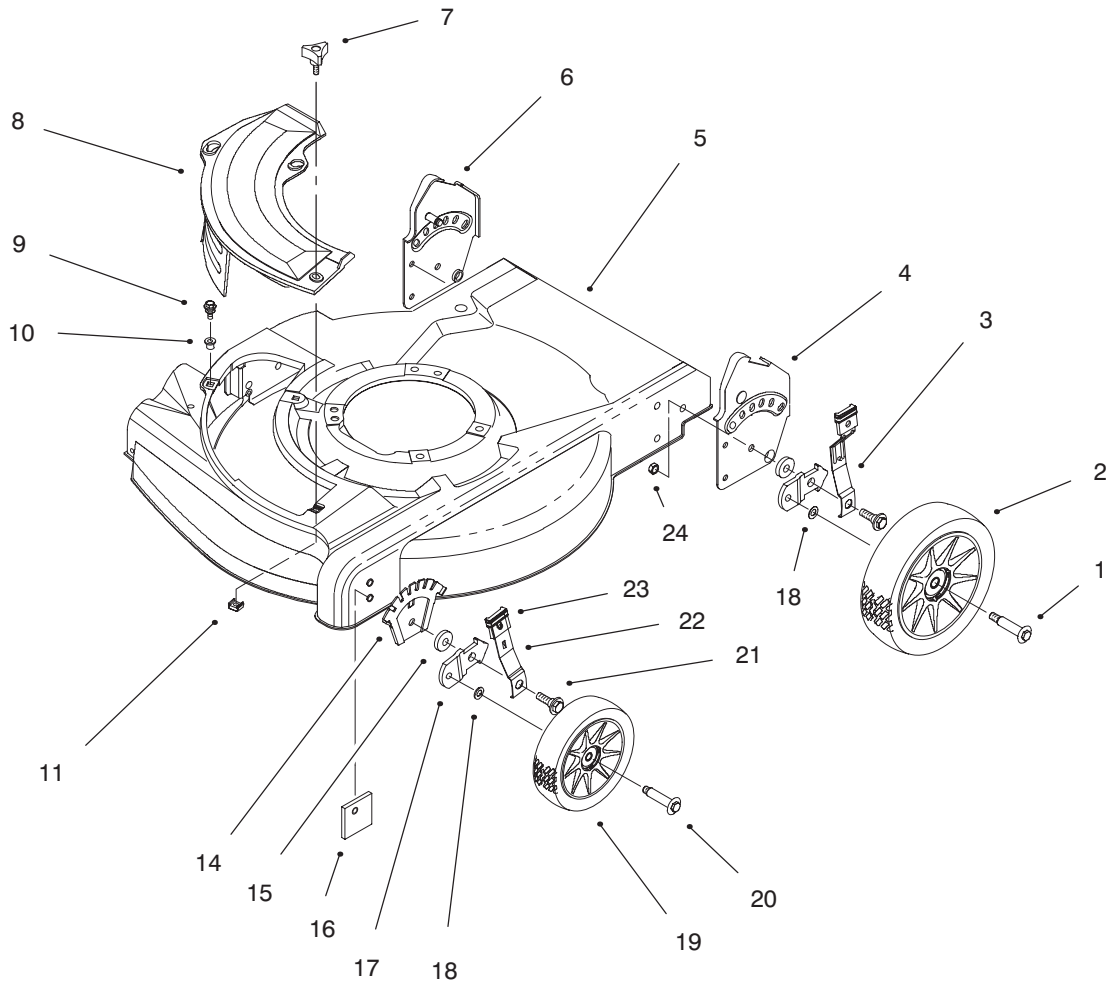

C-2493

## HOUSING ASSEMBLY (MODEL NO. 10227)

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	614650	Bolt – Shoulder	2	14	92-4881	Plate – Height Adjust	2
2	684777	Wheel & Tire Ass'y 8"	2	15	92-4890	Washer	4
3	92-1005	Spring Arm Assembly	2	16	92-7731	Plate – Baffle	2
4	92-7743	Bracket – Handle L.H.	1	17	614637	Bracket – Wheel Height Adj.	4
5	16-4359	Housing Assembly	1	18	40-1940	Washer	4
6	92-7742	Bracket – Handle R.H.	1	19	684776	Wheel – Tire Assembly 6"	2
7	614682	Knob – Cover Plate	1	20	92-1099	Bolt – Shoulder	2
8	92-8630	Plate – Mulch 21"	1	21	614672	Bolt – Shoulder	4
9	614677	Screw – Sems Thr'd Form	2	22	614687	Spring Arm Ass'y – Front	2
10	94-1610	Grommet – Plastic	2	23	92-1008	Knob – Height Adjust.	4
11	613765	Nut – Cage	1	24	3296-39	Nut – Lock	2

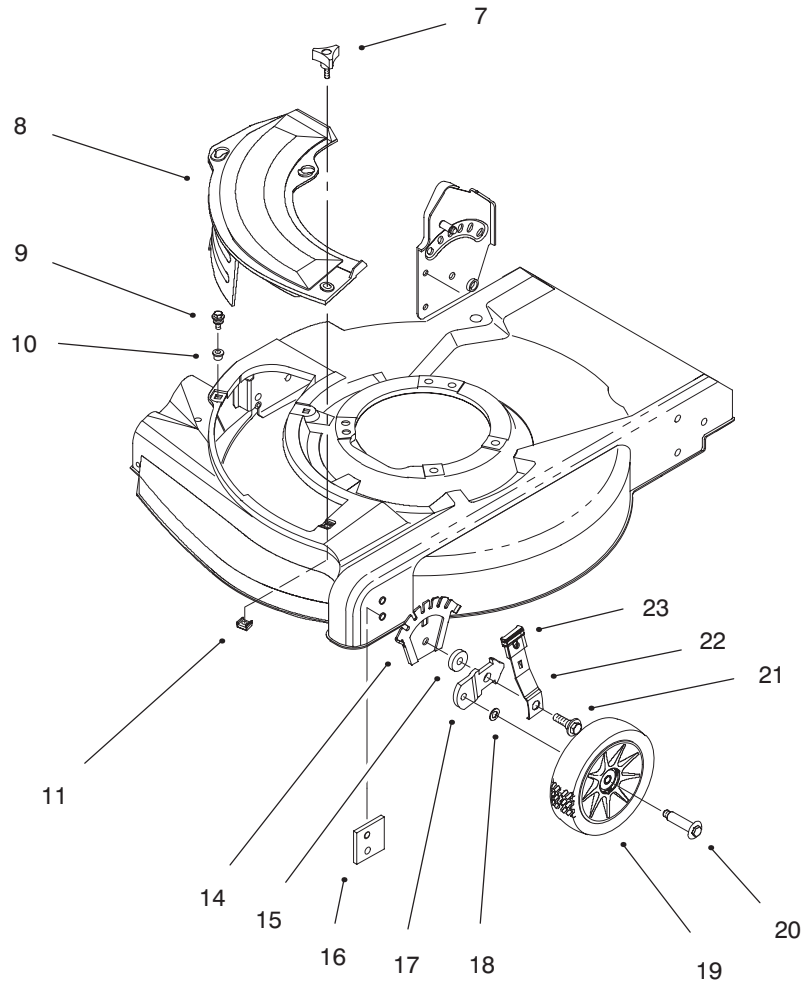


C-2494

## HOUSING ASSEMBLY (MODEL NO. 10304)

 Ref. No.	Part No.	Description	No. Used
7	614682	Knob – Cover Plate	1
8	92-8630	Plate – Mulch 21”	1
9	614677	Screw – Sem Thr’d Form	2
10	94-1610	Grommet – Plastic	2
11	613765	Nut – Cage	1
14	92-4881	Plate – Height Adjust	2
15	92-4890	Washer	2
16	92-7731	Plate – Baffle	2

Ref. No.	Part No.	Description	No. Used
17	614637	Bracket – Wheel Height Adj.	2
18	40-1940	Washer	2
19	684776	Wheel & Tire Ass’y 6”	2
20	92-1099	Bolt – Shoulder	2
21	614672	Bolt – Shoulder Height Adj.	2
22	614687	Spring Arm Ass’y – Front	2
23	92-1008	Knob – Height Adjust	4

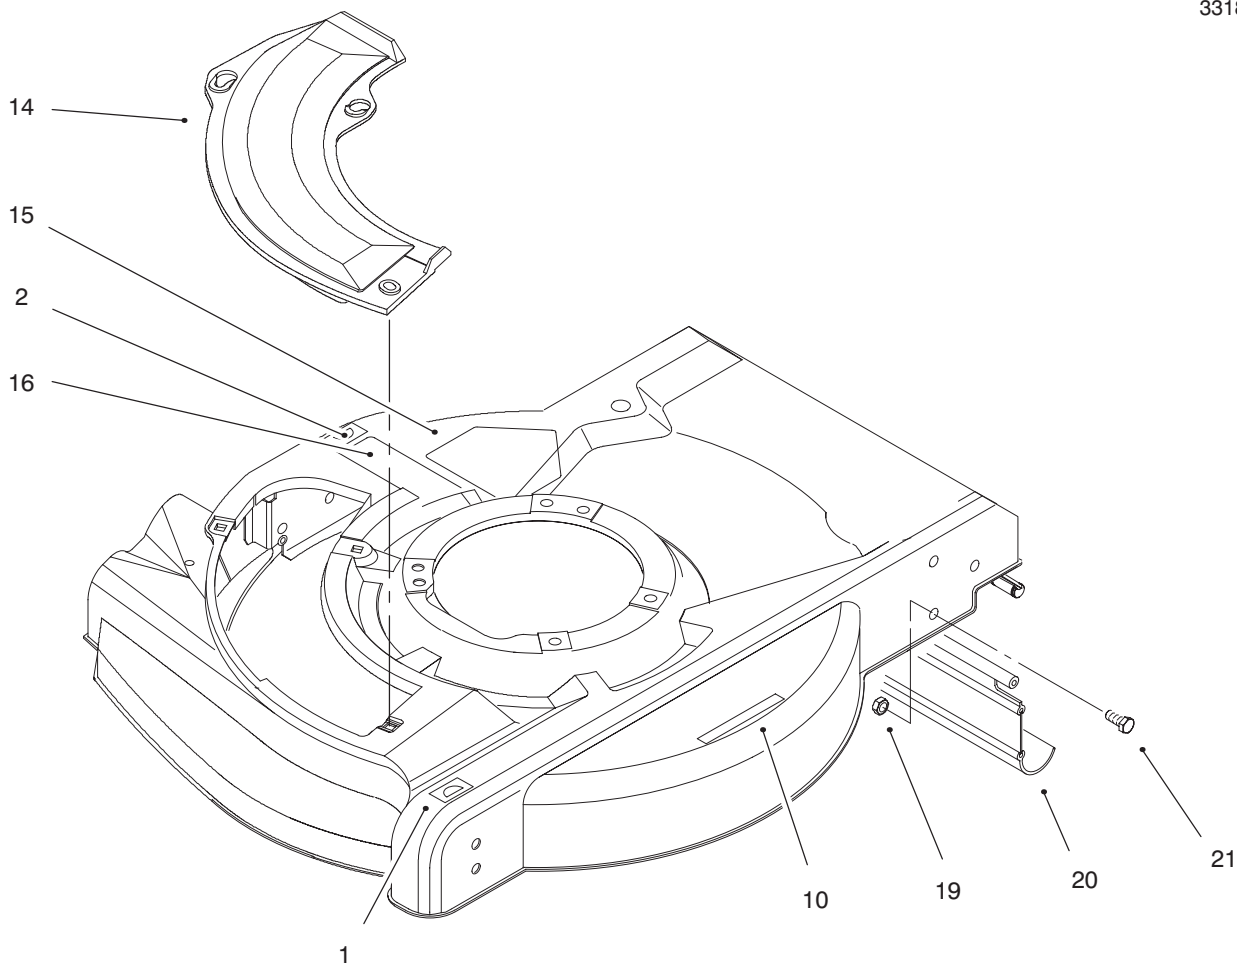


C-2495

### COVER ASSEMBLY (MODEL NO. 10227)

 Ref. No.	Part No.	Description	No. Used
1	92-2915	Decal - H.O.C.	2
2	92-2914	Decal - H.O.C.	2
10	93-7250	Decal - Warning	1
14	607560	Plate - Cover	1
15	39-5770	Decal - Danger	1

Ref. No.	Part No.	Description	No. Used
16	92-1097	Decal - Discharge	1
19	3296-29	Nut - Lock	4
20	92-8647	Shield - Trailing	1
21	322-3	Screw - Hex Hd. Cap	4

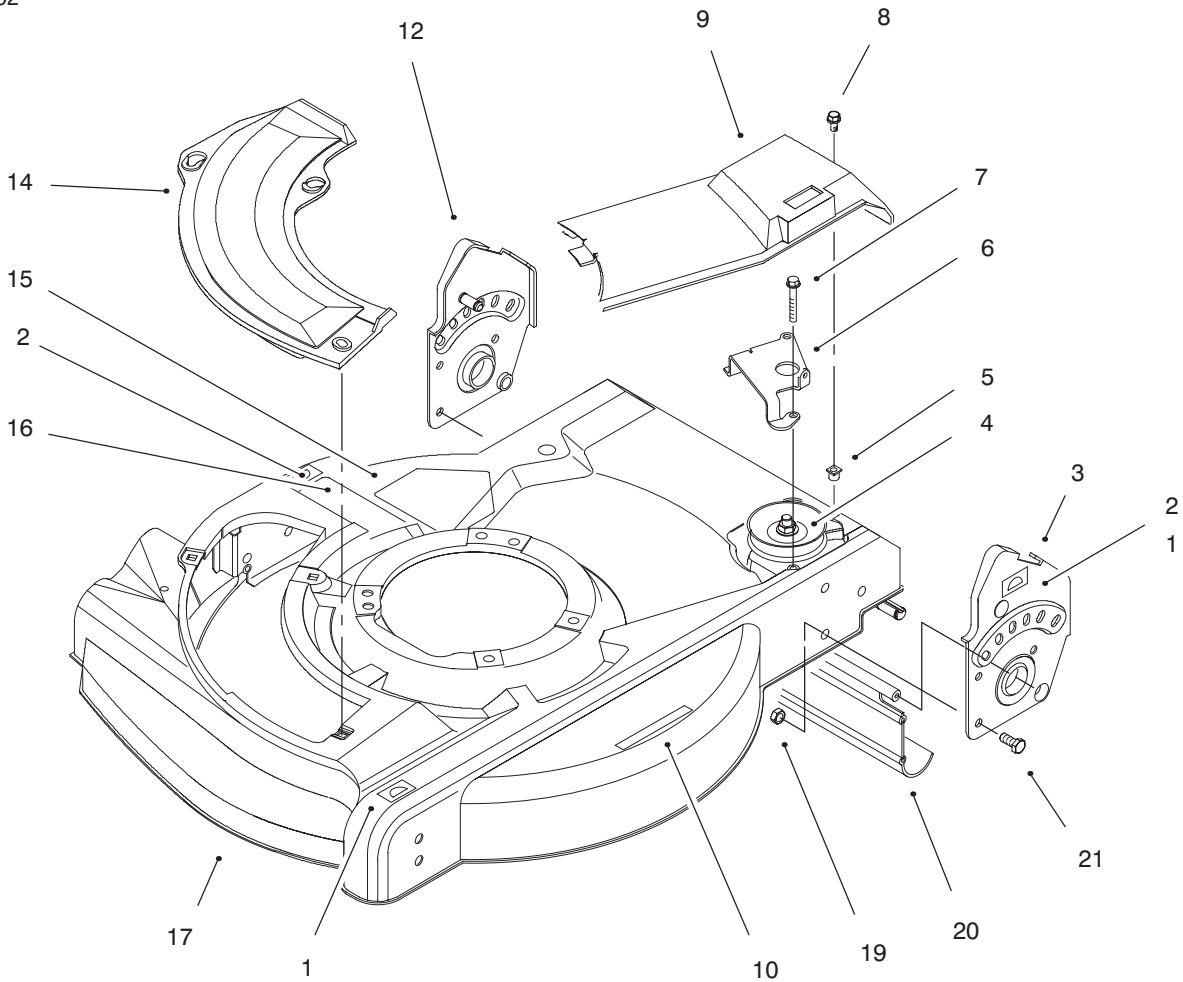


C-2496

## COVER ASSEMBLY (MODEL NO. 10304)

 Ref. No.	Part No.	Description	No. Used
1	92-2915	Decal - H.O.C.	2
2	92-2914	Decal - H.O.C.	2
3	92-7724	Bracket - Handle L.H.	1
4	92-7735	Gear Case Assembly	1
5	605120	Grommet	1
6	92-7728	Guide - Transmission	1
7	49-2040	Screw - Hex Hd.	2
8	92-9662	Screw - Phillips Hd.	1
9	614671	Cover - Drive	1


Ref. No.	Part No.	Description	No. Used
10	93-7250	Decal - Warning	1
12	92-7723	Bracket - Handle R.H.	1
14	607560	Plate - Cover	1
15	39-5770	Decal - Danger	1
16	92-1097	Decal - Discharge	1
17	16-4369	Housing Assembly	1
19	3296-29	Nut - Lock	6
20	92-8647	Shield - Trailing	1
21	322-3	Screw - Hex Hd. Cap	6

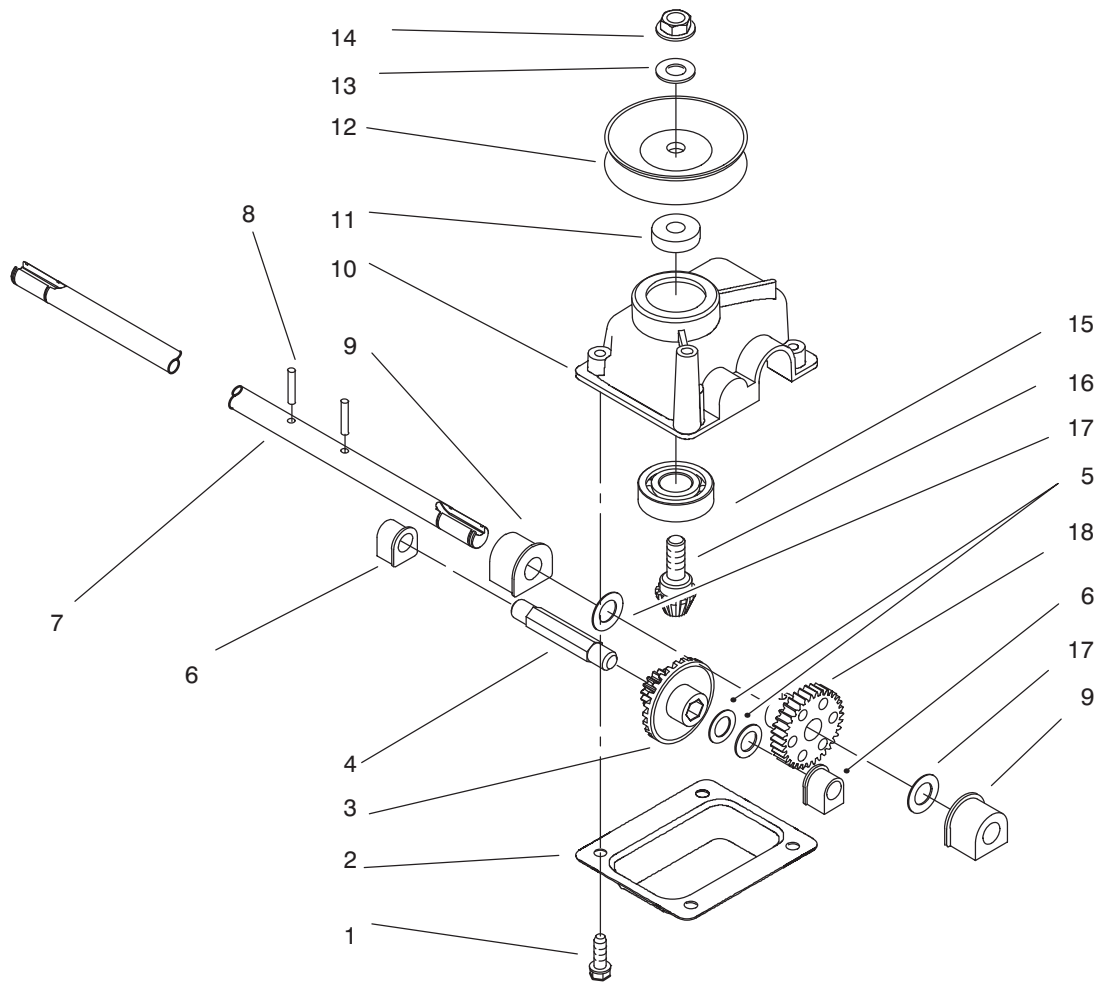

C-1292

### GEAR CASE ASSEMBLY (Model No. 10304)

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Taptite	4	10	92-7727	Gearcase	1
2	614668	Cover - Gear Case	1	11	62-6660	Spacer	1
3	55-3760	Pinion - 15 Tooth	1	12	614669	Pulley - Half	2
4	614696	Shaft - Intermediate	1	13	3256-24	Washer	1
5	36-4791	Washer	2	14	3296-5	Nut	1
6	60-8750	Bushing	2	15	38-7820	Bearing - Ball	1
7	93-0239	Shaft - Output	1	16	60-8890	Gear - Bevel Pinion	1
8	3285-19	Pin - Groove	2	17	36-4780	Washer - Thrust	2
9	60-8850	Bushing - Output	2	18	614596	Gear 34 Tooth	1

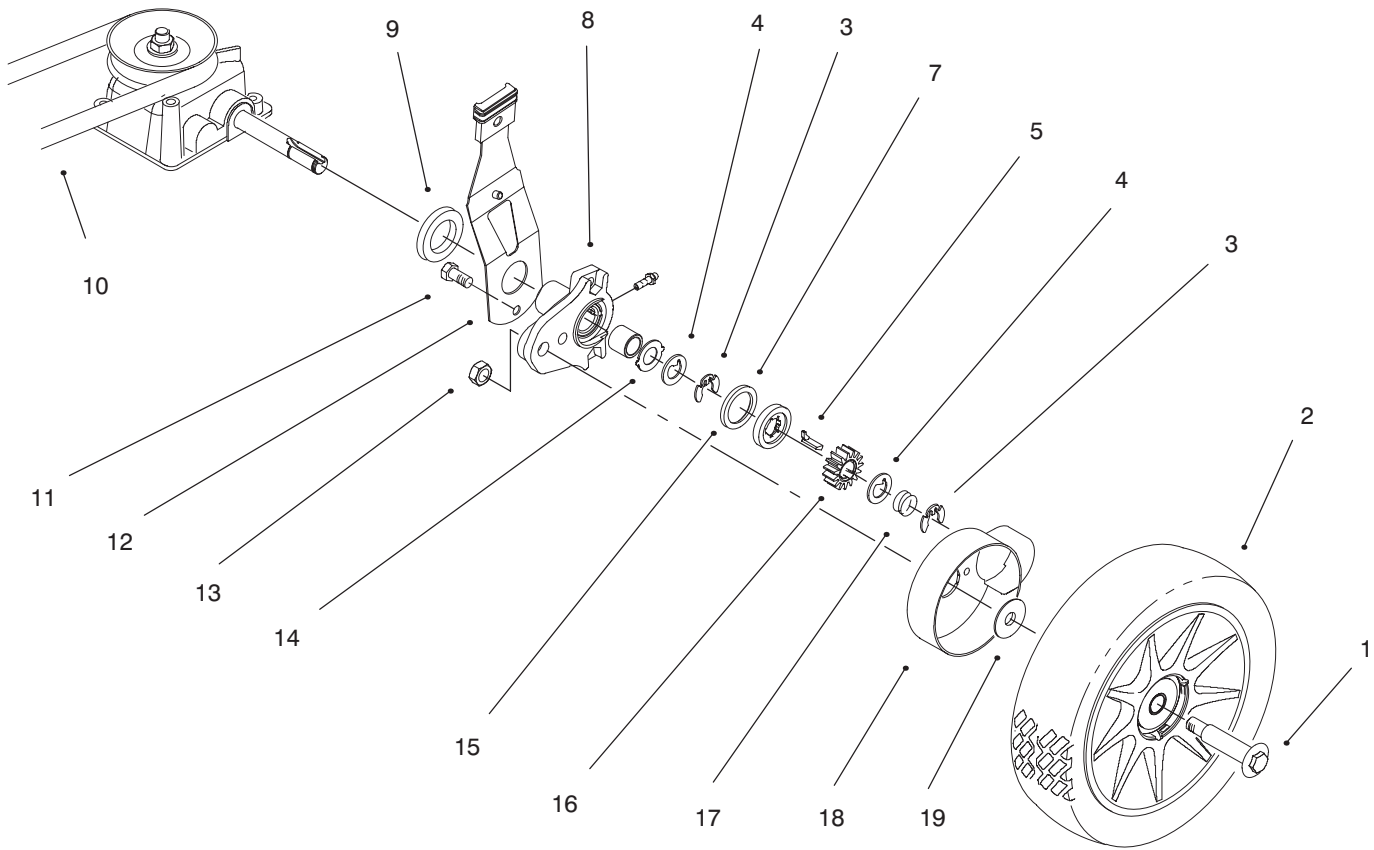

C-2497


## REAR AXLE ASSEMBLY (MODEL NO. 10304)

 Ref. No.	Part No.	Description	No. Used
1	92-1057	Bolt - Shoulder	2
2	92-1042	Wheel & Tire Ass'y 8"	2
3	65-2720	Ring - Retaining	4
4	65-4740	Washer - Thrust Keyed	4
5	66-6050	Key - Rocking L.H.	1
*	66-6040	Key - Rocking R.H.	1
7	65-4710	Ring - Friction	2
8	92-7746	Height Adj. Arm - Rear	2
9	614447	Spacer - Axle Shaft	2
10	92-1043	V-Belt	1

Ref. No.	Part No.	Description	No. Used
11	32144-85	Screw - Hex Hd.	2
12	92-1004	Spring Arm Ass'y	2
13	610358	Nut - Lock	2
14	65-4730	Washer - Thrust	2
15	65-4760	Washer	2
16	65-4750	Gear - Pinion	2
17	65-4720	Spring - Compression	2
18	94-1609	Cover - Wheel	2
19	614426	Washer - Stepped	2

\*Not Illustrated



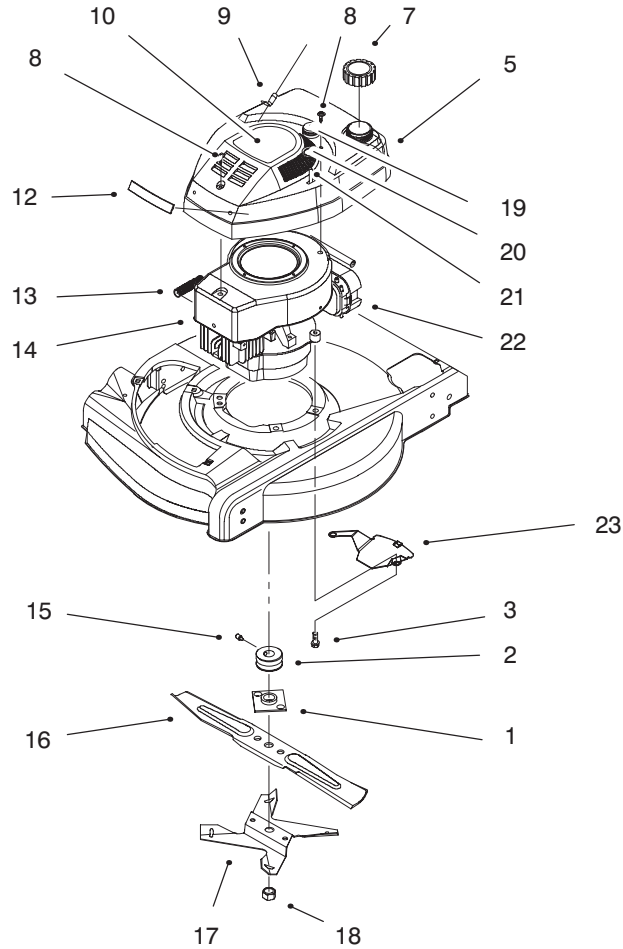


C-2498

## ENGINE ASSEMBLY

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	677525	Plate & Collar Assembly	1	13	93-4306	Spring - Compression	1
2	92-6542	Pulley - Engine (Model No. 10304 Only)	1	14		Engine Assembly	1
3	92-1624	Screw - Engine	3	15	613227	Screw - Set (Model No. 10304 Only)	1
5	92-6380	Tank & Shroud Assembly	1	16	612543	Blade - 21"	1
7	93-3660	Fuel/Oil Cap Assembly	1	17	92-1630	Fan - Mulching	1
8	93-4302	Screw - Sems	3	18	603164	Nut - Blade	1
9	92-1701	Rope - Stop	1	19	66-7460	Bulb - Primer	1
10	93-0295	Decal - Recoil (Model No. 10227 Only)	1	20	44-2750	Body - Primer	1
*	93-0294	Decal - Recoil (Model No. 10304 Only)	1	21	44-3174	Hose - Primer	1
12	92-8615	Applique - Shroud	1	22	612782	Line - Gas	1
				23	93-4196	Shield - Grass (Model No. 10304 Only)	1

\*Not Illustrated

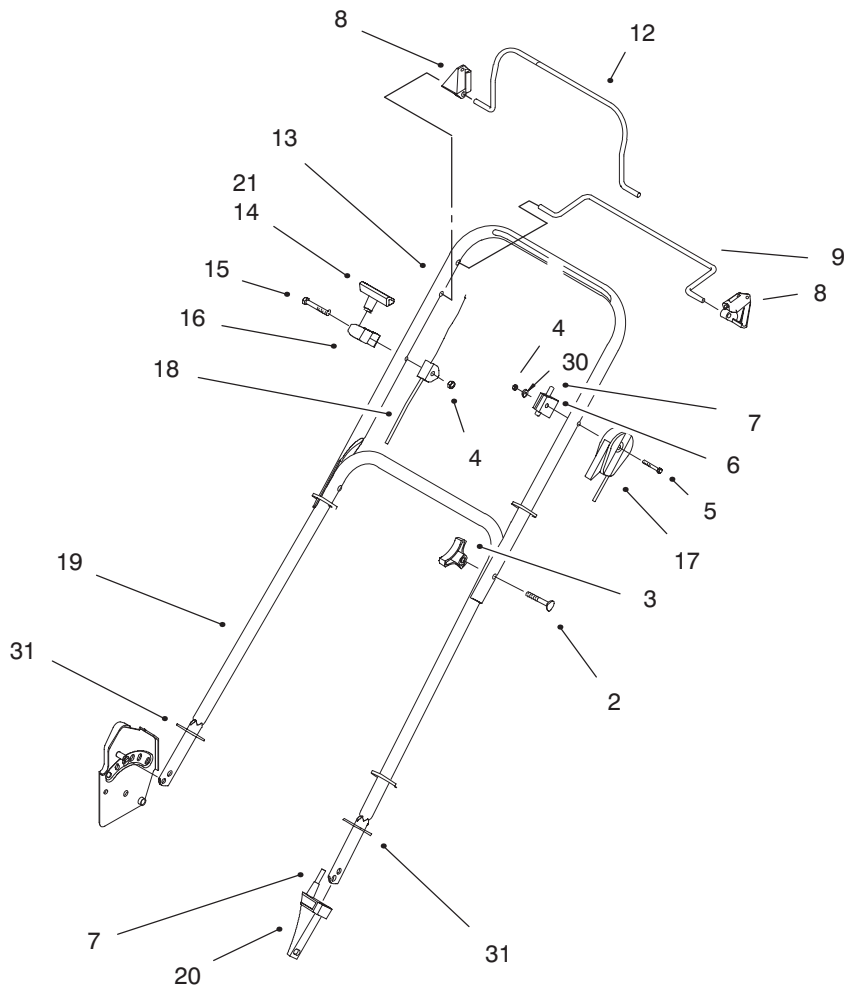


C-2499

## HANDLE ASSEMBLY

 Ref. No.	Part No.	Description	No. Used
2	614697	Screw - Handle	2
3	614243	Knob	2
4	3296-73	Nut - Lock	2
5	321-48	Screw - Hex Hd. Cap (Model No. 10227 Only)	1
5	321-49	Screw - Hex Hd. Cap (Model No. 10304 Only)	1
6	92-7729	Anchor - Cable Upper (Model No. 10304 Only)	1
7	92-7726	Cable - Traction (Model No. 10304 Only)	1
8	92-5412	Stop - Pivot (Model No. 10227 Only)	1
8	92-5412	Stop - Pivot (Model No. 10304 Only)	2
9	92-1001	Bail - SP Control (Model No. 10304 Only)	1


Ref. No.	Part No.	Description	No. Used
12	93-4184	Bail - Flywheel Brake	1
13	93-4185	Handle - Section Upper	1
14	612825	Handle - Starter	1
15	321-5	Screw - Hex Hd. Cap	1
16	93-7383	Guide - Rope	1
17	92-7734	Cable - Throttle 2 Cycle	1
18	92-7738	Cable - Flywheel Brake	1
19	614673	Handle Section - Lower	1
20	93-7380	Anchor - Cable SP Lower (Model No. 10304 Only)	1
21	612824	Clip - Rope Insert	1
30	92-8632	Washer (Model No. 10227 Only)	1
31	93-3653	Handle - Guard (Model No. 10227 Only)	2
31	93-3653	Handle - Guard (Model No. 10304 Only)	1

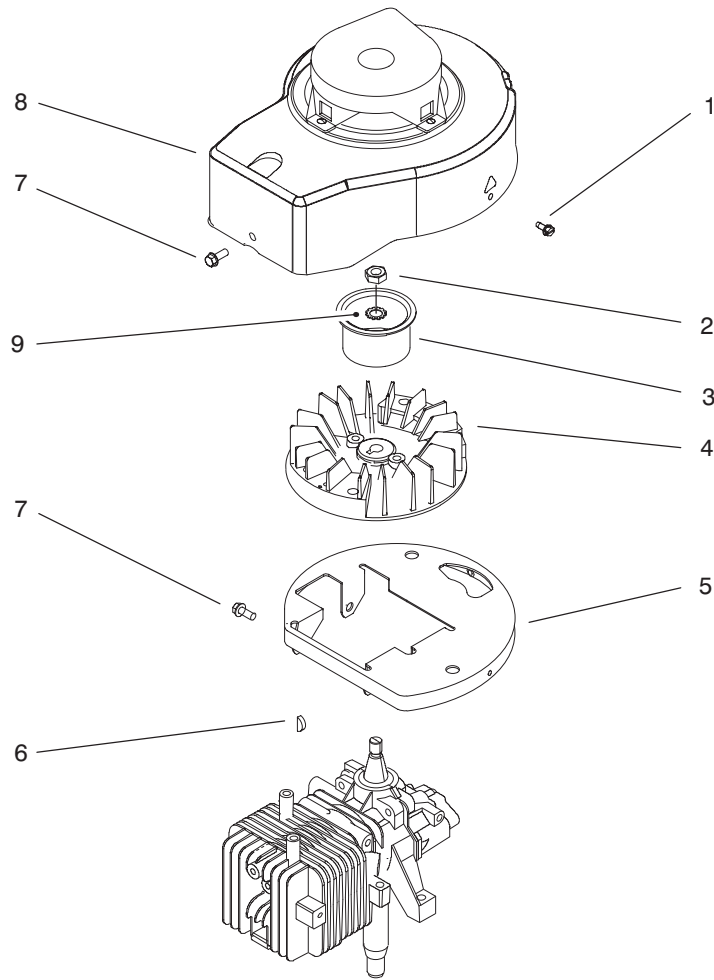

C-2128A

## ENGINE ASSEMBLY

 Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	614699	Screw	3	6	607199	Key	1
2	130743	Nut	1	7	614702	Screw	4
3	614640	Hub – Starter	1	8	93-4304	Shroud Assembly	1
4	684743	Flywheel	1	9	316959	Washer – Lock	1
5	93-1216	Base – Shroud	1				

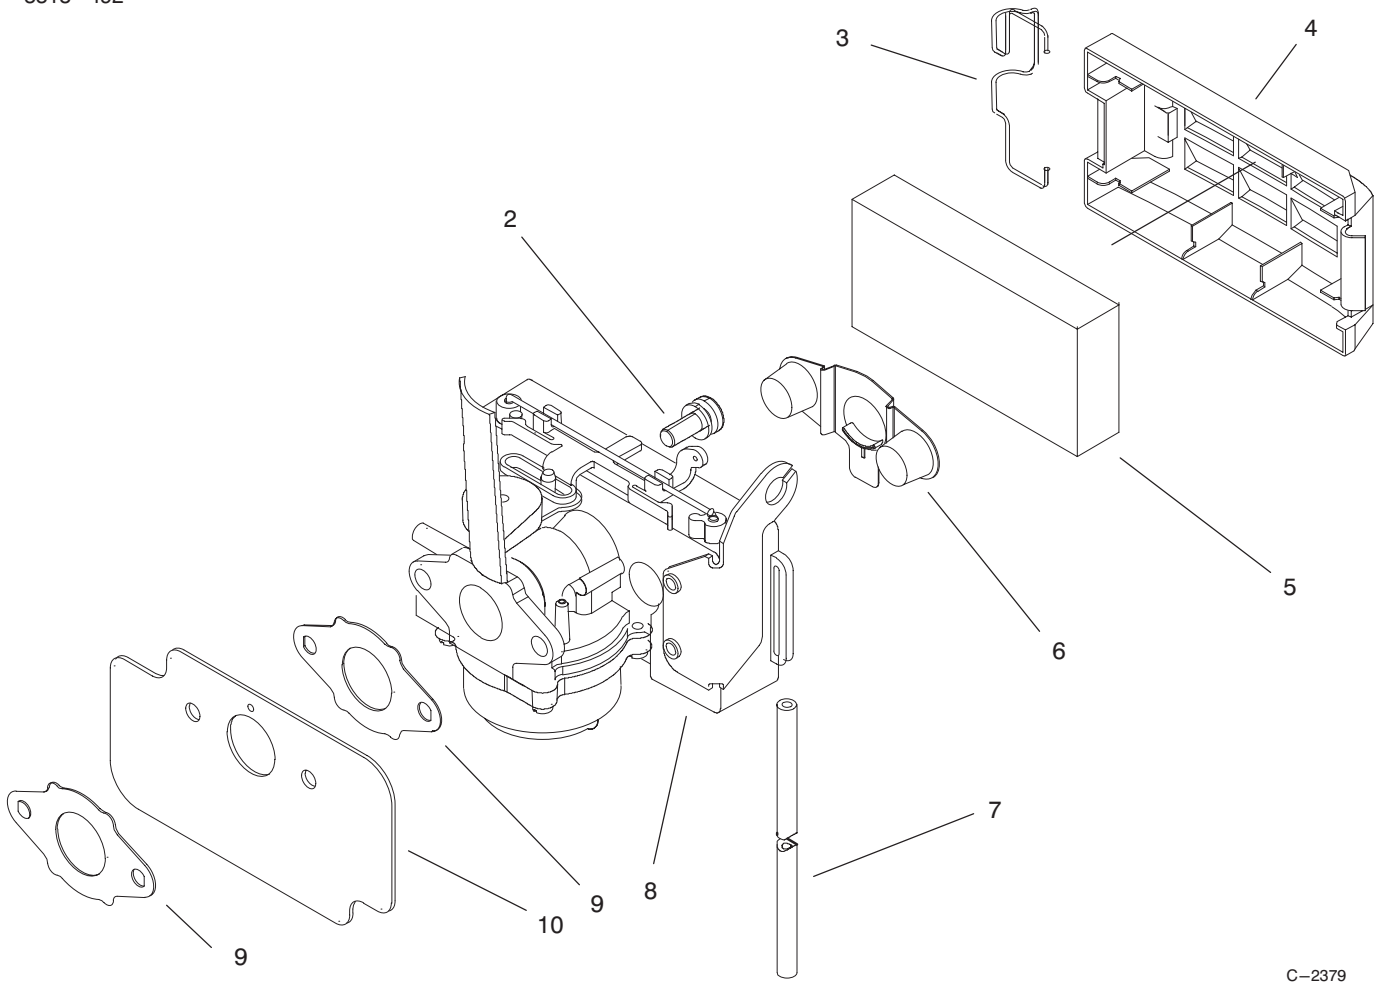


C-2379

### ENGINE ASSEMBLY (Continued)

 Ref. No.	Part No.	Description	No. Used
2	609482	Screw	2
3	610383	Retainer – Filter	1
4	93-1231	Cover – Air Cleaner	1
5	609493	Element – Filter Air	1
6	93-4320	Shield – Fuel	1

Ref. No.	Part No.	Description	No. Used
7	44-3174	Hose – Primer	1
8	93-4331	Carburetor Assembly (Incl. Ref. #9)	1
9	92-4948	Gasket – Carburetor	2
10	93-1221	Shield – Carburetor	1

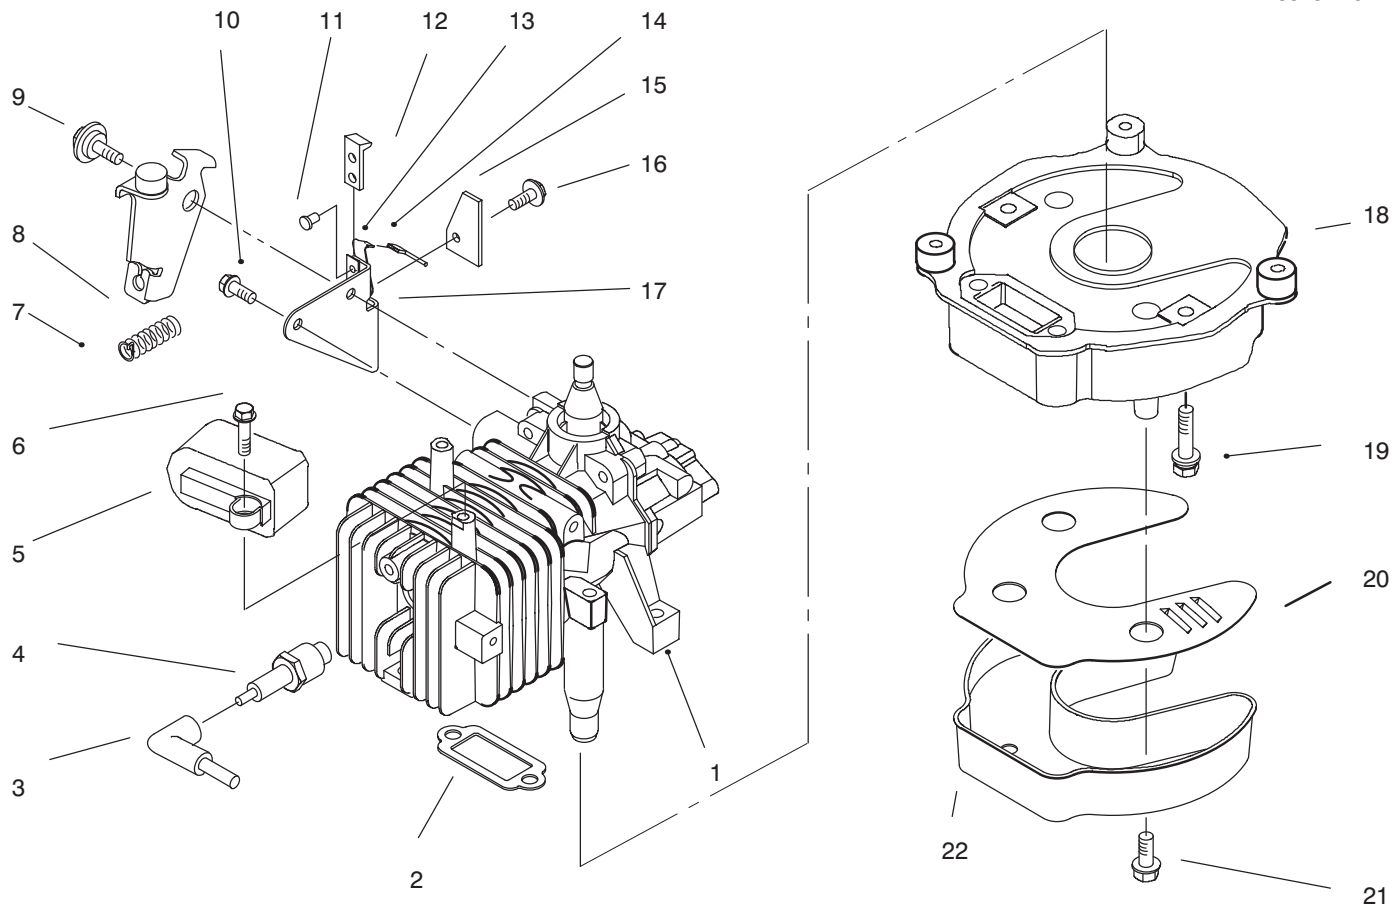


C-1296

## ENGINE ASSEMBLY (Continued) (Serial No. 690001-6908965) (Model No. 10227 Only)

 Ref. No.	Part No.	Description	No. Used
1	94-5737	Short Block	1
2	93-1233	Gasket - Exhaust	1
3	92-1152	CD Ignition	1
*	681678	Cover & Terminal	1
4	614009	Plug - Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw - Hex. Washer Hd.	2
7	66-5370	Spring - Compression	1
8	66-5380	Brake Plate Assembly	1
9	92-9698	Screw - Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290-459	Rivet - Plastic	2
12	92-2925	Strap - Insulation	1
13	60-9010	Strap - Ground	1
14	92-1156	Wire - Brake Switch Lead	1
15	53-4690	Stop - Ground Strap	1
16	12-5450	Screw - Thread Forming	1
17	14-6009	Mounting Plate	1
18	614654	Plate - Muffler	1
19	607601	Screw	4
20	614681	Baffle	1
21	609471	Screw	3
22	614674	Cover - Muffler	1

\*Not Illustrated

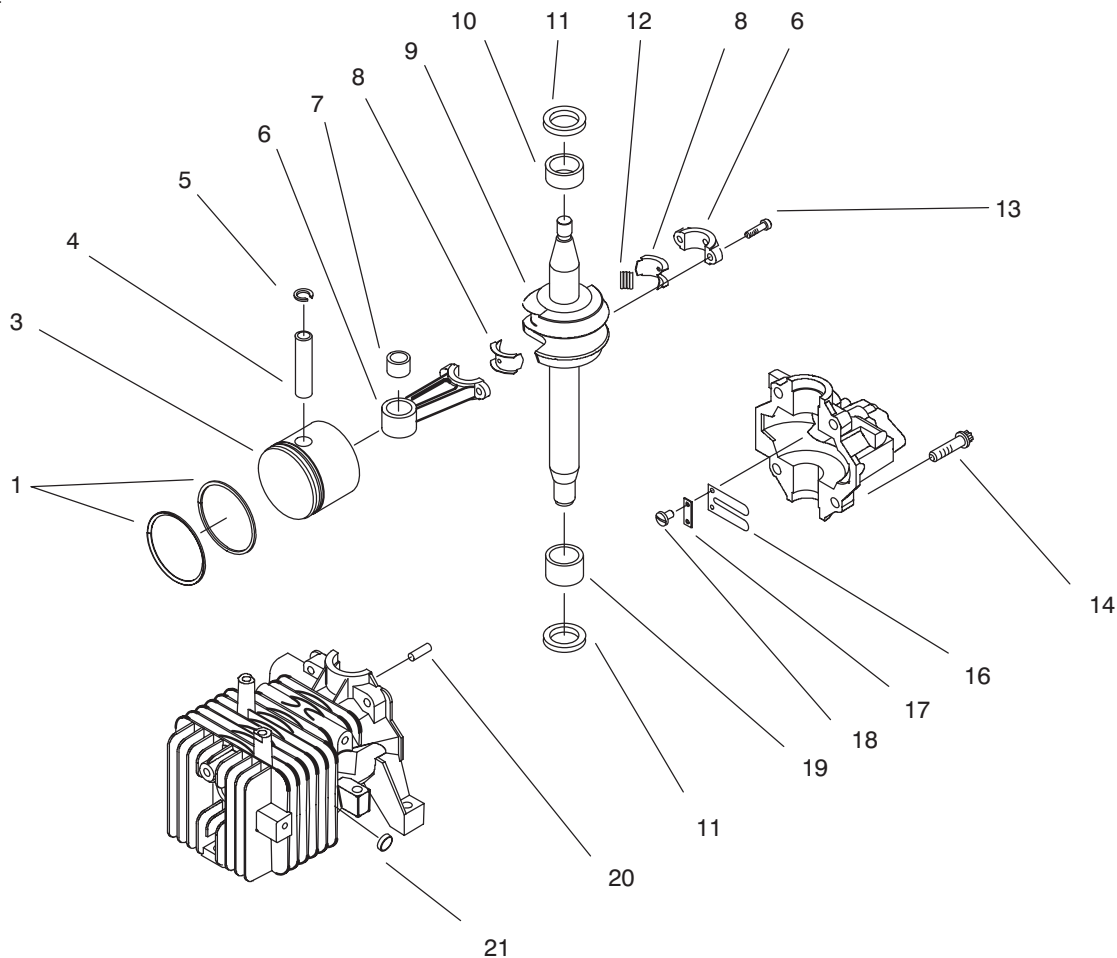


C-1295

## ENGINE ASSEMBLY (Continued) (Serial No. 690001-6908965) (Model No. 10227 Only)

 Ref. No.	Part No.	Description	No. Used
1	681737	Set - Ring	1
3	92-4923	Piston & Ring Set	1
*	92-4925	Piston & Connecting Rod (Incl. Ref. #1-8, 12, & 13)	1
4	606608	Pin - Wrist	1
5	303712	Ring - Retaining	2
6	92-4921	Connecting Rod Assembly (Incl. Ref. #6-8, 12, & 13)	1
7	92-4927	Bearing	1
8	677982	Liner - Split (Set of 2)	1
9	92-6375	Crankshaft	1
10	681830	Bearing - Upper Main	1

Ref. No.	Part No.	Description	No. Used
11	611396	Seal - Oil	2
12	683911	Bearing - Needle	1
13	611393	Screw - Hex. Hd.	2
14	614636	Screw - Torx. Washer Hd.	4
16	602588	Reed - Carburetor	1
17	602587	Reed - Backup Plate	1
18	612872	Screw	2
19	681831	Bearing - Needle	1
20	609629	Dowel	1
21	609123	Plug - Core	4
*	684725	Cylinder & Crankcase Ass'y	1
*	610372	Sealer	1

\*Not Illustrated

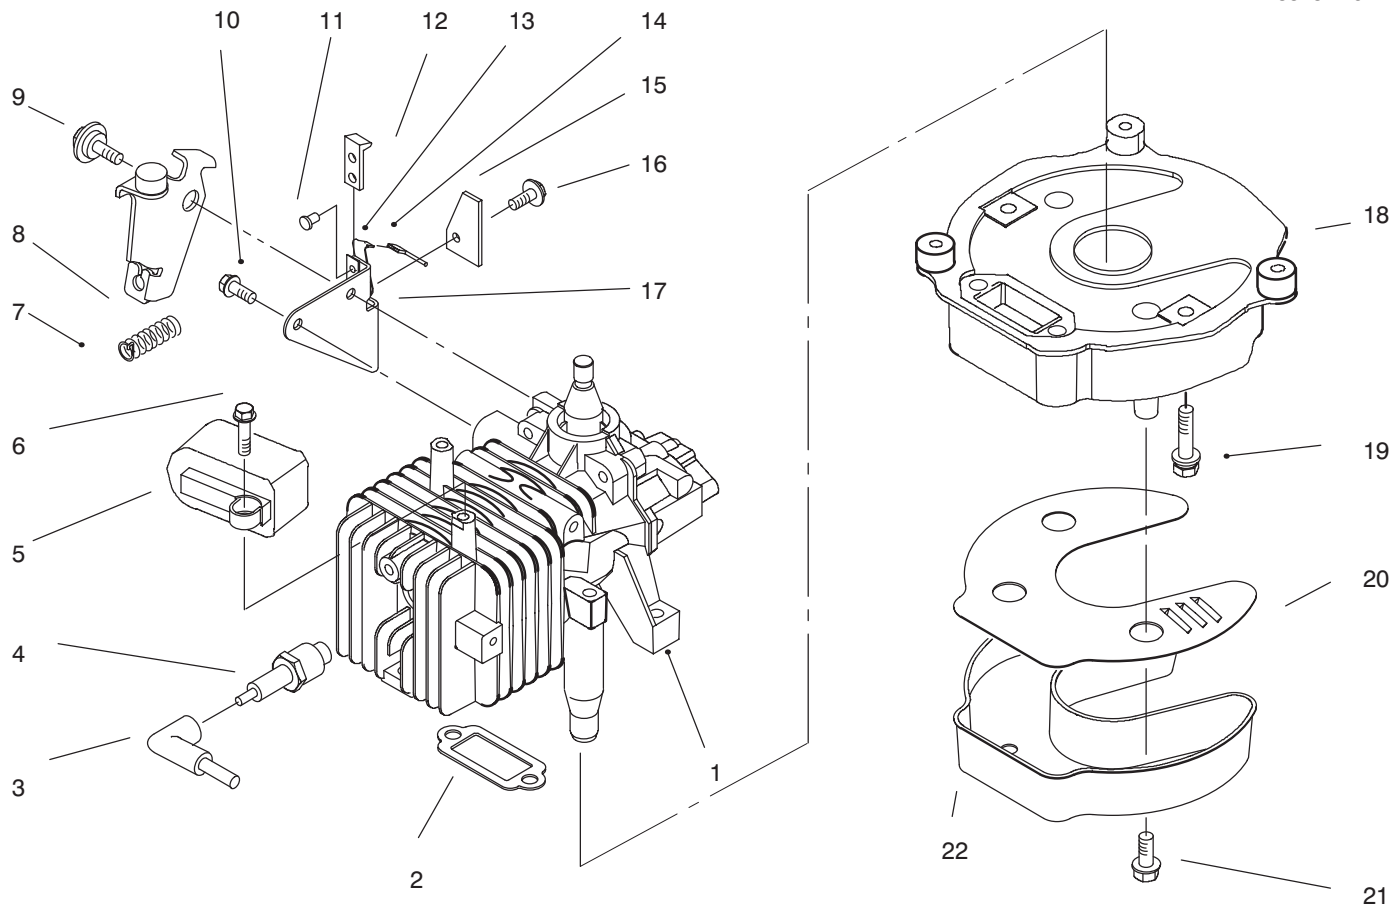


C-1296

**ENGINE ASSEMBLY (Continued)**  
**(Serial No. 6908966 & Up Model No. 10227 Only)**  
**(Serial No. 6900001 & Up Model No. 10304 Only)**

Ref. No.	Part No.	Description	No. Used
1	94-5737	Short Block	1
2	93-1233	Gasket - Exhaust	1
3	92-1152	CD Ignition	1
*	681678	Cover & Terminal	1
4	614009	Plug - Spark	1
5	684049	CD Ignition (Incl. Ref. #3)	1
6	613208	Screw - Hex. Washer Hd.	2
7	93-4306	Spring - Compression	1
8	93-4312	Brake Plate Assembly	1
9	92-9698	Screw - Shoulder	1
10	614702	Screw	1

Ref. No.	Part No.	Description	No. Used
11	3290-459	Rivet - Plastic	2
12	92-2925	Strap - Insulation	1
13	60-9010	Strap - Ground	1
14	92-1156	Wire - Brake Switch Lead	1
15	53-4690	Stop - Ground Strap	1
16	12-5450	Screw - Thread Forming	1
17	14-6009	Mounting Plate	1
18	614654	Plate - Muffler	1
19	607601	Screw	4
20	93-4343	Baffle	1
21	609471	Screw	3
22	614674	Cover - Muffler	1

 \*Not Illustrated

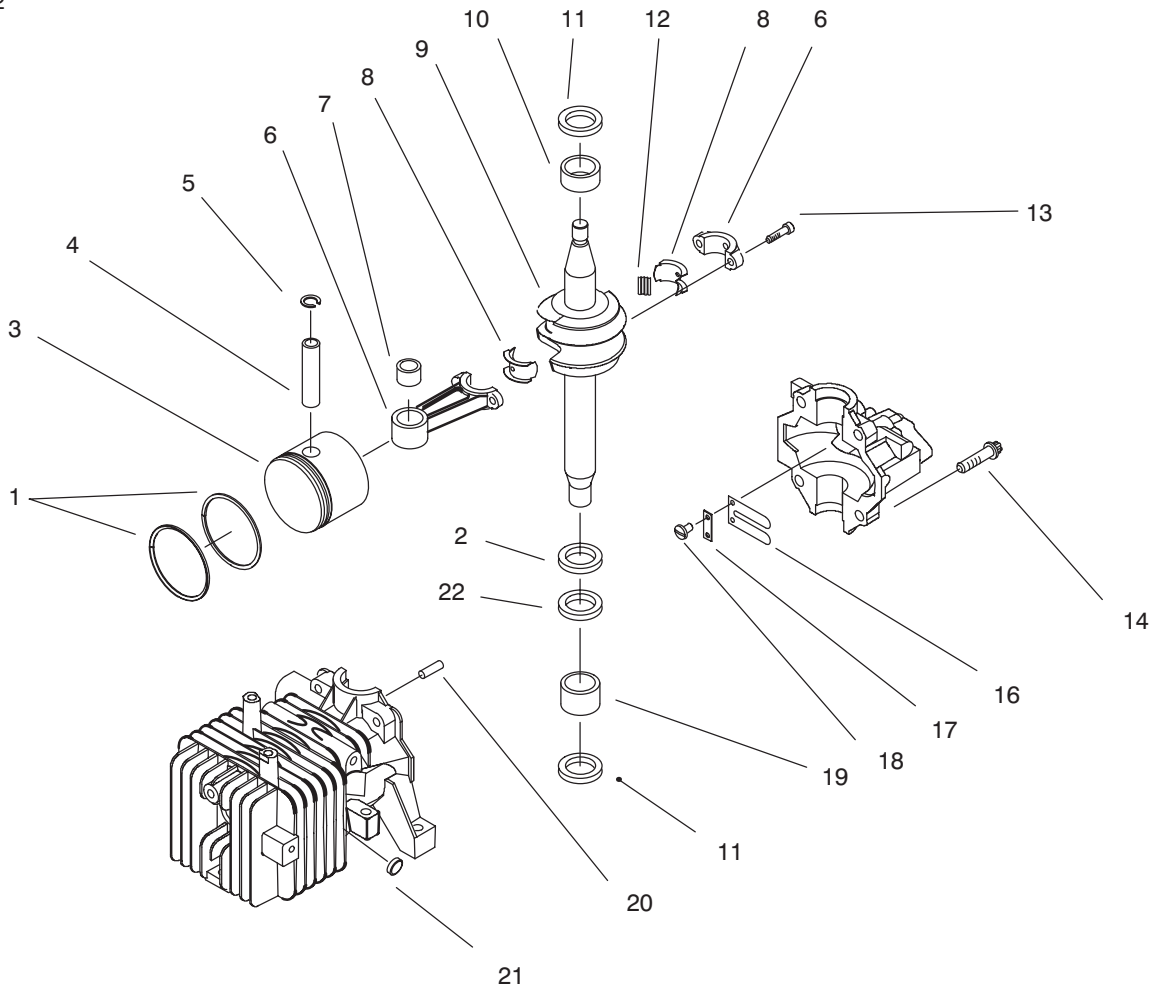

C-2500


**ENGINE ASSEMBLY (Continued)**  
**(Serial No. 6908966 & Up Model No. 10227 Only)**  
**(Serial No. 6900001 & Up Model No. 10304 Only)**

Ref. No.	Part No.	Description	No. Used
1	681737	Set - Ring	1
2	252-76	Bearing - Thrust	1
3	92-4923	Piston & Ring Set	1
*	92-4925	Piston & Connecting Rod (Incl. Ref. #1-8, 12, & 13)	1
4	606608	Pin - Wrist	1
5	303712	Ring - Retaining	2
6	92-4921	Connecting Rod Assembly (Incl. Ref. #6-8, 12, & 13)	1
7	92-4927	Bearing	1
8	677982	Liner - Split (Set of 2)	1
9	94-5713	Crankshaft	1
10	681830	Bearing - Upper Main	1

Ref. No.	Part No.	Description	No. Used
11	611396	Seal - Oil	2
12	683911	Bearing - Needle	1
13	611393	Screw - Hex. Hd.	2
14	614636	Screw - Torx. Washer Hd.	4
16	602588	Reed - Carburetor	1
17	602587	Reed - Backup Plate	1
18	612872	Screw	2
19	681831	Bearing - Needle	1
20	609629	Dowel	1
21	609123	Plug - Core	4
22	252-80	Washer - Thrust	1
*	610372	Sealer	1

 \*Not Illustrated



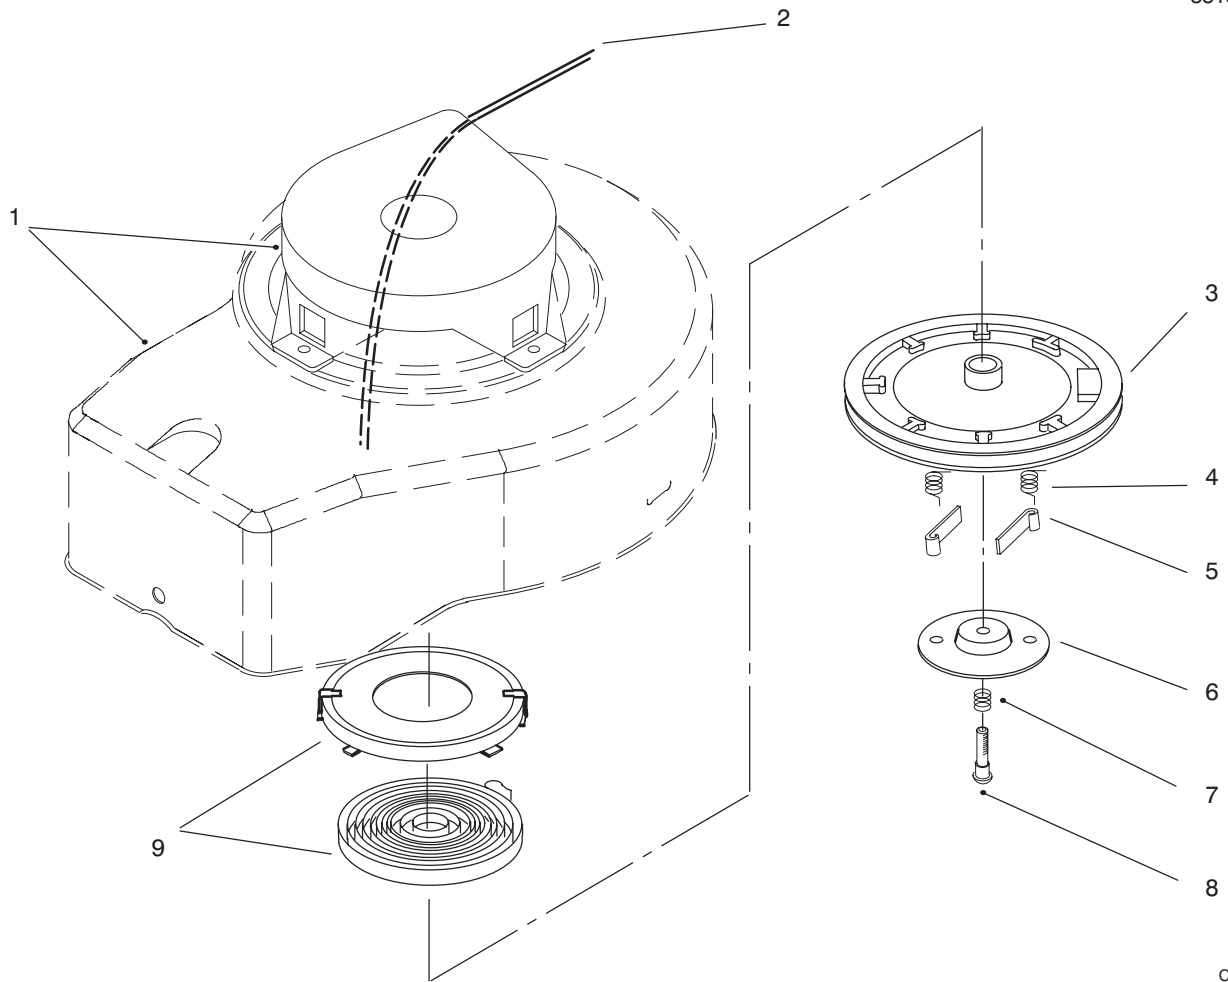


C-1309

## RECOIL STARTER ASSEMBLY

 Ref. No.	Part No.	Description	No. Used
1	93-4304	Housing Assembly	1
2	92-4928	Rope - Starter	1
3	92-4929	Pulley Assembly	1
4	92-4930	Spring - Dog	2
5	92-4931	Dog	2

Ref. No.	Part No.	Description	No. Used
6	92-9692	Retainer	1
7	92-4933	Screw	1
8	92-4934	Spring	1
9	92-4935	Spring Keeper Assembly	1

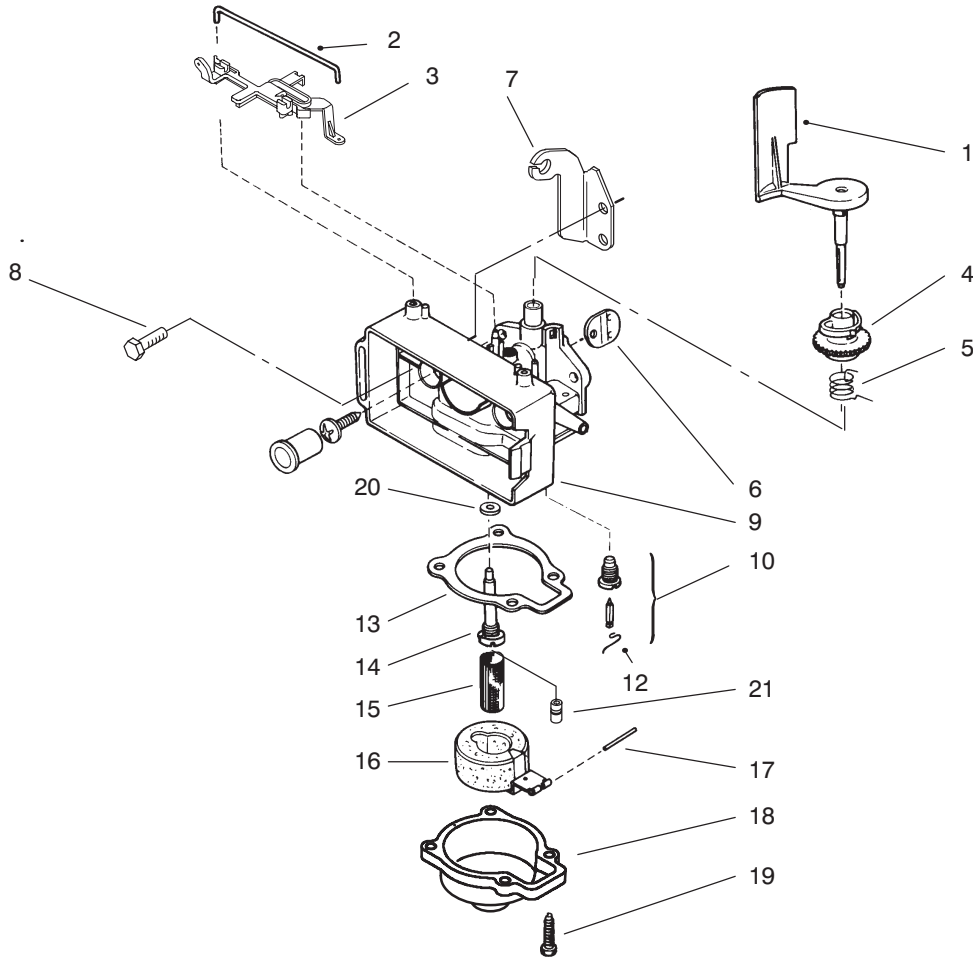

C-2130A

## CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	92-6376	Air Vane & Shaft	1	12	603145	Spring	1
2	610165	Retainer - Speed Control	1	13	602850	Gasket	1
3	93-1225	Lever - Speed Adjust	1	14	92-6371	Nozzle	1
4	610834	Collar - Air Vane	1	15	611071	Filter - Fuel	1
5	92-4944	Spring - Governor	1	16	678113	Float & Arm Assembly	1
6	92-6373	Disc - Throttle	1	17	92-6389	Pin	1
7	92-4949	Bracket - Throttle Control	1	18	92-9691	Float Chamber	1
8	613269	Screw	2	19	608850	Screw	4
9	93-4324	Carburetor Body	1	20	612383	Washer	1
10	92-9697	Kit - Float Valve, Body & Seat (Incl. Ref. #12)	1	21	92-6370	Main Jet	1
				*	92-6385	Jet - High Altitude	1
				*	93-4331	Carburetor Assembly	1

\*Not Illustrated

# LAWN-BOY PART NUMBER INDEX

3318-492

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
130743	Nut	9	2	1	614654	Plate - Muffler	11	18	1
303712	Ring - Retaining	12	5	2	614654	Plate - Muffler	13	18	1
303712	Ring - Retaining	14	5	2	614668	Cover - Gear Case	5	2	1
316959	Washer - Lock	9	9	1	614669	Pulley - Half	5	12	2
602587	Reed - Backup Plate	12	17	1	614671	Cover - Drive	4	9	1
602587	Reed - Backup Plate	14	17	1	614672	Bolt - Shoulder	1	21	4
602588	Reed - Carburetor	12	16	1	614672	Bolt - Shoulder Height Adj.	2	21	2
602588	Reed - Carburetor	14	16	1	614673	Handle Section - Lower	8	19	1
602850	Gasket	16	13	1	614674	Cover - Muffler	11	22	1
603145	Spring	16	12	1	614674	Cover - Muffler	13	22	1
603164	Nut - Blade	7	18	1	614677	Screw - Sem Thr'd Form	2	9	2
605120	Grommet	4	5	1	614677	Screw - Sems Thr'd Form	1	9	2
606608	Pin - Wrist	12	4	1	614681	Baffle	11	20	1
606608	Pin - Wrist	14	4	1	614682	Knob - Cover Plate	1	7	1
607199	Key	9	6	1	614682	Knob - Cover Plate	2	7	1
607560	Plate - Cover	3	14	1	614687	Spring Arm Ass'y - Front	1	22	2
607560	Plate - Cover	4	14	1	614687	Spring Arm Ass'y - Front	2	22	2
607601	Screw	11	19	4	614696	Shaft - Intermediate	5	4	1
607601	Screw	13	19	4	614697	Screw - Handle	8	2	2
608850	Screw	16	19	4	614699	Screw	9	1	3
609123	Plug - Core	12	21	4	614702	Screw	9	7	4
609123	Plug - Core	14	21	4	614702	Screw	11	10	1
609471	Screw	11	21	3	614702	Screw	13	10	1
609471	Screw	13	21	3	677525	Plate & Collar Assembly	7	1	1
609482	Screw	10	2	2	677982	Liner - Split (Set of 2)	12	8	1
609493	Element - Filter Air	10	5	1	677982	Liner - Split (Set of 2)	14	8	1
609629	Dowel	12	20	1	678113	Float & Arm Assembly	16	16	1
609629	Dowel	14	20	1	681678	Cover & Terminal	11	*	1
610165	Retainer - Speed Control	16	2	1	681678	Cover & Terminal	13	*	1
610358	Nut - Lock	6	13	2	681737	Set - Ring	12	1	1
610372	Sealer	12	*	1	681737	Set - Ring	14	1	1
610372	Sealer	14	*	1	681830	Bearing - Upper Main	12	10	1
610383	Retainer - Filter	10	3	1	681830	Bearing - Upper Main	14	10	1
610834	Collar - Air Vane	16	4	1	681831	Bearing - Needle	12	19	1
611071	Filter - Fuel	16	15	1	681831	Bearing - Needle	14	19	1
611393	Screw - Hex. Hd.	12	13	2	683911	Bearing - Needle	12	12	1
611393	Screw - Hex. Hd.	14	13	2	683911	Bearing - Needle	14	12	1
611396	Seal - Oil	12	11	2	684049	CD Ignition	11	5	1
611396	Seal - Oil	14	11	2	684049	CD Ignition	13	5	1
612383	Washer	16	20	1	684725	Cylinder & Crankcase Ass'y	12	*	1
612543	Blade - 21	7	16	1	684743	Flywheel	9	4	1
612782	Line - Gas	7	22	1	684776	Wheel & Tire Ass'y 6	2	19	2
612824	Clip - Rope Insert	8	21	1	684776	Wheel - Tire Assembly 6	1	19	2
612825	Handle - Starter	8	14	1	684777	Wheel & Tire Ass'y 8	1	2	2
612872	Screw	12	18	2	12-5450	Screw - Thread Forming	11	16	1
612872	Screw	14	18	2	12-5450	Screw - Thread Forming	13	16	1
613208	Screw - Hex. Washer Hd.	11	6	2	14-6009	Mounting Plate	11	17	1
613208	Screw - Hex. Washer Hd.	13	6	2	14-6009	Mounting Plate	13	17	1
613227	Screw - Set	7	15	1	16-4359	Housing Assembly	1	5	1
613269	Screw	16	8	2	16-4369	Housing Assembly	4	17	1
613765	Nut - Cage	1	11	1	36-4780	Washer - Thrust	5	17	2
613765	Nut - Cage	2	11	1	36-4791	Washer	5	5	2
614009	Plug - Spark	11	4	1	38-7820	Bearing - Ball	5	15	1
614009	Plug - Spark	13	4	1	39-5770	Decal - Danger	3	15	1
614243	Knob	8	3	2	39-5770	Decal - Danger	4	15	1
614426	Washer - Stepped	6	19	2	40-1940	Washer	1	18	4
614447	Spacer - Axle Shaft	6	9	2	40-1940	Washer	2	18	2
614596	Gear 34 Tooth	5	18	1	44-2750	Body - Primer	7	20	1
614636	Screw - Torx. Washer Hd.	12	14	4	44-3174	Hose - Primer	10	7	1
614636	Screw - Torx. Washer Hd.	14	14	4	44-3174	Hose - Primer	7	21	1
614637	Bracket - Wheel Height Adj.	1	17	4	49-2040	Screw - Hex Hd.	4	7	2
614637	Bracket - Wheel Height Adj.	2	17	2	53-4690	Stop - Ground Strap	11	15	1
614640	Hub - Starter	9	3	1	53-4690	Stop - Ground Strap	13	15	1
614650	Bolt - Shoulder	1	1	2	55-3760	Pinion - 15 Tooth	5	3	1

\*Not Illustrated

# LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
60-8750	Bushing	5 6 2	92-4949	Bracket - Throttle Control	16 7 1
60-8850	Bushing - Output	5 9 2	92-5412	Stop - Pivot	8 8 1
60-8890	Gear - Bevel Pinion	5 16 1	92-5412	Stop - Pivot	8 8 2
60-9010	Strap - Ground	11 13 1	92-6370	Main Jet	16 21 1
60-9010	Strap - Ground	13 13 1	92-6371	Nozzle	16 14 1
62-6660	Spacer	5 11 1	92-6373	Disc - Throttle	16 6 1
65-2720	Ring - Retaining	6 3 4	92-6375	Crankshaft	12 9 1
65-4710	Ring - Friction	6 7 2	92-6376	Air Vane & Shaft	16 1 1
65-4720	Spring - Compression	6 17 2	92-6380	Tank & Shroud Assembly	7 5 1
65-4730	Washer - Thrust	6 14 2	92-6385	Jet - High Altitude	16 * 1
65-4740	Washer - Thrust Keyed	6 4 4	92-6389	Pin	16 17 1
65-4750	Gear - Pinion	6 16 2	92-6542	Pulley - Engine	7 2 1
65-4760	Washer	6 15 2	92-7723	Bracket - Handle R.H.	4 12 1
66-5370	Spring - Compression	11 7 1	92-7724	Bracket - Handle L.H.	4 3 1
66-5380	Brake Plate Assembly	11 8 1	92-7726	Cable - Traction	8 7 1
66-6040	Key - Rocking R.H.	6 * 1	92-7727	Gearcase	5 10 1
66-6050	Key - Rocking L.H.	6 5 1	92-7728	Guide - Transmission	4 6 1
66-7460	Bulb - Primer	7 19 1	92-7729	Anchor - Cable Upper	8 6 1
92-1001	Bail - SP Control	8 9 1	92-7731	Plate - Baffle	1 16 2
92-1004	Spring Arm Ass'y	6 12 2	92-7731	Plate - Baffle	2 16 2
92-1005	Spring Arm Assembly	1 3 2	92-7734	Cable - Throttle 2 Cycle	8 17 1
92-1008	Knob - Height Adjust	2 23 4	92-7735	Gear Case Assembly	4 4 1
92-1008	Knob - Height Adjust.	1 23 4	92-7738	Cable - Flywheel Brake	8 18 1
92-1042	Wheel & Tire Ass'y 8	6 2 2	92-7742	Bracket - Handle R.H.	1 6 1
92-1043	V-Belt	6 10 1	92-7743	Bracket - Handle L.H.	1 4 1
92-1057	Bolt - Shoulder	6 1 2	92-7746	Height Adj. Arm - Rear	6 8 2
92-1097	Decal - Discharge	3 16 1	92-8615	Applique - Shroud	7 12 1
92-1097	Decal - Discharge	4 16 1	92-8630	Plate - Mulch 21	1 8 1
92-1099	Bolt - Shoulder	1 20 2	92-8630	Plate - Mulch 21	2 8 1
92-1099	Bolt - Shoulder	2 20 2	92-8632	Washer	8 30 1
92-1152	CD Ignition	11 3 1	92-8647	Shield - Trailing	3 20 1
92-1152	CD Ignition	13 3 1	92-8647	Shield - Trailing	4 20 1
92-1156	Wire - Brake Switch Lead	11 14 1	92-9662	Screw - Phillips Hd.	4 8 1
92-1156	Wire - Brake Switch Lead	13 14 1	92-9691	Float Chamber	16 18 1
92-1624	Screw - Engine	7 3 3	92-9692	Retainer	15 6 1
92-1630	Fan - Mulching	7 17 1	92-9697	Kit - Float Valve, Body	16 10 1
92-1701	Rope - Stop	7 9 1	92-9698	Screw - Shoulder	11 9 1
92-2914	Decal - H.O.C.	3 2 2	92-9698	Screw - Shoulder	13 9 1
92-2914	Decal - H.O.C.	4 2 2	93-0239	Shaft - Output	5 7 1
92-2915	Decal - H.O.C.	3 1 2	93-0294	Decal - Recoil	7 * 1
92-2915	Decal - H.O.C.	4 1 2	93-0295	Decal - Recoil	7 10 1
92-2925	Strap - Insulation	11 12 1	93-1216	Base - Shroud	9 5 1
92-2925	Strap - Insulation	13 12 1	93-1221	Shield - Carburetor	10 10 1
92-4881	Plate - Height Adjust	1 14 2	93-1225	Lever - Speed Adjust	16 3 1
92-4881	Plate - Height Adjust	2 14 2	93-1231	Cover - Air Cleaner	10 4 1
92-4890	Washer	1 15 4	93-1233	Gasket - Exhaust	11 2 1
92-4890	Washer	2 15 2	93-1233	Gasket - Exhaust	13 2 1
92-4921	Connecting Rod Assembly	12 6 1	93-3653	Handle - Guard	8 31 1
92-4921	Connecting Rod Assembly	14 6 1	93-3653	Handle - Guard	8 31 2
92-4923	Piston & Ring Set	12 3 1	93-3660	Fuel/Oil Cap Assembly	7 7 1
92-4923	Piston & Ring Set	14 3 1	93-4184	Bail - Flywheel Brake	8 12 1
92-4925	Piston & Connecting Rod	12 * 1	93-4185	Handle - Section Upper	8 13 1
92-4925	Piston & Connecting Rod	14 * 1	93-4196	Shield - Grass	7 23 1
92-4927	Bearing	12 7 1	93-4302	Screw - Sems	7 8 3
92-4927	Bearing	14 7 1	93-4304	Housing Assembly	15 1 1
92-4928	Rope - Starter	15 2 1	93-4304	Shroud Assembly	9 8 1
92-4929	Pulley Assembly	15 3 1	93-4306	Spring - Compression	7 13 1
92-4930	Spring - Dog	15 4 2	93-4306	Spring - Compression	13 7 1
92-4931	Dog	15 5 2	93-4312	Brake Plate Assembly	13 8 1
92-4933	Screw	15 7 1	93-4320	Shield - Fuel	10 6 1
92-4934	Spring	15 8 1	93-4324	Carburetor Body	16 9 1
92-4935	Spring Keeper Assembly	15 9 1	93-4331	Carburetor Assembly	16 * 1
92-4944	Spring - Governor	16 5 1	93-4331	Carburetor Assembly	10 8 1
92-4948	Gasket - Carburetor	10 9 2	93-4343	Baffle	13 20 1

\*Not Illustrated

# LAWN-BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref.			Part No.	Description	Pg. Ref.		
		No.	No.	Qty.			No.	No.	Qty.
93-7250	Decal - Warning	3	10	1	321-49	Screw - Hex Hd. Cap	8	5	1
93-7250	Decal - Warning	4	10	1	322-3	Screw - Hex Hd. Cap	3	21	4
93-7380	Anchor - Cable SP Lower	8	20	1	322-3	Screw - Hex Hd. Cap	4	21	6
93-7383	Guide - Rope	8	16	1	3256-24	Washer	5	13	1
94-1609	Cover - Wheel	6	18	2	3285-19	Pin - Groove	5	8	2
94-1610	Grommet - Plastic	1	10	2	3290-459	Rivet - Plastic	11	11	2
94-1610	Grommet - Plastic	2	10	2	3290-459	Rivet - Plastic	13	11	2
94-5713	Crankshaft	14	9	1	3296-5	Nut	5	14	1
94-5737	Short Block	11	1	1	3296-29	Nut - Lock	3	19	4
94-5737	Short Block	13	1	1	3296-29	Nut - Lock	4	19	6
252-76	Bearing - Thrust	14	2	1	3296-39	Nut - Lock	1	24	2
252-80	Washer - Thrust	14	22	1	3296-73	Nut - Lock	8	4	2
321-5	Screw - Hex Hd. Cap	8	15	1	32144-4	Screw - Taptite	5	1	4
321-48	Screw - Hex Hd. Cap	8	5	1	32144-85	Screw - Hex Hd.	6	11	2





